Portege

7010CT

BATTERY PACK REMOVAL



Battery lock
Refease leve

Battery Pack

Turn the computer upside down as shown.
 Push the **battery lock** to unfodi position.

Push the battery lock to unlock position.
 Side the battery release lever in the direction of the arrow.
 Pull the battery pack slightly forward and lift.

OPTIONAL PCMCIA CARD REMOVAL



Pull out the eject lever of the PC card to be removed.
 Slide the eject lever to the right until the PC card is out 4. Grasp the PC card and remove it.

EXPANSION MEMORY REMOVAL

it out



Expansion memory

 Remove two M2x3 black screws and remove the memory cover.

1. Turn the computer upside down

 Push the memory clips outward and pull the expansion memory out of the connector on a 45 degree angle.

HDD REMOVAL



M2x14 black screws HDD cove

1. Turn the computer upside down

 Remove one MPx14 black screw securing the HDD cover and lift the cover out.

Portege

7010CT

HDD REMOVAL



- 3. Graso the plastic handle and pull it towards your left to disconnect the HDD
- 4. Lift up the plastic handle to remove the HDD CAUTION: Be very careful not to press on the TOP or

BOTTOM of the HDD. Pressure can destroy data or damage the drive.

KEYROADD DEMOVA



Keyboard cable

- 4. Lift the front of the keyboard pulling the keyboard forward until the keyboard cable is exposed
- 5. Disconnect the keyboard cable from PJ10 on the system board and remove the keyboard

CLATCH

KEYBOARD REMOVA

- Keyboard
- Keyboard holder 1. Turn the computer right side up and open the display. 2. Unlatch the Keyboard holder at the five points
- starting from the front side 3. Pull up on the front of the keyboard holder to release the latches along the back and lift the holde

TOP COVER REMOVA

screw SCHOOL

- Dodling connector cover M2x14 black screvs
- 1. Turn the computer upside down Remove two screws securing the docking connector. cover and lift the cover out

- 2 M2v14 Nack screws

3. Remove the following screws securing the bottom cover: - 7 M2,5x6 black screws - 2 M2x6 black screws

TOSHIB Tough Enough for Today's World.

Portege

7010CT

TOP COVER REMOVAL



4. Turn the computer right side up and open the cover.
5. Use a tweezer to gently remove the LCD cable from PJ3 and the FL inverter cable from PJ4.
6. Disconnect the membrane switch cable from PJ9.
7. Remove one MV4. Bitter system.

 Lift up the front of the top cover and tilt the display back until it lies fast.
 Disconnect the LED/Speaker cable to separate the top cover with display assembly from the bottom cover.

RTC BATTERY REMOVAL



Disconnect the RTC battery cable from PJH2.
 Remove the tape securing the battery cable.
 Lift out the RTC battery.

SYSTEM BOARD DEMOVAL



M2x6 screw LED board

1. Remove one M2x6 black screw securing the

LEB board and disconnect the board from PJ32

Portege

7010CT

SYSTEM BOARD REMOVAL



M2x6 blad screwwith

M2x3 brass screws M2x6 black screw 2. Remove 13 serews securing the system hoped . 6 M2x4 brass screws - 2 M2x6 black screws with plastic spacers - 3 M2x6 black screw . 2 M2v3 brass screw

DC CARD SLOT DEMOVAL



PC card slo 1. Disconnect the PC card slot from PJ21 on the system System Board



Sound jack cover 3. Remove the sound tack cover in the direction of

the arrow 4. Lift out the system board. 5. Disconnect the DC IN cable from PJ802 on the back of the system board

MODEM REMOVAL



1. Grasp the modern. 2. Pull the modern and disconnect it from PJT on the system board

Lift the insulator off the modern board 4. Disconned the moderniack cable from PJ110 on

Portege 7010CT

CPU REMOVAL



Disconnect the CPU board from the system board.
 CAUTION: Grip the CPU eventy on both sides of the

Gip the CPU eventy on both sides of the connector, Do BNT apply excessive pressure to the connectors. List straight up to partially disconnect the CPU. A malt langue on the CPU module extends beyond the other side of the system board so be caused in cit to pull up too far. Slowly thirst up the outside edge of the CPU board to nerower it.

I/O BOARD REMOVAL



 Remove six M2x4 silver screws securing the I/O board plate.
 Pull out the I/O board plate.
 Disconnect the I/O board from the system board.

7010CT





- 1. Remove four plastic seals at the corners of the display assembly 2. Remove four M2,5x5 flat head silver screws
- 3. There are 16 latches securing the display masi Carefully insert your fingers between the display mask and the LCD panel and pry open the latches starting from the top two latches, to the four latches on the right and left sides, ending with the six bottomilatches

FL INVERTER AND LCD REMOVAL



- 1. Remove one M2x5 flat head brass screw securing FL inverter board 2. Lift up the FL inverter board and disconnect
- the FL cable from CN2 and the FL inverter cable 3. Remove three M2x4 flat head brass screws
- securing the LCD module. 4. Carefully rotate the LCD module from right to left
 - 5. Disconnect the LCD cable from the LCD module and remove the LCB tom the computer