

6A815EP

User's Manual Version 1.0

The information presented in this publication has been made carefully for reliability; however, no responsibility is assumed for inaccuracies. Specifications are subject to change without notice.

IBM, PC/AT, and PC/XT are trademarks of International Business Machines Corporation.

Pentium is a trademark of Intel Corporation

AWARD is a registered trademark of Phoenix Software Inc.

MS-DOS and WINDOWS NT are registered trademarks of Microsoft Corporation.

Trademarks and/or registered trademarks are the properties of their respective owners.

Table of Contents

Chapter 1	Introduction	1
	How this manual is organized	1
	Package checklist	2
Chapter 2	Features	3
	Features of the mainboard	3
	The mainboard layout	6
Chapter 3	Installation	8
	System Installation Setups	10
	Static Electricity Precaution	10
	Jumper Settings	11
	System Memory (DIMM modules)	13
	DIMM Memory Installation	14
	CPU Installation	16
	Clearance Requirements	17
	Fan Exhaust	17
	External Connectors	18
Chapter 4	BIOS Setup	27