

6M815E

User's Manual Version 1.0

The information presented in this publication has been carefully prepared to ensure reliability ; however, no responsibility is assumed for inaccuracies. Specifications are subject to change without notice.

IBM, PC/AT, and PC/XT are trademarks of International Business Machines Corporation.

Socket370 is a trademark of Intel Corporation

AWARD is a registered trademark of Phoenix Software Inc.

MS-DOS and WINDOWS NT are registered trademarks of Microsoft Corporation.

Trademarks and/or registered trademarks are the properties of their respective owners.

Table of Contents

Introduction

1. Motherboard Description

1.1 Features	
1.1.1 Hardware	2
1.1.2 Software	5
1.1.3 Attachments	5
1.2 Motherboard Installation	
1.2.1 Layout of Motherboard	6
1.3 Motherboard Connectors	
1.3.1 Front Panel Connectors(PANEL1)	8
1.3.2 Floppy Disk Connector(FDC1)	9
1.3.3 Hard Disk Connectors(IDE1/IDE2)	9
1.3.4 ATX 20-pin Power Connector(PW1)	10
1.3.5 Infrared Connector(IR1)	10
1.4 Back Panel Connectors	
1.4.1 PS/2 Mouse/Keyboard CONN.	11
1.4.2 USB Connectors	11
1.4.3 VGA Interface Connector(VGA)	11
1.5 Serial and Parallel Interface ports	13
1.6 CPU Installation	
1.6.1 CPU Installation Product(Socket 370)	15
1.6.2 CPU Frequency Selection(JCLK1)	16
1.7 Jumper Setting	
1.7.1 CPU Fan Connector(FAN1/2/3)	17
1.7.2 Wake-On-Modem Header(WOM1)	18
1.7.3 Wake-On-LAN Header(WOL1)	18
1.7.4 CMOS Function Select(CMOS1)	18
1.7.5 SPEAKER Selection(WATCH1)	19
1.7.6 SBLINK Connector	19
1.7.7 Chassic Intrusion Connector(CHASSIC1)	19
1.7.8 AC97 Serial data out(STRAP1)	19

Table of Contents

1.8	DRAM Installation	
1.8.1	DIMM	20
1.8.2	How to install a DIMM Module	20
1.9	Audio Subsystem	
1.9.1	CD-Audio-IN Connectors(CDIN1/CDIN2)	21
1.10	Smart Panel Onboard Connector (option)	
1.10.1	Second BIOS Connector(FWH2)	23
1.10.2	Parallel Port Connector(LPT2)	23
1.10.3	GPIO Port Connector(JGP1)	23

2. BIOS Setup

2.1	Main Menu	27
2.2	Standard CMOS Features	30
2.3	Advanced BIOS Features	33
2.4	Advanced Chipset Features	37
2.5	Integrated Peripherals	40
2.6	Power Management Setup	46
2.7	PnP/PCI Configurations	51
2.8	PC Health Status	55
2.9	Frequency/Voltage Control	57
2.10	Load Fail-Safe Defaults	58
2.11	Load Optimized Defaults	59
2.12	Set Supervisor/user Password	60
2.13	Save & Exit Setup	62
2.14	Exit Without Saving	63