

3. Driver Installation

Introduction

There are motherboard drivers and utilities included in ACORP Bonus CD disc. You don't need to install all of them in order to boot your system. But after you finish the hardware installation, you have to install your operation system first (such as windows 98) before you can install any drivers or utilities. Please refer to your operation system installation guide.

Note: Please follow recommended procedure to install Windows 95 and Windows 98.

3.1 Auto-run Menu

You can use the auto-run menu of Bonus CD disc.
Choose the utility or driver and select model name.



3.2 Installing VIA 4 in 1 Driver


You can install the VIA 4 in 1 driver (IDE Bus master (For Windows NT use), VIA ATAPI Vendor Support Driver, VIA AGP, IRQ Routing Driver (For Windows 98 use), VIA Registry (INF) Driver) from the Bonus Pack CD disc auto-run menu.




(1)
Click
"VIA Driver" Item.




(2)
Click
"Chipset_driver" Item.

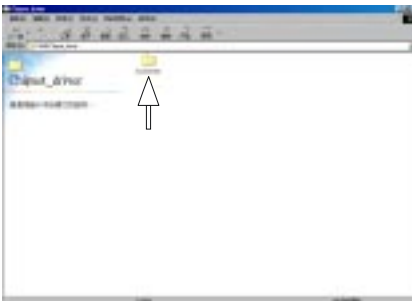

(3)
Click
"4in1432v(a)" Item.

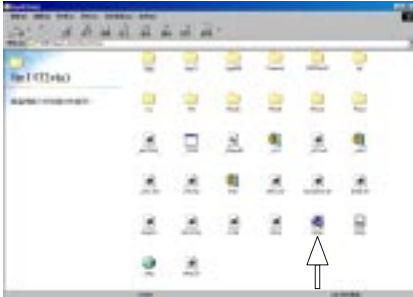

(2)
Click
"Setup" Item.

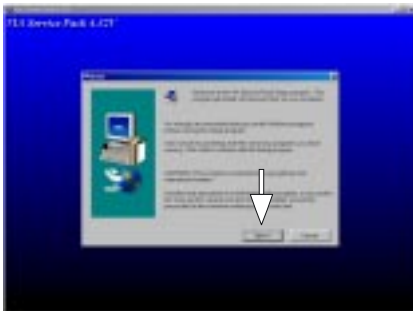

(5)
Click "Next".

Note: Installing this Bus Master IDE driver may cause Suspend to Hard Drive failure.

3.3 Installing Audio Driver

This motherboard comes with an AC97 CODEC and the sound controller is in VIA South Bridge chipset. You can find the audio driver from the Bonus Pack CD disc auto-run menu.



(1)
Click
"VIA Driver" Item.



(2)
Click
"Audio_driver" Item.



(3)
Click
"Via686A&B" Item.



(4)
Click "Setup".



(5)