

# 694TA

## User's Manual Version 1.0

The information presented in this publication has been made carefully for reliability; however, no responsibility is assumed for inaccuracies. Specifications are subject to change without notice.

IBM, PC/AT, and PC/XT are trademarks of International Business Machines Corporation.

Socket370 is a trademark of Intel Corporation

AWARD is a registered trademark of Phoenix Software Inc.

MS-DOS and WINDOWS NT are registered trademarks of Microsoft Corporation.

**Trademarks and/or registered trademarks are the properties of their respective owners.**

## Table of Contents

### Introduction

## 1. Motherboard Description

|  |      |
|--|------|
| 1.1 Features                               |      |
| 1.1.1 Hardware                             | 1-2  |
| 1.1.2 Software                             | 1-4  |
| 1.1.3 Attachments                          | 1-4  |
| 1.2 Motherboard Installation               |      |
| 1.2.1 Motherboard Map                      | 1-5  |
| 1.2.2 Motherboard Layout                   | 1-6  |
| 1.3 Motherboard Connectors                 |      |
| 1.3.1 Front Panel Connectors(PANEL1)       | 1-8  |
| 1.3.2 Floppy Disk Connector(FDC1)          | 1-9  |
| 1.3.3 Hard Disk Connectors(IDE1/IDE2)      | 1-9  |
| 1.3.4 ATX 20-pin Power Connector(PW1)      | 1-10 |
| 1.3.5 Infrared Connector(IR1)              | 1-10 |
| 1.4 Back Panel Connectors                  |      |
| 1.4.1 PS/2 Mouse/Keyboard CONN.            | 1-11 |
| 1.4.2 USB Connectors (USB1/USB2)           | 1-11 |
| 1.5 Serial and Parallel Interface ports    | 1-13 |
| 1.6 CPU Installation                       |      |
| 1.6.1 CPU Installation Product(Socket 370) | 1-15 |
| 1.6.2 CPU Clock Frequency Setting(SP-J4)   | 1-16 |
| 1.7 Jumper Setting                         |      |
| 1.7.1 CPU Fan Connector(FAN1/2)            | 1-17 |
| 1.7.2 Wake-On-Modem Header(WOM1)           | 1-18 |
| 1.7.3 Wake-On-LAN Header(WOL1)             | 1-18 |
| 1.7.4 AMR Set Function(J1)                 | 1-18 |
| 1.7.5 CMOS Function Selection(CMOS1)       | 1-18 |
| 1.8 DRAM Installation                      |      |
| 1.8.1 DIMM                                 | 1-19 |
| 1.8.2 How to install a DIMM Module         | 1-19 |

## Table of Contents

|  |      |
|--|------|
| 1.9 Audio Subsystem                                |      |
| 1.9.1 CD-Audio-IN Connectors(CDIN1/CDIN2)          | 1-20 |
| 1.10 Smart Panel Onboard Connector <b>(option)</b> |      |
| 1.10.1 Port 80 Debug Function(SP-J6)               | 1-22 |
| 1.10.2 Second BIOS Connector(SP-J2)                | 1-22 |
| 1.10.3 Suspend Mode/Voice Debug(SP-J3)             | 1-22 |
| 1.10.4 AUX LINE(SP-J5)                             | 1-23 |
| 1.10.5 FSB Adjust(SP-J4)                           | 1-23 |
| 1.10.6 Front COM2 Header Connector (SP-J7)         | 1-23 |

## 2. BIOS Setup

|                                   |      |
|-----------------------------------|------|
| 2.1 Main Menu                     | 2-4  |
| 2.2 Standard CMOS Features        | 2-7  |
| 2.3 Advanced BIOS Features        | 2-10 |
| 2.4 Advanced Chipset Features     | 2-14 |
| 2.5 Integrated Peripherals        | 2-19 |
| 2.6 Power Management Setup        | 2-24 |
| 2.7 PnP/PCI Configurations        | 2-30 |
| 2.8 PC Health Status              | 2-34 |
| 2.9 Frequency/Voltage Control     | 2-35 |
| 2.10 Load Fail-Safe Defaults      | 2-36 |
| 2.11 Load Optimized Defaults      | 2-37 |
| 2.12 Set Supervisor/user Password | 2-38 |
| 2.13 Save & Exit Setup            | 2-40 |
| 2.14 Exit Without Saving          | 2-41 |

## 3. Driver Installation

|                                  |     |
|----------------------------------|-----|
| 3.1 Main Menu                    | 3-1 |
| 3.2 Installing VIA 4 in 1 Driver | 3-2 |
| 3.3 Installing Audio Driver      | 3-3 |