
IMPORTANT UPDATE INFORMATION

- 1. JP3 (Page 3-16)
 - JP3 is disabled and it is not installed on the mainboard.

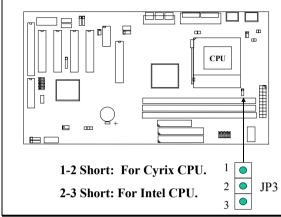

2. SW2: (Page 3-18)

The setting of the CPU clock ratio is updated. Please refer to the following table for the updated setting:

| CPU Clock Ratio and its frequency | | | | SW2 | | | | |
|-----------------------------------|-------|--------|--------|-------|-------|-------|-------|--|
| Ratio | 66MHz | 100MHz | 133MHz | SW2-1 | SW2-2 | SW2-3 | SW2-4 | |
| 3X | 200 | 300 | 400 | ON | OFF | ON | ON | |
| 3.5X | 233 | 350 | 467 | OFF | OFF | ON | ON | |
| 4X | 266 | 400 | 533 | ON | ON | OFF | ON | |
| 4.5X | 300 | 450 | 600 | OFF | ON | OFF | ON | |
| 5X | 333 | 500 | 667 | ON | OFF | OFF | ON | |
| 5.5X | 366 | 550 | 733 | OFF | OFF | OFF | ON | |
| 6X | 400 | 600 | 800 | ON | ON | ON | OFF | |
| 6.5X | 433 | 650 | 866 | OFF | ON | ON | OFF | |
| 7X | 466 | 700 | 933 | ON | OFF | ON | OFF | |
| 7.5X | 500 | 750 | 1000 | OFF | OFF | ON | OFF | |
| 8X | 533 | 800 | | ON | ON | OFF | OFF | |


Note: You don't need to make the setting on SW2 most of the time because the CPU itself will decide the clock ratio automatically

DOC NO. UM-694TX-L1

IMPORTANT UPDATE INFORMATION

3. JP3 (Page 3-16)

JP3 is disabled and it is not installed on the mainboard.

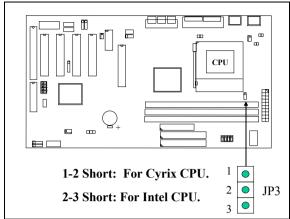

4. SW2: (Page 3-18)

The setting of the CPU clock ratio is updated. Please refer to the following table for the updated setting:

| Tonowing table for the updated setting. | | | | | | | | | | | |
|---|------------|-------------|----------|-------|-------|-------|-------|--|--|--|--|
| CPU C | Clock Rati | o and its f | requency | SW2 | | | | | | | |
| Ratio | 66MHz | 100MHz | 133MHz | SW2-1 | SW2-2 | SW2-3 | SW2-4 | | | | |
| 3X | 200 | 300 | 400 | ON | OFF | ON | ON | | | | |
| 3.5X | 233 | 350 | 467 | OFF | OFF | ON | ON | | | | |
| 4X | 266 | 400 | 533 | ON | ON | OFF | ON | | | | |
| 4.5X | 300 | 450 | 600 | OFF | ON | OFF | ON | | | | |
| 5X | 333 | 500 | 667 | ON | OFF | OFF | ON | | | | |
| 5.5X | 366 | 550 | 733 | OFF | OFF | OFF | ON | | | | |
| 6X | 400 | 600 | 800 | ON | ON | ON | OFF | | | | |
| 6.5X | 433 | 650 | 866 | OFF | ON | ON | OFF | | | | |
| 7X | 466 | 700 | 933 | ON | OFF | ON | OFF | | | | |
| 7.5X | 500 | 750 | 1000 | OFF | OFF | ON | OFF | | | | |
| 8X | 533 | 800 | | ON | ON | OFF | OFF | | | | |

Note: You don't need to make the setting on SW2 most of the time because the CPU itself will decide the clock ratio automatically DOC NO. UM-694TX-L1

2.X 3.X

•

2.X