


Quick Connector and Jumper Reference

CN1: WOL (Wake-on-LAN) Conn.




CN4: Creative's SB-Link connector (links AWE64D with PCI Bus Mastering)

CN5: Infrared connector

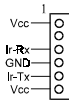

CN6: Front panel connector set

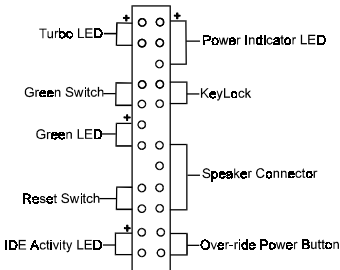

CN11: Power supply connector

CN15: FANII connector


CN16: CPU temperature jumper

FAN1/FAN2: System/CPU cooling fan connector



JP2: On board Audio jumper

1~2 : Enabled
2~3 : Disabled

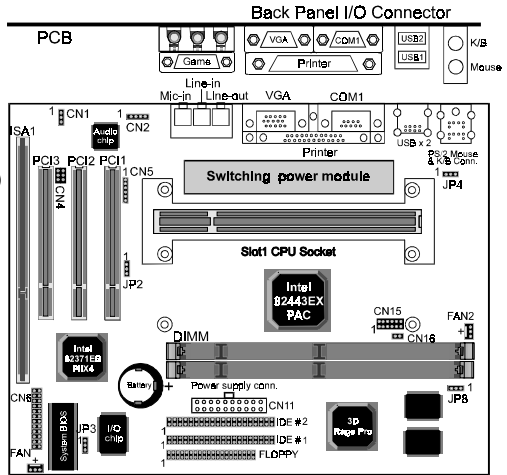

SeePU (Jumper free CPU installation) setting table

| CPU Type | CPU Speed | | |
|----------------------|----------------|-----------------|----------------|
| | External Clock | Frequency Ratio | Internal Clock |
| Pentium II processor | 66 | 3.5 | 233 |
| | | 4 | 266 |
| | | 4.5 | 300 |
| | | 5 | 333 |

JP3: Clear CMOS data jumper

1~2 : Normal (default)
2~3 : Clear CMOS data

JP4: Power-on by keyboard jumper

1~2 : Disabled (default)
2~3 : Enabled

JP8: On board VGA jumper

1~2 : Enabled
2~3 : Disabled