



6SIVS Quick Reference Jumper Setting

3.29.2001 Layout_Version:S103 XX0 v.1

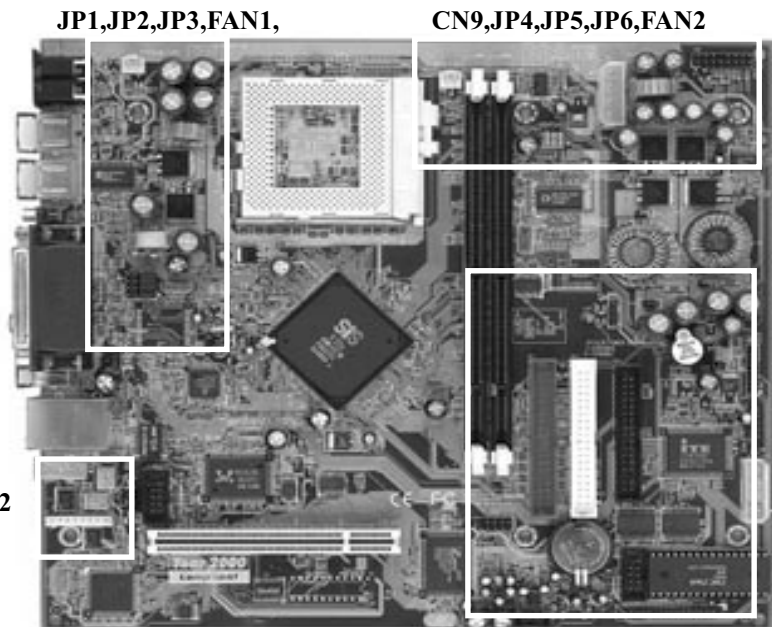

CN5,CN6,CN8,CN10,
CN12,IR1,JP7,JP8,
COM2

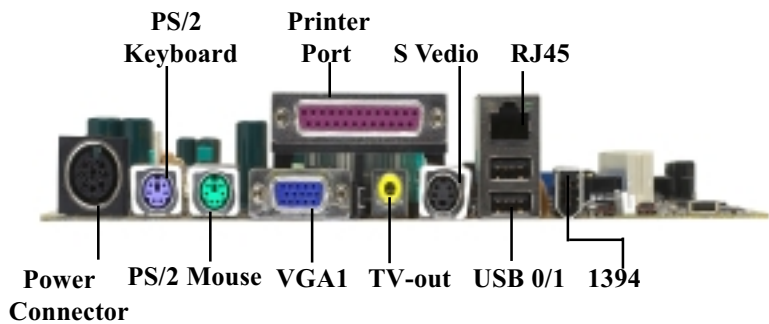

JP/CN	Function	Jumper Setting/Connector												
JP1	Power On By Keyboard	1-2:Disable ;2-3:Enable												
JP2/JP7	Power On By USB 0/1 & 2/3	1-2:Disable ;2-3:Enable												
JP3	Clear CMOS Data	1-2:Normal(default);2-3:Clear CMOS Data												
JP4/JP5	External Clock Frequency	<table border="1"> <thead> <tr> <th>CPU</th> <th>JP4</th> <th>JP5</th> </tr> </thead> <tbody> <tr> <td>Auto</td> <td>1~2</td> <td>1~2</td> </tr> <tr> <td>100MHz</td> <td>1~2</td> <td>2~3</td> </tr> <tr> <td>133MHz</td> <td>2~3</td> <td>2~3</td> </tr> </tbody> </table>	CPU	JP4	JP5	Auto	1~2	1~2	100MHz	1~2	2~3	133MHz	2~3	2~3
CPU	JP4	JP5												
Auto	1~2	1~2												
100MHz	1~2	2~3												
133MHz	2~3	2~3												
JP6	System Memory Asyn Setting	1-2:100MHz ;2-3:133MHz												
JP8	TV-out System Selector	1-2:NTSL ;2-3:PAL												
CN2	1394 Connector													
CN5	SPDIF-in/out Connector													
CN6	CD-ROM Audio in Connector													
CN8	IR Keyboard Connector													
CN9	Front Panel Connector													
CN10	Front Panel Audio Connector													
CN12	Back Panel Audio Connector													
COM2	COM 2 Header													
IR1	Infrared Connector													
FAN1/FAN2	CPU/System Cooling Fan Connectors													