



JP/CN	Function	Jumper Setting/Connector																		
JP1	Onboard Audio Selector	1-2: Enable; 2-3: Disable (default)																		
JP6	Clear CMOS Data	1-2: Default; 2-3: Clear CMOS																		
J2	IR (Infrared) Connector																			
J3	Chassis Intrusion Detection																			
CN2	PS/2 Mouse and Keyboard Ports																			
CN4	ATX Power Supply Connector																			
CN5	WOL (Wake On Lan) Connector																			
CN7	Auxiliary Audio In																			
CN8	CD-ROM Audio In																			
CN9	USB 2/3 Connector																			
CN10	Front Panel Connector																			
CN11	LTI-IIT Riser (Optional)																			
FAN1/FAN2	CPU/System Cooling Fan Connector																			
SW3	CPU System Bus Frequency Selector	<table border="1"> <tr> <td>ON</td> <td>SW3</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> </tr> <tr> <td>100MHz</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td></td> </tr> <tr> <td>133MHz</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td></td> </tr> </table>	ON	SW3	1	2	3	4	100MHz	OFF	ON	OFF	OFF		133MHz	OFF	OFF	OFF	OFF	
ON	SW3	1	2	3	4															
100MHz	OFF	ON	OFF	OFF																
133MHz	OFF	OFF	OFF	OFF																

7AIV3 V.1 Jumper Setting Label