


## Jumper Settings

 
**Jumper JBAT1** – enables you to clear the BIOS:

1. Turn the system off.
2. Remove all ATX power connectors.
3. Short pins 2 and 3 on JBAT1.
4. Return the jumper to the normal setting.
5. Plug in all ATX power connectors
6. Turn the system on. The BIOS is returned to the default settings.

Jumper	Type	Description	Setting (default)
JBAT1	3 pin	Clear CMOS	1-2: <i>Normal</i> 2-3: Clear <div style="text-align: right;"> <b>JBAT1</b>   </div>

## P4ITA2

**Jumper 1 & Jumper 2** – enable this jumper if you want keyboard activity to turn on the computer.

Jumper	Type	Description	Setting (default)
JP1 & JP2	3 pin 3 pin	Keyboard power on	1-2: Enable 2-3: <i>Disable</i> 

**Jumper 12** – This jumper enables or disables the onboard audio codec.

Jumper	Type	Description	Setting (default)
JP12	3 pin	Enable on-board audio codec	1-2: <i>Enable</i> 2-3: <i>Disable</i> 