

**On-board I/O Jumper**

JUMPER	FUNCTION	SETTINGS		DESCRIPTION
JA, JB	RS-232-I	JA	JB	
		1-2 Short	1-2 Short	Disable
		1-2 Short	2-3 Short	3E8
		2-3 Short	1-2 Short	3F8 (default)
		2-3 Short	2-3 Short	2E8
JC, JD	RS-232-II	JC	JD	
		1-2 Short	1-2 Short	Disable
		1-2 Short	2-3 Short	2E8
		2-3 Short	1-2 Short	2F8 (default)
		2-3 Short	2-3 Short	3E8
JE, JF	LPT1	JE	JF	
		1-2 Short	1-2 Short	Disable
		1-2 Short	2-3 Short	378 (default)
		2-3 Short	1-2 Short	278
		2-3 Short	2-3 Short	3BC
JG	IDE	2-3 Short		Enable (default)
		1-2 Short		Disable
JH	FDC	2-3 Short		Enable (default)
		1-2 Short		Disable
JI	LPT OE	Short		O/P Port (default)
		Open		Bi-directional

*Table 2-3. On-board I/O Jumper Definition*