

## CPU Clock Jumper Setting

	50 MHz DX-50	40 MHz DX-40 DX2-80	33.3 MHz (Default) SX-33 DX-33 DX2-66 DX4-100 X5-133	25 MHz SX-25 DX-25 SX2-50 DX2-50 DX4-75
JK1				
JK2				
JK3				
JK4				

<b>JT1, JCK</b>	<p><b>PCI Bus Clock Select</b></p> <p>(When the processor clock is less than or equal to 33 MHz.)</p> <p>PCI Bus Clock = Processor Clock (Default)</p> <p>(When the processor clock is greater than 33 MHz.)</p> <p>PCI Bus Clock = Processor Clock / 2</p>
---------------------	---

