


## Mainboard Layout

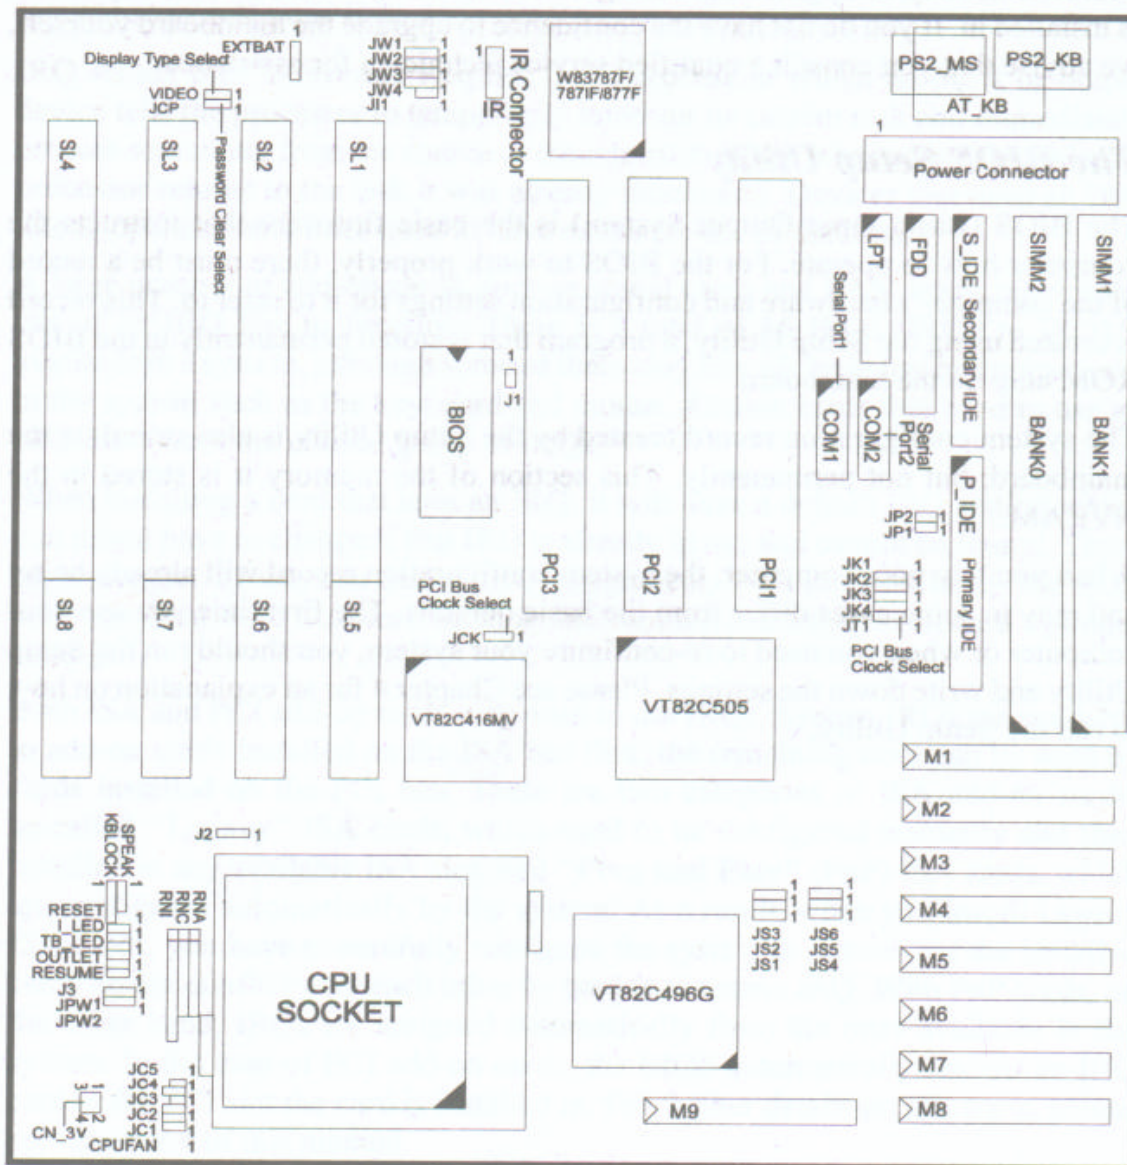

**NOTE :** When plugging your CPU into the CPU (ZIF) socket, make sure that the pin 1 matches that of the CPU socket.