

## BIOS Update Instruction

### Flash Process

The mainboard provides a Flash BIOS. If you have any question about the BIOS update, please contact your local dealer for more information. The following instructions apply when as upgrade is needed.

1. Create a Bootable Floppy (in DOS) -  
with a non-formatted diskette, type **format a:/s**  
With a formatted diskette, type **sys a:**
2. Download the BIOS File -  
Download the correct BIOS file via FTP from the BIOS update section on the [www.fic.com.tw](http://www.fic.com.tw) website, by clicking on the file name of the BIOS you wish to download.

Save the BIOS file and the Flash Utility file in the boot disk you have created.

Unzip the BIOS file and the Flash Utility file.

*There are two files after extraction: Flash BIOS utility, and BIOS file. Use the standard Flash BIOS utility, unless otherwise specified.*

Place the bootable floppy disk containing the BIOS file and the Flash Utility in drive a:, and reboot the system in MS-DOS, preferably Ver. 6.22

At the A: > prompt, type the corresponding Flash BIOS utility and the BIOS file with its extension. For example, A:\>FLASH620 626HB106.ROM.

From **Flash EPROM Programming Utility** menu, press **Y** to **Press “Y” to Continue, “N” to Reboot**. The monitor will shown the message **Please Wait....** . After the message **Flash EPROM Processing Successful** appears, press any key to reboot the system by loading the default values.

**This Page Intentionally Left Blank**