

Table of Contents

Chapter 1 Overview

Package Checklist	2
Main Features	3
Advanced Features	5
PC '97 Compliant	7
Infrared (IR) Connections	8
Universal Serial Bus (USB) Functionality	9

Chapter 2 Installation Procedures

Mainboard Layout	12
1). Set System Jumpers	13
Jumpers	13
Clear Password: CPW	13
Flash ROM Type Selection: EP1, EP2	14
CPU to SRAM Data Transacting Mode Selection: SRAM	14
2). Install System RAM Modules.....	15
DRAM and SDRAM	15
RAM Module Configuration.....	16
Install SIMMs	17
Remove SIMMs	17
Install DIMMs	18
Remove DIMMs.....	18
Cache Memory.....	19
3). Install the CPU	20
CPU External Clock (Bus) Frequency: CLK1, CLK2, CLK3 ..	21
CPU to Bus Frequency Ratio: FREQ1, FREQ2, FREQ3	22
Intel Pentium CPUs	23
Frequency.....	23
Voltage.....	24
AMD-K5/K6 CPUs.....	25
Frequency.....	25
Voltage.....	26
Cyrix 6x86/6x86MX CPUs.....	27
Frequency.....	27
Voltage.....	28
IBM 6x86/6x86MX CPUs	29
Frequency.....	29

Voltage.....	30
4). Install Expansion Cards	31
5). Connector Cables and Power Supply	33
AT Keyboard Connector: AT_KB	33
Serial Port Connectors: COM1, COM2	33
CPU Fan Connector: CPU_FAN	34
Universal Serial Bus Connectors: USB1, USB2	34
PS/2 Mouse Connector: MS_CON	35
Floppy Diskette Drive Connector: FLOPPY	35
Front Panel Block Connector: F_PNL	36
Standard Power Supply Connector: POWER	37
IDE HDD Device Connectors: PRIMARY, SECONDARY	38
Printer Connector: PRINTER	38
Infrared Connector: IR	39
Remote Power Supply Connector: RPW_CON	39

Chapter 3 Award BIOS Setup

CMOS Setup Utility.....	41
Standard CMOS Setup	42
Hard Disk Configurations.....	42
BIOS Features Setup.....	44
Chipset Features Setup.....	47
Power Management Setup.....	52
PCI Configuration Setup.....	55
PnP Configuration Setup	57
Load BIOS Defaults	58
Load Setup Defaults.....	58
Supervisor/User Password.....	59
IDE HDD Auto Detection.....	60
Save and Exit Setup	61
Exit without Saving.....	61

Appendix A ICW/PhaseLink Clock Generator

CPU External Clock (Bus) Frequency: CLK1, CLK2, CLK3.....	63
Intel Pentium CPUs.....	64
Frequency	64
AMD-K5/K6 CPUs	65

Frequency	65
Cyrix 6x86/6x86MX CPUs	66
Frequency	66
IBM 6x86/6x86MX CPUs	67
Frequency	67

Appendix B DMI Utility

Starting DMI Utility.....	69
---------------------------	----

Appendix C BIOS Update Instruction

Downloading BIOS File	71
Decompressing BIOS and Flash Utility Files	71
Upgrading BIOS File.....	72

This Page Intentionally Left Blank