

## Table of Contents

### Chapter 1 Overview

Main Features .....	2
This User Manual .....	4
Something Interesting .....	5
The BIOS Setup Utility .....	5
IRQ Functionality .....	6
DMA Channels of ISA Cards .....	7
Enhanced IDE .....	7
Serial Infrared (SIR) Connections .....	8
Highly Convenient Integrated I/O Connectors .....	9

### Chapter 2 Installation Procedures

Mainboard Layout .....	12
1). Set System Jumpers .....	13
Jumpers .....	13
Clear Password: CPW .....	14
Flash EPROM Type: EP1, EP2, and EP3 .....	14
2). Install DRAM Modules .....	15
DRAM and SDRAM .....	15
DRAM and SDRAM Configuration .....	16
Install SIMMs .....	17
Remove SIMMs .....	17
Install DIMM .....	18
Remove DIMM .....	18
Cache Memory .....	19
245/512KB Cache SRAM .....	20
3). Install the CPUs .....	21
CPU External Clock (Bus) Frequency:	
CLK1, CLK2, and CLK3 .....	22
CPU to Bus Frequency Ratio:	
FREQ1 and FREQ2 .....	22
Intel Pentium CPUs .....	23
Frequency .....	23
Voltage .....	24

AMD-K5 CPUs .....	25
Frequency.....	25
Voltage.....	26
Cyrix 6x86 CPUs.....	27
Frequency.....	27
Voltage.....	28
IBM 6x86 CPUs .....	29
Frequency.....	29
Voltage.....	30
Installation of Cyrix (or IBM) 6x86 CPU Fan.....	31
4). Install Expansion Cards .....	32
5). Connect Cables and Power Supply .....	34
Keyboard Connector: AT_KB .....	34
Serial Port Connectors: COM1 and COM2.....	34
PS/2 Mouse Connector: MS_CON .....	35
CPU Fan Connectors: FAN .....	35
Floppy Diskette Drive Connector: FLOPPY .....	36
Block Connector .....	37
Infrared Connector: IR .....	38
Power Connector: POWER .....	38
IDE HDD Device Connectors:	
PRIMARY and SECONDARY .....	38
Printer Block Connector: PRINTER .....	39
Remote Power Connector: RPW_CON.....	40
Universal Serial Bus Connectors: USB1 and USB2.....	40

### **Chapter 3     Award BIOS Setup**

CMOS Setup Utility.....	41
Standard CMOS Setup .....	42
BIOS Features Setup.....	44
Chipset Features Setup.....	47
Power Management Setup.....	50
PNP/PCI Configuration Setup.....	53
Load BIOS Defaults .....	54
Load Setup Defaults.....	54

## Installation Procedures

---

Integrated Peripherals .....	55
Supervisor/User Password.....	58
IDE HDD Auto Detection.....	59
Save and Exit Setup .....	60
Exit without Saving.....	60

**This Page Intentionally Left Blank**