

Chapter 1 Overview

Package Checklist	1-2
The FB11 Mainboard	1-3
Main Features	1-4
FIC Unique Innovation for Users (NOVUS) -	
- Enhanced Mainboard Features and System Support	1-7

Chapter 2 Installation Procedures

Quick Reference (from Page 2-2 to 2-4)	2-2
Mainboard Layout	2-2
1). CPU/BUS Ratio Select, Clear CMOS, Clear Password,	
Front Side Bus Speed Select, Over Voltage Driving,	
Keyboard Power On	2-3
2). Front Panel Block Cable Connection	2-4
3). CPU Fan Installation	2-4
1). Set System Jumpers/Switches	2-5
Clear CMOS: SW1-5	2-5
Clear Password: SW1-6	2-5
Keyboard and Mouse Power-On Feature: KB_PWN	2-6
Enabling Over Voltage Driving: JS3 (Magic Tuner)	2-6
2). Install RAM Modules	2-7
Install and Remove DIMMs	2-7
3). Install the CPU	2-8
CPU/FSB Speed Ratio Select	2-9
FSB Speed Select	2-10
4). Install Expansion Cards	2-11
5). Connect Devices	2-13
Floppy Diskette Drive Connector: FLOPPY	2-13
IDE HDD Device Connectors: PRIMARY, SECONDARY ..	2-13
ATX Power Connector: POWER	2-14
PCI Audio Card Connector: SB_LINK	2-14
CPU Fan Connector: CPU_FAN	2-15
System Case Fan Connector: CHS_FAN	2-15
Wake-On-LAN Connector: WOL	2-16
Infrared Connector: IR	2-16
Front Panel Block Connector: FPNL	2-17

Serial Port Connectors: COM1, COM2	2-18
Printer Connector: LPT	2-18
PS/2 Keyboard and Mouse Connector: KB, MS	2-19
Universal Serial Bus Connectors: USB0, USB1, USB3 (optional)	2-19

Chapter 3 BIOS Setup

CMOS Setup Utility	3-1
Standard CMOS Setup	3-2
Hard Disk Configurations	3-2
BIOS Features Setup	3-3
Chipset Features Setup	3-6
Power Management Setup	3-9
PNP/PCI Configuration	3-13
Load BIOS Defaults	3-14
Load Setup Defaults	3-15
Integrated Peripherals	3-15
Supervisor/User Password	3-20
IDE HDD Auto Detection	3-20
Save and Exit Setup	3-21
Exit without Saving	3-21

Quick Reference (German)	G-1
Quick Reference (French)	F-1
Quick Reference (Spanish)	S-1
Quick Reference (Japanese)	J-1
Quick Reference (Chinese Simplified)	C-1