

Standard CMOS Setup . . . . .	4 - 2
BIOS Features Setup . . . . .	4 - 4
Chipset Features Setup . . . . .	4 - 7
Power Management Setup . . . . .	4 - 11
PCI Configuration Setup . . . . .	4 - 13
Interrupt Assignments of PCI Slots . . . . .	4 - 15
Load BIOS Defaults . . . . .	4 - 16
Load Setup Defaults . . . . .	4 - 16
Supervisor/User Password Setting . . . . .	4 - 16
Clear Password . . . . .	4 - 17
IDE HDD Auto Detection . . . . .	4 - 17
Save and Exit Setup . . . . .	4 - 18
Exit Without Saving . . . . .	4 - 18

## ABOUT THIS MANUAL

This manual is designed to guide you and facilitate your use of the PA-2000 mainboard. It is divided into chapters. The chapters contain the main body of information normally referred to by users.

### Chapter 1

gives an overview and introduces the basic parts and features of the mainboard.

### Chapter 2

gives information on the jumper and connector settings on the mainboard.

### Chapter 3

provides information on the memory subsystem of the mainboard in the form of SIMMs and Cache memory and describes how you can upgrade memory.

### Chapter 4

briefly explains the mainboard's BIOS system Setup in general and tells you how to run it and change the system configuration settings.

**NOTE :** The material in this manual is for information only and is subject to change without notice. We reserve the right to make changes in the product design without reservation and without notification to its users. We shall not be liable for technical or editorial omissions made herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.