

Kapitel 1 Montage

Kennwort löschen: CPS	2
Flash-EPROM-Wahlschalter: EP1, EP2	2
Externe Taktraten (Bustakt): CLK1, CLK2, CLK3	3
Prozessorfrequenz und Bustakt: FREQ1, FREQ2, FREQ3	3

Kapitel 2 BIOS-Einrichtung

Award BIOS-Setup	5
CMOS-Einrichtung	5
Standard CMOS Setup	6
Festplattenkonfiguration	6
Software Turbo Speed	7
BIOS Features Setup	7
Chipset Features Setup	10
Power Management Setup	12
PNP/PCI Configuration Setup	16
Load BIOS Defaults	18
Load Setup Defaults	18
Integrated Peripherals	19
Supervisor/User Password	23
IDE HDD Auto Detection	23
Save and Exit Setup	24
Exit without Saving	24

Diese Seite bleibt absichtlich frei.