

Table of Contents

Chapter 1 Installation Procedures

Clear Password: CPS.....	2
Flash ROM Type Selection: EP1, EP2	2
CPU to SRAM Data Transacting Mode Selection: SRAM.....	3
DIMM Frequency: CLK4, SDRAM	4
System Frequency: NBCLK1, NBCLK2	4
CPU External (BUS) Frequency: CLK1, CLK2, CLK3	5
CPU to Bus Frequency Ratio: FREQ1, FREQ2, FREQ3.....	5
Set CPU Frequency:	6
Set CPU Voltage	7

Chapter 3 BIOS Setup

CMOS Setup Utility.....	9
Standard CMOS Setup	10
Hard Disk Configurations.....	10
Software Turbo Speed	11
BIOS Features Setup.....	11
Chipset Features Setup.....	14
Power Management Setup	17
PNP/PCI Configuration	21
Load BIOS Defaults	23
Load Setup Defaults.....	23
Integrated Peripherals	24
Supervisor/User Password.....	28
IDE HDD Auto Detection.....	28
Save and Exit Setup	29
Exit without Saving.....	29
