
Table of Content

Quick Installation	3
Before Installation.....	3
Layout.....	4
Item Checklist.....	4
Jumpers/ Connectors.....	5
Feature	10
Motherboard Components Placement.....	10
Block Diagram.....	12
Specifications.....	13
Hardware Setup	15
Install the Processor.....	15
Install Memory Modules.....	17
ATX Power Supply Connector.....	18
Back Panel.....	19

BIOS Setup	20
BIOS Setup.....	20
Main Menu.....	22
Standard CMOS Features.....	22
Advanced BIOS Features	26
Advanced Chipset Features.....	29
Integrated Peripherals.....	31
Power Management Setup.....	36
PnP/ PCI Configurations.....	40
PC Health Status.....	42
IWILL Smart Setting.....	42
Load Fail Safe Defaults.....	44
Load Optimized Defaults.....	44
Set Supervisor/ User Password Setting.....	45
Save & Exit Setup.....	46
Exit Without Saving.....	46
On board Audio	47
Audio Features.....	47
IWILL 6Channels Audio/SuperAudio(Optional).....	49
Driver Installation.....	51
The Audio Rack.....	53

Quick Installation

Before Installation

For installation, you may need some or all of the following tools:

Medium size flat blade screwdriver

Medium size Phillips head screwdriver


A 3/16 inch nut driver or wrench



Users must follow these guidelines to ensure the motherboard is protected during installation.

1. Make sure your computer is powered-off .
2. The motherboard, like all other electronic equipment, is sensitive to static. Please take the proper precautions when handling it. If possible, ground yourself by touching a metal table or desk. Keep the board in its conductive wrapping until it is configured and ready to be installed in your system.
3. Keep all magnets away from both your hard and floppy disk drives, especially magnetic screwdrivers. Keep both floppy and hard disks apart if disassembled.
4. Keep water and liquids away from your computer and its components.

Layout

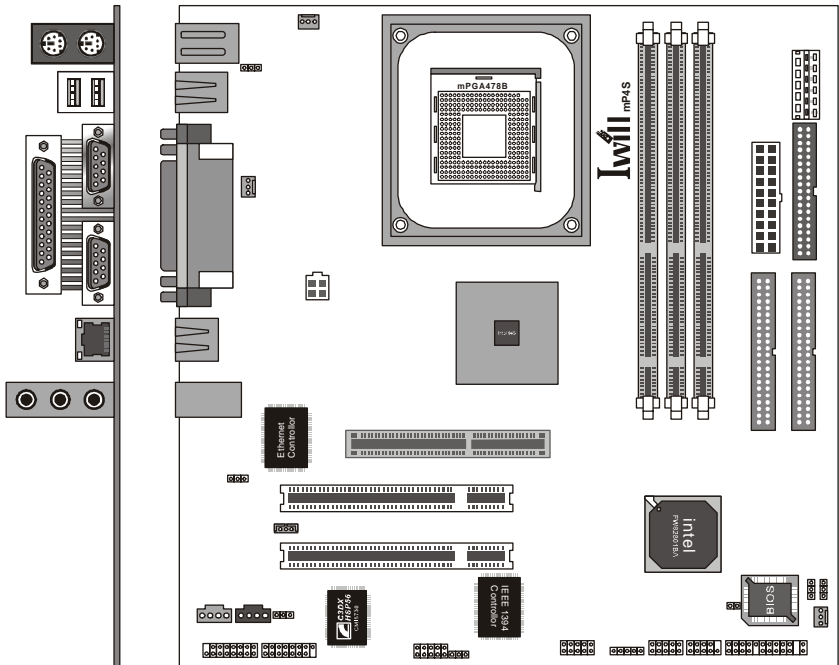



Item Checklist



- The motherboard
- I/O shield
- Operation manual
- ATA 100/66 IDE cable
- Floppy cable
- Power Installer CD
- 6CHG (6 channel audio bracket)
- 6CH1394 (1394 bracket, mP4S-1394 only)



Optional

- USB riser kit
- IWILL Super Audio (for SPDIF)


Jumpers/Connectors

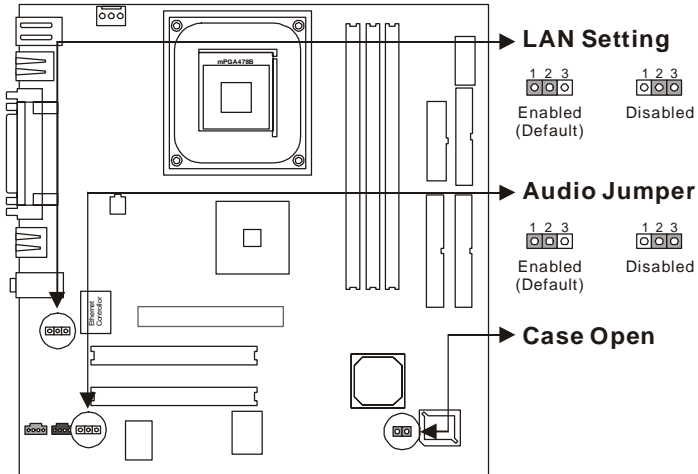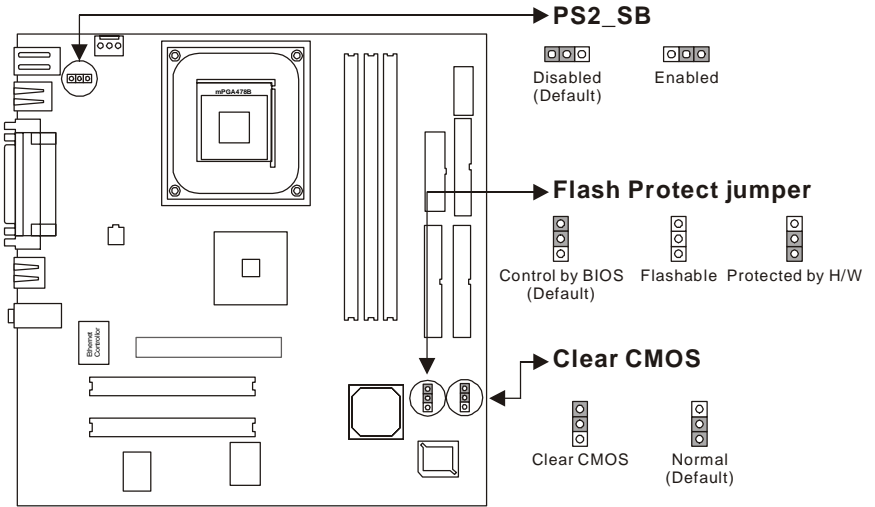

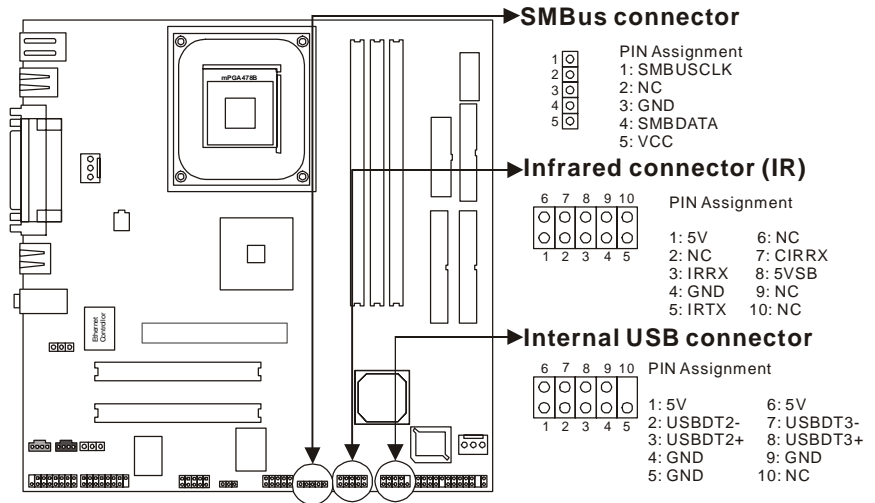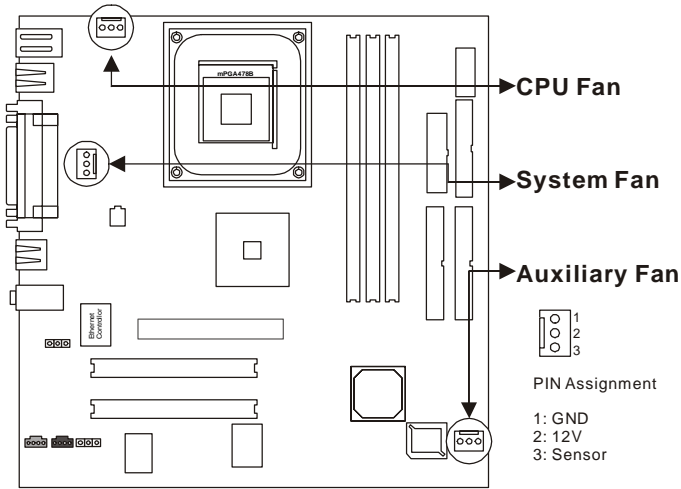

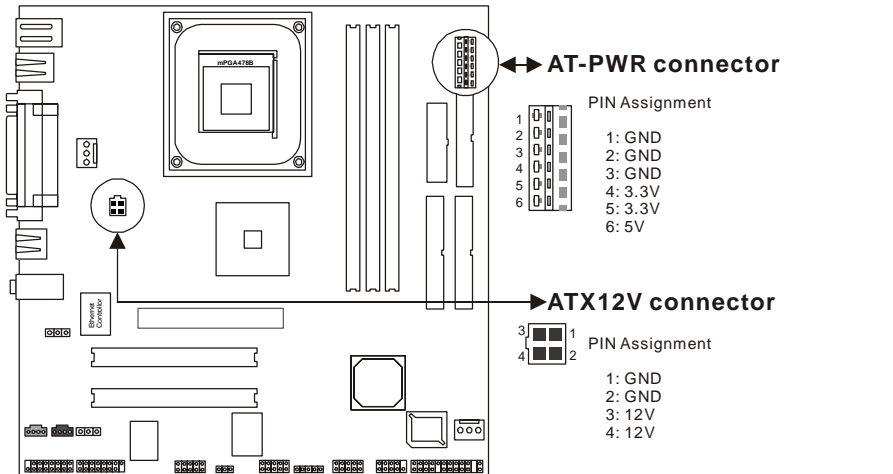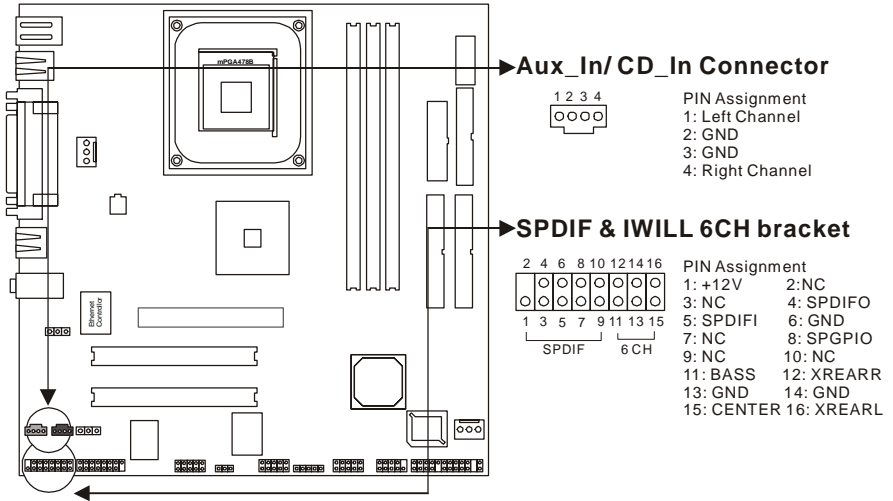


ATX power connector

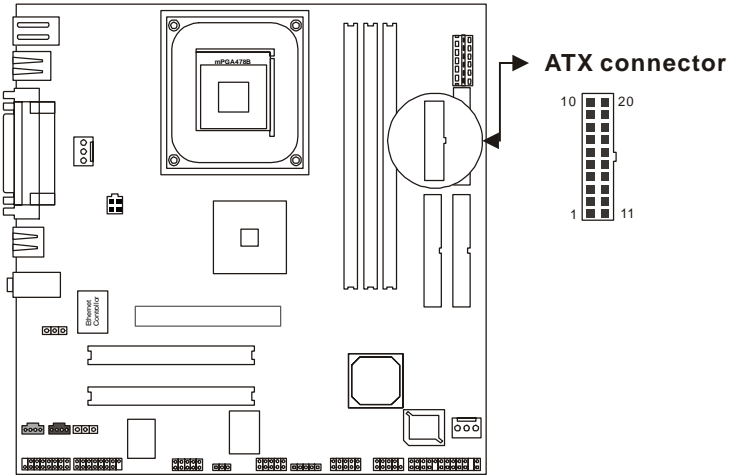

PIN No.	Definition	PIN No	Definition
1	+3.3V	11	+3.3V
2	+3.3V	12	-12V
3	Ground	13	Ground
4	+5V	14	Power Supply On
5	Ground	15	Ground
6	+5V	16	Ground
7	Ground	17	Ground
8	Power Good	18	-5V
9	+5V	19	+5V
10	+12V	20	+5V


Front panel connector

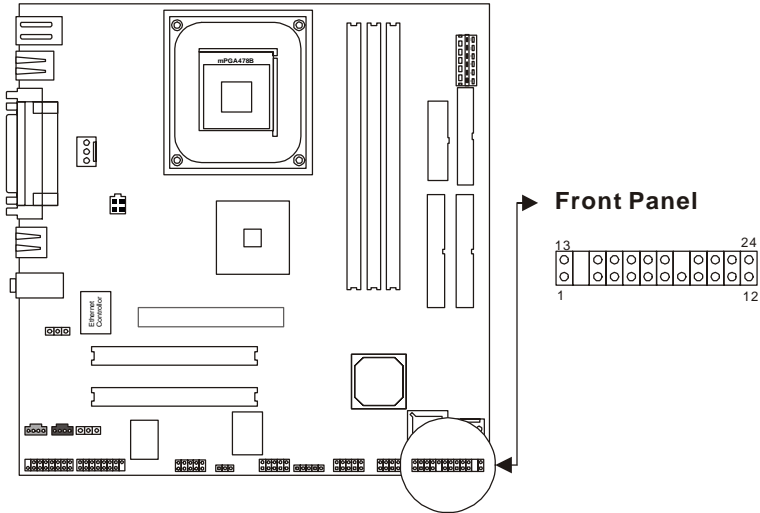

Function	PIN NO.	Definition
PWR_ON (Power/Soft_Off)	1,13	
ACPI(ACPI LED)	3,4	PIN 3:Anode PIN 4:Cathode
ALED(IDE LED)	7,8	PIN 7:Anode PIN 8:Cathode
RST(RESET)	11,12	PIN 11:RST PIN 12:GND
PLED (System PowerLED)	15,16,17	PIN 15:VCC PIN 16:NC PIN 17:GND
KL (Keyboard Lock)	18,19	PIN 18:KL PIN 19:GND
SPKR(Speaker)	21,22,23,24	PIN 21:VCC PIN 22:NC PIN 23:NC PIN 24:SPEAK (BUZZ)


Features

Motherboard Components Placement

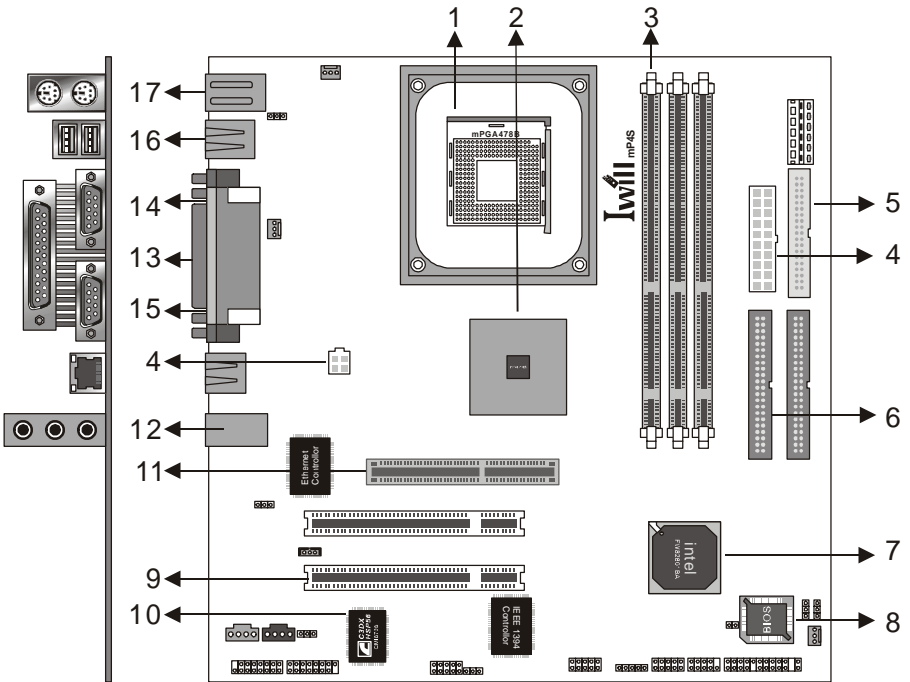

NO.	Description
1	CPU Socket (478 Pin)
2	i845 chipset
3	DIMM sockets
4	ATX Power connector/AT Power/ATX 12V
5	FDC connector
6	IDE connector
7	Intel ICH2 chipset
8	FWH chipset for programmable BIOS
9	PCI slots
10	CMI sound chip
11	AGP slot
12	Line In , Line Out, Microphone
13	Parallel Port
14	COM1
15	COM2
16	USB
17	PS2 Mouse / Keyboard

Block Diagram

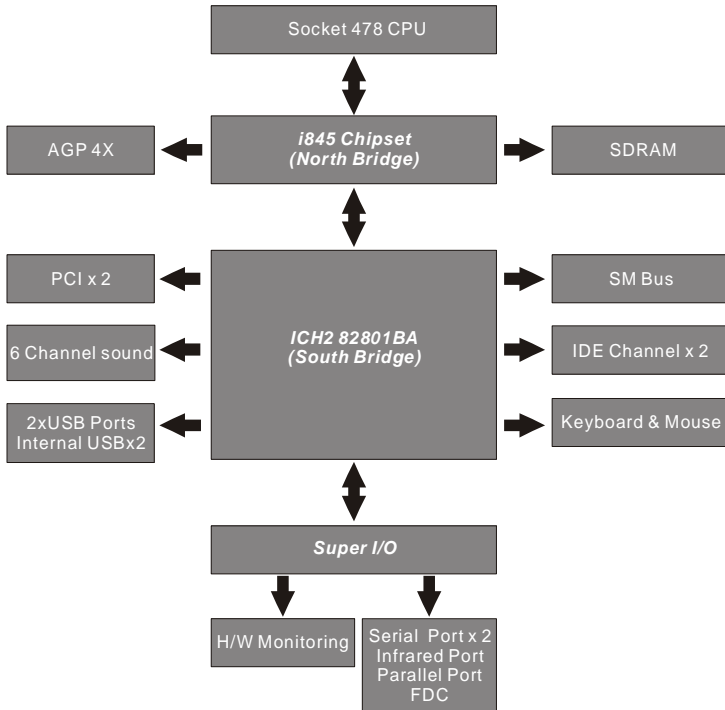

Specifications

Processor / (Socket478)

Supports single processor
Supports 400M FSB (Front Side Bus)
Supports Intel Pentium 4 CPU from 1.4 to 2.0 GHz and higher.

CPU Frequency/Voltage Selection

Supports CPU Multiplier selection from BIOS
Supports CPU External Frequency selection from BIOS

Memory

Supports PC100/PC133 SDRAM
Supports ECC DIMMs
(Single bit error Correction, Multiple bit error Detection)
Supports 16M/64M/128M/256M/512M DRAM technology
System memory maximum up to 3GB
Supports DIMM type 64Mb/128Mb/256MB

Graphics

Supports AGP 4X 1.5V ONLY

General I/O

PCI 2.1/2.2 compliance
Supports 32-bit/33MHz PCI interface
Supports LPC interface
Supports ATA33/ATA66/ATA100 IDE interface
Supports floppy interface
Supports 16550A UART interface
Supports ECP/EPP interface
Supports PS2 interface
Supports SIR/FIR/CIR interface
Supports USB interface

Sound support

C-Media 8738 HW Sound controller
Supports 6 Channel
Supports Game/MIDI interface
Supports Win9X/ WinNT/ Win2000/ Linux/ Net Ware.

Management

Supports voltage monitoring
(+12V/-12V/+5V/-5V/Vcore/Vcore2/VTT/VIO/Vbat/Vsb)
Supports fan control signal (CPU/AUX/SYS1)
Supports temperature sensor (CPU/AUX/SYS)
Supports Chassis Intrusion
Supports Power on by LAN/Ext. Modem/Int. Modem/PS2 Keyboard/
PS2 Mouse/RTC/PME
Supports Resume by LAN/Ext. Modem/Int. Modem/PS2 Keyboard/
PS2 Mouse/RTC/PME
Supports ACPI
Supports APM
Supports DMI
Supports SMBUS
Supports PnP
Supports BIOS ROM Flash Control
(3-pin jumper provide H/W & S/W protection)
Supports "AC-Loss Recovery"
Supports Manually Assign PCI IRQ
Supports PS2 mouse and PS2 keyboard auto swapping

Power requirement

Onboard DC/DC switching voltage regulator supports VIO up to 10A
current
Discrete voltage regulator for AGP port
Supports adjustable VIO (Normal/Increase 5%/Increase 10%,
Normal=3.4V, jumper/BIOS)
Supports 150A/us Icc slew rate


Expansion Slot, Sockets and Connectors

One Socket478 socket
Three DIMM sockets
One AGP 1.5V AGP slots
Two 32bit/33MHz Bus Master PCI slots
Two IDE connectors
One FDC connector
One Internal USBx2 connectors
One ATX 20-pin power connector
One ATX 4-pin power connector (ATX 12v for Vcore)
One AT 6-pin power connector

Hardware Setup


Intel Pentium 4 Processor Installation Procedure

The motherboard comes with a surface mount 478-pin ZIF socket. This socket is specifically designed for Intel Pentium 4 478 processor.

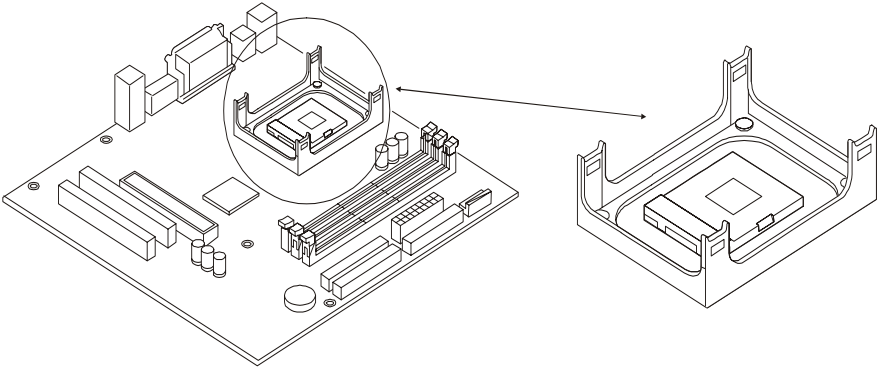

Install the processor retention mechanism following the illustration.

- A. Open the socket handle.
- B. Install the processor by carefully aligning the pins to the socket
- C. Close the socket handle

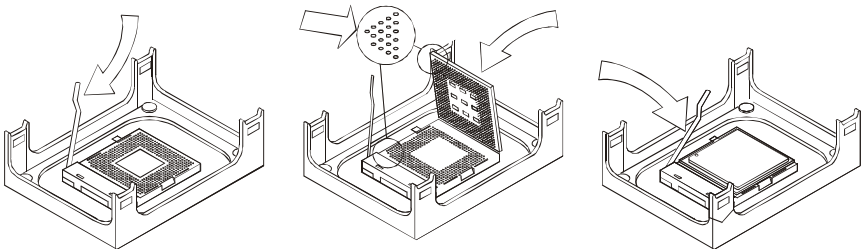



Unlock the socket by pressing the lever sideways, then lift it up to a vertical angle

Position the CPU above the socket such that its marked corner matches the base of the socket lever.

Press it firmly on the socket while you push down the socket lever to secure the CPU.

CPU Cooler and heatsink Installation Notes



The Intel Pentium 4 processor requires a specially designed heatsink and fan assembly to ensure optimum thermal condition and performance.

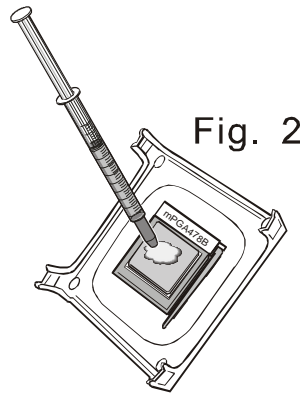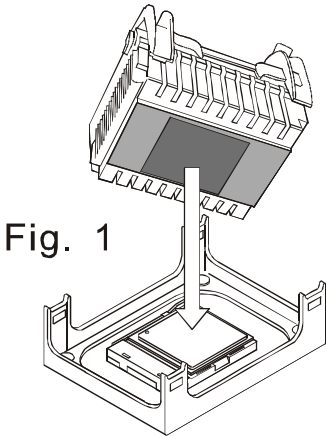

The heatsink may have thermal interface material attached to the bottom as shown in Fig. 1. (Be careful not to damage the thermal interface material.) If not, use the enclosed syringe and apply all of the thermal interface material to the top of the processor as shown in Fig. 2.

Connection the CPU fan cable

When the fan, heatsink and the retention mechanism are in place, connect the CPU fan cable to the corner on the fan connector.

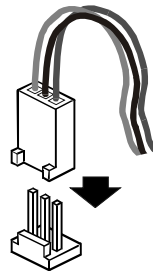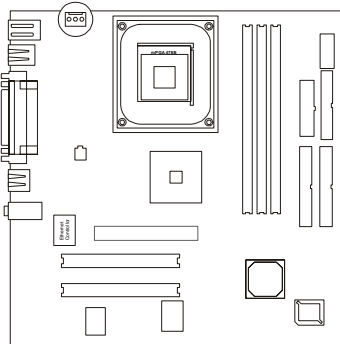


Install Memory Modules

IWILL mP4S comes with PC133 memory module (DIMM) sockets. These sockets support up to 3GB system memory using unbuffered ECC or non-ECC PC133 memory.




Make sure to unplug the power supply before adding or removing memory module. Failure to do so may cause damage to motherboard. Follow these steps to install memory modules.

Step: 1

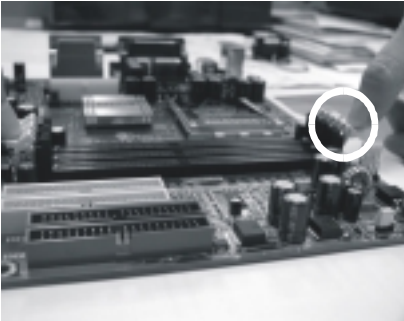


Unlock a DIMM socket by pressing the retaining clips outward.

Step: 2

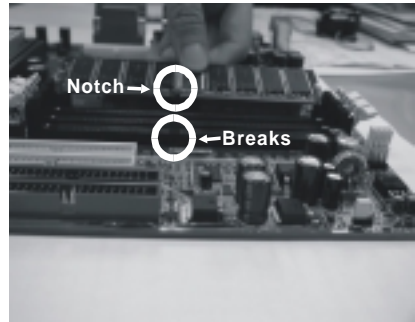


Align the "Notch" on the DIMM memory to the "Break" on the Socket.

Step: 3

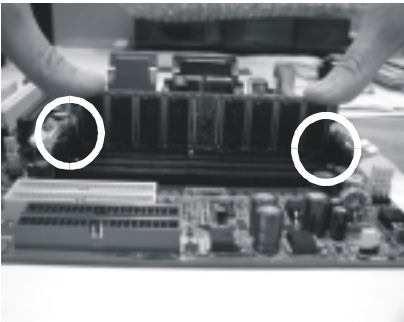

Firmly insert the DIMM into the socket until the retaining clips snap back in place and the DIMM is properly seated.

Step: 4

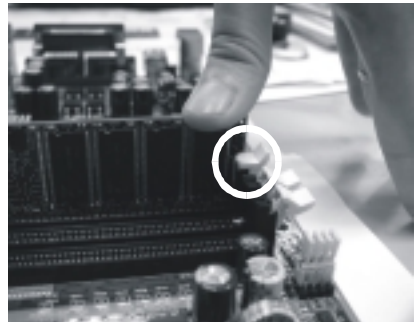

Make sure the memory is locked on the DIMM socket with "Both Chips"

ATX Power Supply Connector

Power on procedures


STEP	Description
1	After all connections are made, close the system case over.
2	Be sure that all switches are off.
3	Connect the power cord into the power supply located on the back of your system case.
4	Connect the power cord a power outlet that is equipped with a surge protector.
5	Many of the power supply support 110V/220V by a switch setting. Switch your power supply to the correct supply voltage.
6	Turn on your system in the following order <ol style="list-style-type: none">The monitorThe external devices.The computer system.




The power LED on the front panel of the chassis will light. After few seconds, the system will then run power-on tests. Some additional messages will appear on the screen during the test. If you do not see anything within 30 seconds from the time you turn on the power, the system may have failed a power-on test. Recheck the jumper settings and connections or call your retailer for assistance.

6 Channel, Firewire 1394 and SPDIF Modules


6CH1394 6CH audio + Game/Midi port, Firewire (*mP4S-1394 only*)

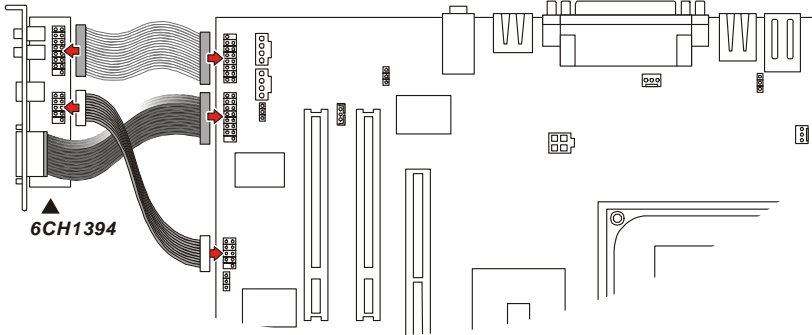

6CHG 6CH audio + Game/Midi port (*mP4S only*)

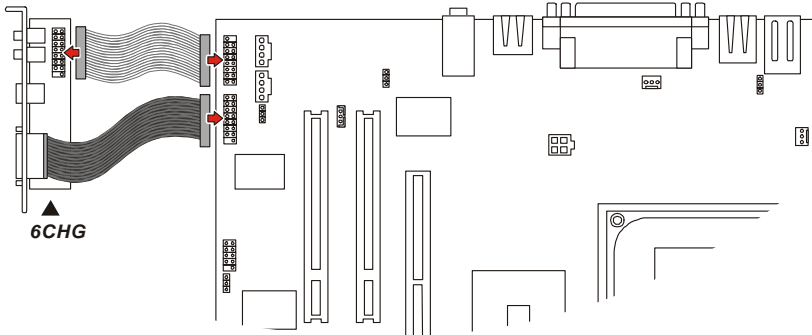

SuperAudio 6CH audio + SPDIF (*Optional*)

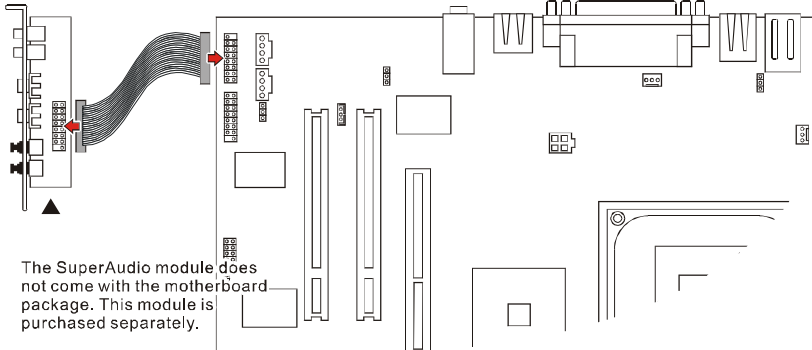

The SuperAudio module does not come with the motherboard package. This module is purchased separately.

BIOS Setup

BIOS Setup Upgrade BIOS

The BIOS can be upgraded from a diskette with the Award Flash utility — AWDFLASH.EXE. The BIOS image file, and update utility are available from IWILL's WEB site: support.iwill.net

Enter BIOS setup program

Power-on the system by either pressing the Power-On button, or by using any of the power-on features provided by the motherboard. Then, press the key after the Power-On Self Test (POST), and before the scanning of IDE devices. Simply look for the message "Press DEL to enter SETUP" displayed at the bottom of the screen during the boot up process. If the message disappears before you've had a chance to respond, you can restart the system by turning off the system power then turn it on again, or Pressing the "RESET" button on the system case, or

Pressing <Ctrl>, <Alt> and keys simultaneously.



Generally, the BIOS default settings have been carefully chosen by IWILL's Engineers provide the absolute maximum performance and reliability. It is very dangerous to change any setting without full understanding. We strongly recommend that you. DO NOT update BIOS if the system works perfectly. DO NOT change any setting unless you fully understand what it means.


Using BIOS setup program

↑Up	Move to the previous field
↓Down	Move to the next field
←Left	Move to the field on the left hand side
→Right	Move to the field on the right hand side
<Esc>	Quit from setup program without saving changes,or Exit from current menu page and return to main menu page
<PgUp> or <+>	Select the previous value for a field
<PgDn> or <->	Select the next value for a field
<F1>	General Help
<F2>	Item Help
<F5>	Previous Values
<F6>	Fail-Safe Defaults
<F7>	Optimized Defaults
<F10>	Save the current value and exit setup program


If the system is no longer able to boot after changing the settings, the only way to recover it is to clear the data stored in RTC CMOS. To reset the RTC CMOS data, take the JP1 jumper cap off pins 1-2, place onto pins 2-3, and then place back onto pins 1-2 again. This will return the RTC to the default setting. Then, get into the BIOS setup program , choose Load Fail-Safe Defaults ; Load Optimized Defaults, and select the original manufacturer default settings in your CMOS.

Main Menu

The main menu allows you to select from several setup pages. Use the arrow keys to select among these pages and press <Enter> key to enter the sub-menu. A brief description of each highlighted selection appears at the bottom of the screen.

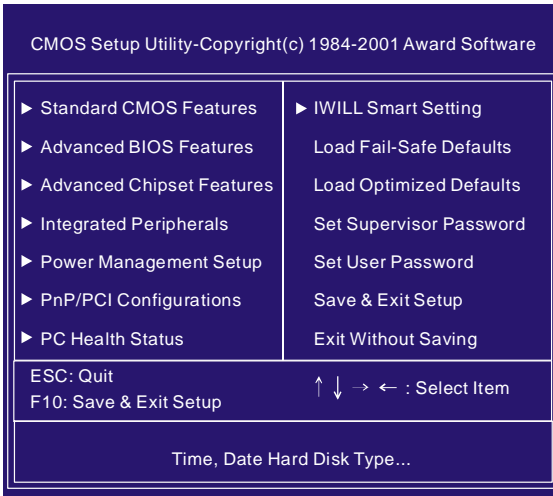

Standard CMOS features

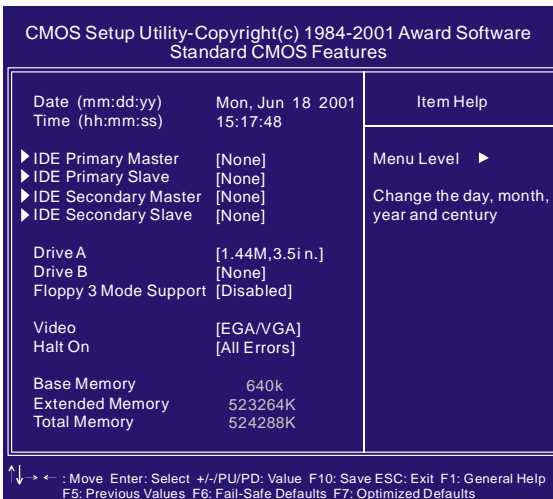

Date

This field specifies the current date. The date format is <month>, <day>, and <year>.

Time

This field specifies the current time. The time format is <hour>, <minute>, and <second>. The time is calculated based on the 24-hour (military-time) clock.

IDE Primary Master / Primary Slave / Secondary Master / Secondary Slave

Press "Enter" to enter next page for detail hard drive setting.

IDE HDD Auto-Detection

Auto-Detect the HDDs Capacity, and its parameters, ex: Cylinder, Head and Sector.

IDE Primary Master / Primary Slave / Secondary Master / Secondary Slave

This field specifies type of drive that corresponds to the drive installed in your system. If you select User, please specify the correct number of Cylinders, Heads, and Sectors.

Manual	Selecting manual lets you set the remaining fields on this screen. Selects the type of fixed disk.
Auto (Default Vaule)	BIOS automatically fills in the values for the cylinders, heads and sectors fields.
None	Any Disk Drives are attached

Capacity Auto Display your disk drive size

Access MODE

This field specifies the IDE translation mode.

NORMAL	Specifies traditional CHS addressing mode.
LARGE	Specifies extended CHS translation mode
LBA	Specifies LBA translation mode.
AUTO (Default Vaule)	BIOS specifies translation method automatically.

Cylinders

Set the number of cylinders for this hard disk.

Heads

Set the number of read/write heads

Precomp

Setting a value of 65535 means no hard disk

Sectors

Set the number of sectors per track

Drive A / Drive B

This field specifies the traditional type of floppy drives.

None (*Drive B default)	Any Floppy drive is connected
360K, 5.25 in.	Specifies extended CHS translation mode
1.2M, 5.25 in.	A 1.2M floppy drive is connected
720K, 3.5 in.	A 720K floppy drive is connected.
1.44M, 3.5 in. (*Drive A default)	A 1.44M floppy drive is connected
2.88M, 3.5 in.	A 2.88M floppy drive is connected

Floppy 3 Mode Support

3 Mode floppy drive is a type of 3.5-inch drive used by NEC PC98 computers. It supports both 1.2M and 1.44M formats using the same drive. This field specifies which drive supports 3 Mode. When a floppy drive is specified to support 3 Mode, the respective drive setting in "Drive A / Drive B" field will be invalid.

Disabled (Default Value)	No 3 Mode drive is connectedd
Drive A	A 3 Mode drive is connected as drive A
Drive B	A 3 Mode drive is connected as drive B
Both	Both drive A and drive B are 3 Mode drives

Video

EGA/VGA (Default Value)	Specifies EGA or VGA adapter
CGA 40	Specifies CGA adapter with 40 column mode
CGA 80	Specifies CGA adapter with 80 column mode
MONO	Specifies Monochrome adapter

Halt On

All Errors (Default Value)	Each time the BIOS detects a non-fatal error, the system will stop and display an error message
No Errors	The system will stop for any errors that are detected
All, But Keyboard	The system will stop for any errors except keyboard error
All, But Diskette	The system will stop for any errors except diskette error
All, But Disk/Key	The system will stop for any errors except diskette and key board errors

Base Memory

The POST (Power-On Self Test) determines the amount of base (conventional) memory installed in the system. The value of the base memory is typically 640K. This field has no options.


Extended Memory

The BIOS determines how much extended memory is present during the POST. This is the amount of memory located above 1MB in the processor's memory address map. This field has no options.

Total Memory

Displays the total memory available in the system

Advanced BIOS Features

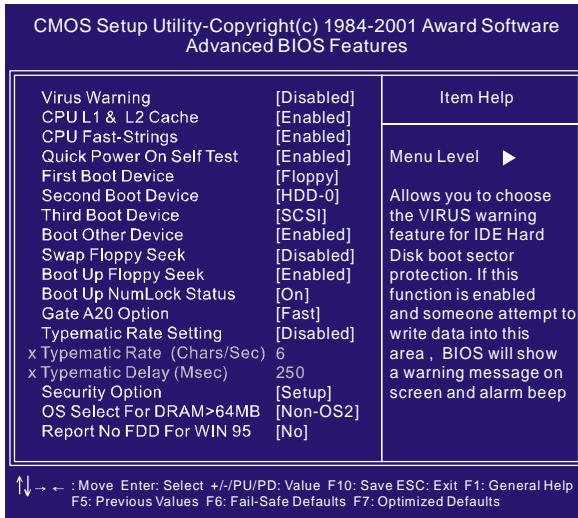

Virus Warning

When this function is enabled and any attempt to write data into this area is made, the BIOS monitor will display a warning message on screen and beep. If you want to run an anti-virus program, we recommend you that it will disable and appear the Virus Warning function beforehand.

[Enabled, Disabled (Default Value)]

CPU L1& L2 Cache

This field configures the CPU L1 & L2 cache.

[Enabled(Default Value), Disabled]

CPU Fast-Strings

Enabled is best for performance.

[Enabled(Default Value), Disabled]

Quick Power On Self Test

This field allows the system to skip certain tests while booting. This will decrease the time needed to boot the system.

[Enable(Default Value), Disabled]

First / Secondary / Third / Boot Other Device

The BIOS attempts to load the operating system from the devices in the sequence selected in these items.

[Floppy, LS120, HDD-0, SCSI, CDROM, HDD-1, HDD-2, HDD-3, ZIP100, LAN, Disabled]

Swap Floppy Drive

When enabled, floppy drives A and B will be exchanged without the user physically changing the connection on the cable.

[Enable, Disabled(**Default Value**)]

Boot Up Floppy Seek

Seeks disk drives during boot up. Disabling speeds boot up.

[Enabled, Disabled (**Default Value**)]

Boot Up NumLock Status

This field determines the configuration of the numeric keypad after system boot up. If On, the keypad uses numbers keys. If Off, the keypad uses arrow keys.

[ON(**Default Value**),Off]

Gate A20 Option

This field configures how the gate A20 is handled. The gate A20 is a device used to address memory above 1 MB. At first, the gate A20 was handled from a pin on the keyboard. While some keyboards still provide this support, it is more common, and much faster, for modern system chipsets to provide support for gate A20.

[Fast(**Default Value**):GateA20 signal supported by core logic]

[Normal: GateA20 signal supported by keyboard controller].

Typematic Rate Setting

This field determines if the typematic rate is to be used. When enabled, the BIOS will report (after a moment) that the key has been depressed repeatedly. When disabled, the BIOS will report only once if a key is held down continuously. This feature is used to accelerate cursor movements using the arrow keys.

[Enable, Disabled(**Default Value**)]

Typematic Rate (Chars/Sec)

When Typematic Rate Setting enabled, this field specifies how many characters will be displayed in one second when a key is held down continuously.

[6(**Default Value**)8,10,12,15,20,24,30]]

Typematic Delay (Msec)

When enabled, typematic delay allows you to select the time delay between when the key is first pressed and when the acceleration begins.

[250msec(**Default Value**)500msec,750msec,1000msec]

Security Option

This field configures how the system security is handled. It works conjunction with SETTING SUPERVISOR / USER PASSWORD page to control the security level of the system.

[Setup(**Default Value**):System needs a password to enter BIOS setup program.]

[System:System needs a password to boot.]

OS Select for DRAM >64MB

When enabled, this field allows you to access the memory that is over 64MB under OS/2.

[OS2, Non-OS2(**Default Value**)]


Report No FDD For WIN 95

For a floppy diskless system that runs Windows 95, this field should be set tp Yes.

[YES, NO(**Default Value**)]

Advanced Chipset Features

This setup page is used to specify advanced features available through the chipset. The default settings have been chosen carefully for most operating conditions. DO NOT change the value of any field in this setup page without full understanding.

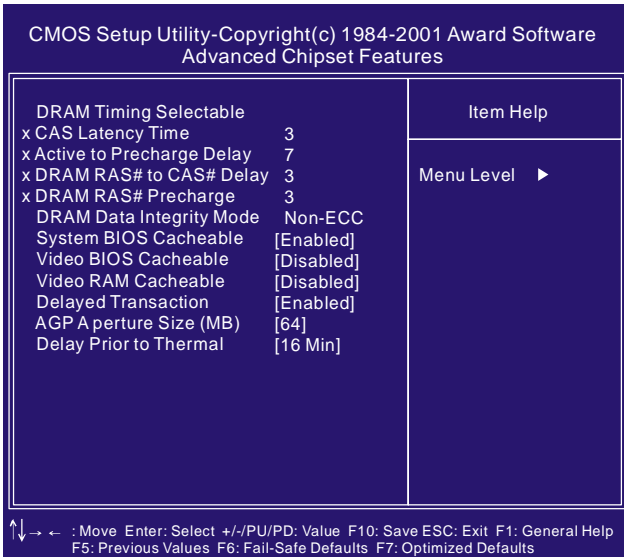

DRAM Settings

The first chipset settings deal with CPU access to dynamic random access memory (DRAM). The default timings have been carefully chosen and should only be altered if data is being lost. Such a scenario might well occur if your system had mixed speed DRAM chips installed. Longer delays might result, however this preserves the integrity of the data held in the slower memory chips.

DRAM Timing Selectable

Selects Whether DRAM Timing is controlled by the SPD. It is serial presence detect.

[By SPD (**Default Value**), By User]

CAS Latency Time

This controls the number of clocks between the SDRAM read command and the time that the data actually becomes available.

[2, 3(**Default Value**)]

DRAM RAS# to CAS# Delay

This controls the number of clocks between the SDRAM active command and the read / write command.

[2,3(**Default Value**)]

DRAM RAS# Precharge

If an insufficient number of cycles is allowed for the RAS to accumulate its charge before DRAM refresh, the refresh may be incomplete and the DRAM may fail to retain data. This controls the idle(delay) clocks after issuing a precharge command to the SDRAM.

[2,3(**Default Value**)]

System BIOS Cacheable

When enabled, accesses to the system BIOS will be cached.

[Enable(**Default Value**),Disabled]

Video BIOS Cacheable

When enabled, access to the video BIOS will be cached.

[Enable, Disabled(**Default Value**)]

Video RAM Cacheable

When Disabled, access to the video memory located at A0000H to BFFFFH will be cached.

[Enabled, Disabled (**Default Value**)]

Delayed Transaction

When enabled, the south bridge ICH2 will supports the Delayed Transaction mechanism when it is the target of a PCI transaction.

[Enable(**Default Value**),Disabled]

AGP Aperture Size (MB)

This field configures the main memory size for AGP graphics data used.

[4MB, 8MB, 16MB, 32MB,64MB(**Default Value**), 128MB, 256MB]

Integrated Peripherals

CMOS Setup Utility-Copyright(c) 1984-2001 Award Software
Integrated Peripherals

On-Chip Primary PCI IDE	[Enabled]	Item Help
On-Chip Secondary PCI IDE	[Enabled]	
IDE Primary Master PIO	[Auto]	Menu Level ▶
IDE Primary Slave PIO	[Auto]	
IDE Secondary Master PIO	[Auto]	
IDE Secondary Slave PIO	[Auto]	
IDE Primary Master UDMA	[Auto]	
IDE Primary Slave UDMA	[Auto]	
IDE Secondary Master UDMA	[Auto]	
IDE Secondary Slave UDMA	[Auto]	
USBController	[Disabled]	
USB Keyboard Support	[Disabled]	
Init Display First	[AGP]	
IDE HDD Block Mode	[Enabled]	
POWER ON Function	[BUTTON ONLY]	
x kB Power ON Password	Enter	
x Hot Key Power ON	Ctrl-F1	
Onboard FDC Controller	[Enabled]	
Onboard Serial Port 1	[3F8/IRQ4]	
Onboard Serial Port 2	[2F8/IRQ3]	
UART Mode Select	Normal]	
x RxD , TxD Active	Hi , Lo	
x IR Transmission Delay	Enabled	
x UR2 Duplex Mode	Half	
x Use IR Pins	IR-Rx2Tx2	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
x EPP Mode Select	EPP1.9	
x ECP Mode Use DMA	3	
PWRON After PWR-Fail	[Off]	
SCR Port Address	[Disabled]	
x SCR Port IRQ	11	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

On-Chip primary/Secondary PCI IDE

This field enables or disables the onboard IDE controller.
[Enable(**Default Value**), Disabled]

IDE Primary Master / Slave PIO IDE Secondary Master / Slave PIO

These fields configure the PIO (Programmable Input Output) transfer mode for each IDE devices. The maximum transfer rates of each PIO mode are listing as follow:

PIO Mode 0	3.3 MB/sec
PIO Mode 1	5.2 MB/sec
PIO Mode 2	8.3 MB/sec
PIO Mode 3	11 MB/sec
PIO Mode 4	16.6 MB/sec
Auto(Default Value)	Negotiated with device automatically
Mode 0	Use Mode 0 timing to access device
Mode 1	Use Mode 1 timing to access device
Mode 2	Use Mode 2 timing to access device
Mode 3	Use Mode 3 timing to access device
Mode 4	Use Mode 4 timing to access device

IDE Primary Master / Slave UDMA IDE Secondary Master / Slave UDMA

If you select Auto, the IDE controller will detect Ultra DMA-capable IDE devices. Automatically, Depend on the resent of negotiation with your HDD.

[Auto(**Default Value**),Disabled]

USB Controller

Select Disabled if your system contains USB peripherals.

[Enable, Disabled(**Default Value**)]

USB Keyboard Support

Select Enabled if you want to use USB keyboard under DOS

[Enable, Disabled(**Default Value**)]

Init Display First

This item allows you to decide which slot to activate first, either PCI slot or AGP slot.

[PCI Slot,AGP(**Default Value**)]

IDE HDD Block Mode

When enabled, the IDE controller will use the faster block mode to access devices.

[Enable(**Default Value**), Disabled]

Power-On Function

This field configures the Power-On mode of the system.

The Power-On button will not function in this mode.

Password	You can assign a password string through KB Power-On Pass word field.
Hot KEY	You can assign a hot key through the Hot Key Power-On field.Pressing this hot key will power-on your system.
Mouse/ Password	Double-Clicking the mouse button or typing the KB power-on password will automatically power-on your system
Mouse/Hot KEY	Double-Clicking the mouse button or typing the KB hot-key will power-on your system
BUTTON ONLY (Default Value)	Simply power-on your system by pressing the Power-On button on the front panel of your PC case
Keyboard 98	Enables Keyboard 98 function.This founction is good only for users of Keyboard 98.

KB Power ON Password

If you wish to use this function, bring the cursor to the field written Enter, then press <Enter>. The computer will display the message, Enter Password". Type your password and press <Enter>. After the message Confirm Password is displayed, re-type your password. The KB Power-On function will be in effect after you save and exit setup.

To disable a password, bring the cursor to the Enter" field again, then press <Enter>. The computer will display the message, Enter Password Press <Enter>. A message will confirm that the password is disabled.

Hot Key Power-On

This field specifies key selection for the Keyboard-Power On hot key.

[Ctrl-F1, Ctrl-F2, Ctrl-F3, Ctrl-F4, Ctrl-F5, Ctrl-F6, Ctrl-F7, Ctrl-F8, Ctrl-F9, Ctrl-F10, Ctrl-F11, Ctrl-F12]

Onboard FDC Controller

This field enables or disables the onboard floppy controller.

[Enable(**Default Value**), Disabled]

Onboard Serial Port 1 / 2

These fields configure the onboard serial ports. There are several port addresses and IRQ channels to select from.

3F8 / IRQ 4 (Default Vaule)	Port address 3F8h, IRQ 4
2F8 / IRQ 3 (Default Vaule)	Port address 2F8h, IRQ 3
3E8 / IRQ 4	Port address 3E8h, IRQ 4
2E8 / IRQ 3	Port address 2E8h, IRQ 3
Auto	BIOS assigns port address and IRQ channel automatically.
Disabled.	Disables serial port

UART Mode Select

[IrDA, ASKIR, Normal(**Default Value**)]

RxD, TxD Active for IrDA and ASKIR functions

When setting the field to either IrDA or ASKIR, you must select the active level of receiving and transmission signal.

[Hi, Lo(**Default Value**)/Lo, Hi/Lo, Lo/Hi, Hi]

IR Transmission delay for IrDA and ASKIR functions

When setting the field to either IrDA or ASKIR, you must select whether or not you require a delay between IR transmissions.

[Enabled(**Default Value**), Disabled]

UR2 Duplex Mode[Full,Half(**Default Value**)]**Use IR Pins**[RxD2,TxD2,IR-Rx2Tx2(**Default Value**)]**Onboard Parallel Port**

This field configures the onboard parallel port. There are several port addresses and IRQ channels to select from.

378 / IRQ 7 (Default Value)	Port address 378h, IRQ 7
278 / IRQ 5	Port address 278h, IRQ 5
3BC / IRQ 7	Port address 3BCh, IRQ 7
Disabled	Disables parallel port

Parallel Port Mode

This field configures the operating mode of an onboard parallel port. Ensure you know the specifications of your parallel port devices before selecting field.

[SPP(**Default Value**),EPP,ECP ECP+EPP]**EPP Mode Select**

When the Parallel Port Mode field is configured as EPP, ECP+EPP mode, the EPP version needs to be specified. Please refer to your peripheral document before selecting field.

[EPP1.7:Use EPP 1.7 protocol]

[EPP1.9 (**Default Value**):Use EPP 1.9protocol]**ECP Mode Use DMA**

When the Parallel Port Mode field is configured as ECP, ECP+EPP mode, it needs a DMA channel for data transfer. This field specifies the DMA channel for ECP parallel port use.

[1:Use DMA channel 1]

[3(**Default Value**):Use DMA channel1]

Power Management Setup

CMOS Setup Utility-Copyright(c) 1984-2001 Award Software
Power Management Setup

Power Management	[User Define]	▲ Item Help
Video Off Method	[V/H SYNC+Blank]	Menu Level ▶
Video Off In Suspend	[Yes]	
Suspend Type	[Stop Grant]	
MODEM Use IRQ	[3]	
APM Suspend Timer	[Disabled]	
APM HDD Power Down Timer	[Disabled]	
PWR-OFF Mode by PWR-BTTN	[Instant-Off]	
Wake Up by PCI card	[Disabled]	
Wake Up by Ring/LAN	[Disabled]	
CPU THRM-Throttling	[62.5%]	
PWROn/Resume by Alarm	[Disabled]	
x Date (of Month) Alarm	0	
x Time (hh:mm:ss) Alarm	0:0:0	
Reset APM Timer Events		
Primary IDE 0	[Disabled]	
Primary IDE 1	[Disabled]	
Secondary IDE 0	[Disabled]	
Secondary IDE 1	[Disabled]	
FDD, COM, LPT Port	[Disabled]	
PCI IRQ#	[Disabled]	

↑ ↓ → ← : Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

Each power-saving mode has a respective timer. The value of the timer can be assigned or reloaded and it will count down to zero. When the timer equals to zero, the system will be forced into the related suspend or power-saving mode. If any predefined signal or event is detected during the timer counting period, the timer restarts automatically.

Power Management

This feature allows the user to select the default parameters for the power-saving mode.

Min saving	When idle for one hour, the system entersuspend mode.
Max Saving	When idle for fifteen minutes, the system enters suspend mode.
User Define (Default Vaule)	User can specify the time the system enters suspend mode.

Video off Method

V/H SYNC+Blank (Default Vaule)	Turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.
Blank Screen	Writes blanks to the video buffer only.
DPMS	Initial display power management signaling with DPMS.

Video Off In Suspend

This determines the manner in which the monitor is blanked.

[NO, Yes(**Default Value**)]

Suspend Type

Select the Suspend Type.

[PwrOn Suspend, Stop Grant (**Default Value**)]

MODEM Use IRQ

This determines the IRQ in which the MODEM can use.

[3(**Default Value**),4,5,7,9,10,11,NA]

APM Suspend Timer

This field specifies the time the system enters power-saving mode.

It is available only when the Power Management field is set to User Define.

[1Min, 2Min, 4Min, 8Min, 12Min, 20Min, 30Min, 40Min, 1Hour, Disabled(**Default Value**)]

APM HDD Power Down Timer

This field specifies the time the system enters HDD power down.

It is available only when the Power Management field is set to User Define.

[1Min, 2Min, 3Min, 4Min, 5Min, 6Min, 7Min, 8Min, 9Min,10Min, 11Min, 12Min, 13Min, 14Min, 15Min, Disabled(**Default Value**)]

PWR-Off Mode by PWR-BTTN

This field specifies the function of power button.

[Instant-Off(**Default Value**):When power button pressed, the system turns off immediately.]

[Delav 4 Sec: After the power button has been pressed andheld for four seconds, the system turns off.]

Wake up by PCI card[Enabled, Disabled(**Default Value**)]**Wake up by RING/LAN**

When Wake up by LAN function is enabled, the PC can power-on or “wake up” through LAN (Local Area Network). When Wake up by RING function is enabled, the PC can power-on through an external modem connected to your PC.

[Enabled, Disabled(**Default Value**)]**CPU THRM-Throttling**

87.5%	Keep 87.5% of CPUs full speed performance
75.0%	Keep 75.0% of CPUs full speed performance
62.5% (Default Vaule)	Keep 62.5% of CPUs full speed performance
50.0%	Keep 50.0% of CPUs full speed performance
37.5%	Keep 37.5% of CPUs full speed performance
25.0%	Keep 25.0% of CPUs full speed performance
12.5%	Keep 12.5% of CPUs full speed performance

PWROn/Resume by Alarm

When enabled, you can set the date and time to automatically power-on your PC (similar to an alarm clock).

Enabled	Sets Date (0-31) and Timer (hr, min, sec) to power-on the PC. When date is set to 0, the Timer is set for every day.
Disabled (Default Vaule)	Disables RTC alarm function

Reset APM Timer Events

This field enables the system to detect activity, and restart the timer of the power-saving mode.

Primary IDE 0

If enabled, timer restarts whenever the master disk of the primary IDE channel is active.

[Enabled, Disabled (**Default Value**)]

Primary IDE 1

If enabled, timer restarts whenever the slave disk of the primary IDE channel is active.

[Enabled, Disabled (**Default Value**)]

Secondary IDE 0

If enabled, timer restarts whenever the master disk of the secondary IDE channel is active.

[Enabled, Disabled (**Default Value**)]

Secondary IDE 1

If enabled, timer restarts whenever the slave disk of the secondary IDE channel is active.

[Enabled, Disabled (**Default Value**)]

FDD,COM,LPT PORT/

[Disabled(**Default value**),Enabled]

PCI IRQ#

[Disabled(**Default value**),Enabled]

PnP/ PCI Configurations

CMOS Setup Utility-Copyright(c) 1984-2001 Award Software
PnP/PCI Configurations

PNP OS Installed	[No]	Item Help Menu Level ► Select Yes if you are using a Plug and Play capable operation system Select No if you need the BIOS to configure non-boot devices
Reset Configuration Data	[Disabled]	
Resources Controlled By x IRQ Resources x Memory Resources	[Auto (ESCD)] Press Enter Press Enter	
PCI/VGA Palette Snoop	[Disabled]	

↑ ↓ → ← : Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

PNP OS Installed

The field specifies whether a Plug and Play operating system is installed.

[Yes,No(**Default Value**)]

Reset Configuration Data

Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the operating system can not boot.

[Enabled, Disabled(**Default Value**)]

Resources Controlled By

The Award Plug and Play BIOS has the capacity to automatically configure all of the boot and Plug and Play compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play operating system such as Windows98/95/NT. If you set this field to "manual" choose specific resources by going into each of the sub menu that follows this field (a sub menu is preceded by a "Ø").

[Manual: Resources controlled by the user.

Auto(ESCD)(**Default Vaule**): Resources controlled by BIOS automatically]

IRQ Resources

When resoruces are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt.

IRQ3/4/5/7/9/10/11/12/14/15 assigned to

[PCI/ISA PnP (**Default Value**), Legacy ISA]

DMA Resources

This sub menu can let you control the memory resource.

Reserved Memory Base

Reserved a low memory for the legacy device (non-PnP device).

[C800,CC00,D000,D400,D800,DC00,N/A(**Default Value**)]

Reserved Memory Length

Reserved a low memory length for the legacy device (non-PnP device).

[8K(**Default Value**),16K,32K,64K]

PCI / VGA Palette Snoop

This field controls the ability of a primary PCI graphics controller to share a common palette with an ISA/VESA video or MPEG card.

Enabled	PCI VGA co-works with ISA MPEG card
Disabled (Default Vaule)	All cases except above.

PC Health Status

This page is monitoring your status of computer. On the screen displays CPU/System temperature, FAN speed, and voltages.

CMOS Setup Utility-Copyright(c) 1984-2001 Award Software
PC Health Status

CPU Warning Temperature	[Disabled]	Item Help
Current CPU Temperature	21°C/69°F	Menu Level ▶
Current SYS Temperature	28°C/82°F	
Current SYS Temperature	45°C/113°F	
Current CPUFAN Speed	4500RPM	
Current AUXFAN Speed	0RPM	
Current SYSFAN Speed	0RPM	
Vcore.	1.71V	
+1.8v	1.79V	
+3.3v	3.36V	
+ 5v	5.24V	
+12v	12.34V	
-12v	- 12.69V	
- 5v	- 5.04V	
VBAT(V)	3.28V	
5VSB(V)	5.24V	
Shutdown Temperature	[Disabled]	

↑ ↓ → ← : Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

IWILL Smart Setting

CMOS Setup Utility-Copyright(c) 1984-2001 Award Software
IWILL Smart Setting

THE CPU IS	Intel Pentium 4	Item Help
THE CPU ID IS	0F0A	Menu Level ▶
THE CPU EXPECT SPEED IS	100 X 15.0 MHz	
CPU Micro Code Updated to	0009	
Spread Spectrum	[Disabled]	
=**= IWILL Micro Stepping	=**=	
CPU Clock	[100]	
CPU Clock Ratio	[X15.0]	
DRAM Clock	[By SPD]	
CPU Vcore Setting	[Auto]	
BIOS-ROM Flash Protect	[Non-Flash]	

↑ ↓ → ← : Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

IWILL MicroStepping

MicroStepping

Microstepping is Iwill's another step forward to provides users a fuss free CPU frequency set up procedure. It contains two main functions, Auto Detecting CPUs speed and Micro Adjustable CPU FSB speed.

Auto Detecting CPU speed:

IWILL MicroStepping will auto detect the CPU's factory multiplier setting and CPU FSB to the factory default. This function provides a "fuss free" CPU set up process for the general users.

Micro Adjustable CPU FSB speed:

IWILL provides a user friendly overclocking function that allows users to experience the fun of overclocking. This function allows user to adjust CPU FSB by 1MHz interval. This is particularly useful when user wants to extract the most out of the purchased CPU. For example: you select from 133, 134, 135, 136, 137, 138MHz and up to the maximum speed that the system can sustained. In the time should overclocking failed, MicroStepping will auto detects the CPU's factory multiplier setting and set the CPU FSB to default 66MHz, to protect the CPU installed.

Spread Spectrum

This item configures radiation emitted from the system. When enabled, system will release less radiation

[Enabled, Disabled(**Default Value**)]

CPU Vcore Setting

This item display the current status of CPU voltages.

[Auto (**Default Value**), 1.125V, 1.150V, 1.175V, 1.200V, 1.225V, 1.250V, 1.275V, 1.300V, 1.325V, 1.350V, 1.375V, 1.400V, 1.425V, 1.450V, 1.525V, 1.550V, 1.575V, 1.600V, 1.625V, 1.650V, 1.675V, 1.700V, 1.725V, 1.750V, 1.775V, 1.800V, 1.825V, 1.850V]


BIOS-ROM Flash Protect

When select "Non flash", the BIOS ROM chip will be protecte to prevent injuring by Virus "please don't select Flashable" until you have to upgrade the latest BIOS.

[Non-Flash(**Default Value**), Flashable]


Load Fail Safe Defaults

When you press <Enter> on this item you get a confirmation dialog box with a message similar to: Pressing ‘Y’ loads the BIOS default values for the most stable, minimal-performance system operations.

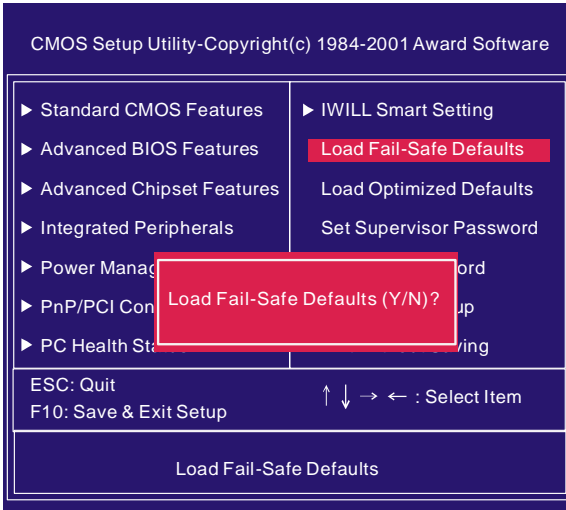


Load Optimized Defaults

When you press <Enter> on this item you get a confirmation dialog box with a message similar to:

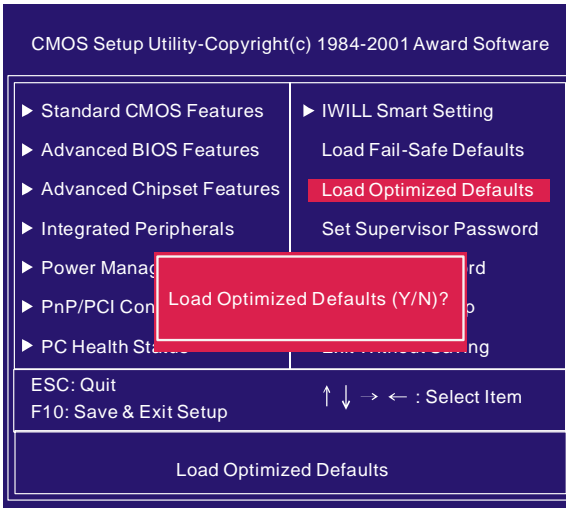

Set Supervisor/ User Password Setting

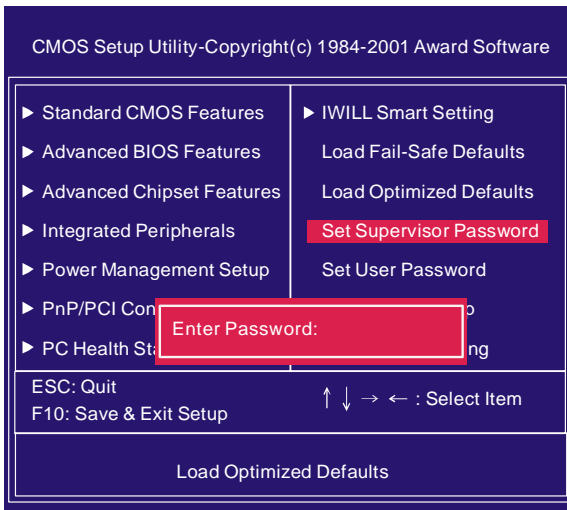


These setup pages are used for password setting. When a password has been enabled and the Security Option field is set as Setup, you will be required to enter the password every time you try to enter BIOS Setup program. This prevents an unauthorized person from changing any part of your system configuration. Additionally, if the Security Option field is set as Boot, the BIOS will request a password every time your system boot. This would prevent unauthorized use of your computer.

If you wish to use this function, bring the cursor to this field, then press <Enter>. The computer will display the message, "Enter Password". Type your password and press <Enter>. After the message "Confirm Password" is displayed, re-type your password. The Supervisor Password function will be in effect after you save and exit setup.

To disable a password, bring the cursor to this field, then press <Enter>. The computer will display the message, "Enter Password". Press <Enter>. A message will confirm that the password is disabled. Once the password is disabled, the system will boot and you can enter setup program freely.


Save & Exit Setup

Saves current CMOS value and exit BIOS setup program.

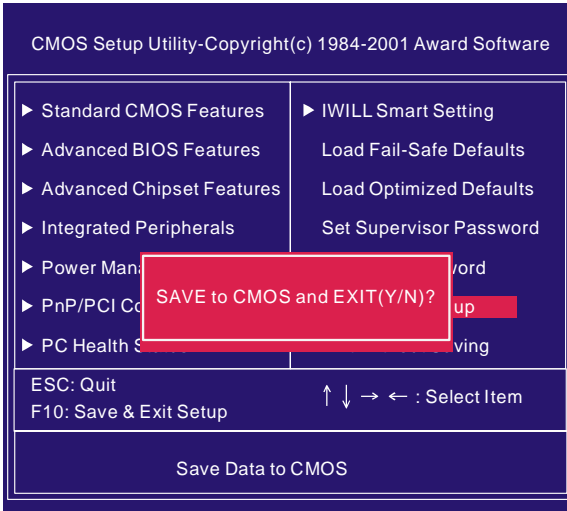

Exit Without Saving

Abandons all CMOS value changes and exits BIOS setup program.

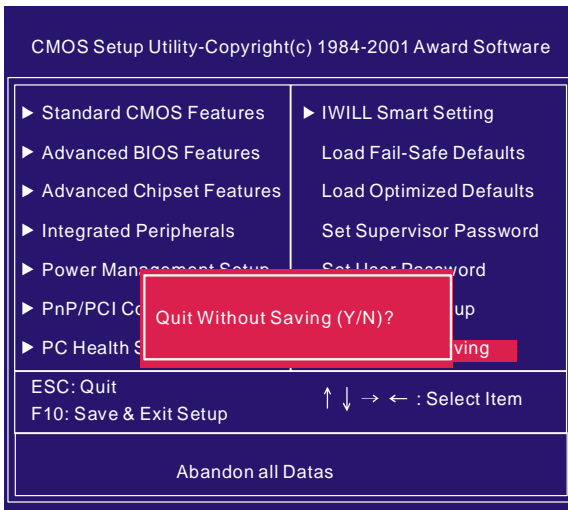

On board Audio


Audio Features

Special Feature

1. Full-duplex playback and recording. Built-in 16-bit CODEC.
2. HRTF 3D positional audio, supporting both DirectSound 3D&A3D interfaces. Also supports earphones, 2/4/6 channel speakers mode.
3. Support Windows 98/Windows 2000 and Windows NT 4.0.
4. Built-in 32 OHM Earphone buffer.
5. MPU-401 Game/Midi port and legacy audio SB Pro support.
6. Downloadable Wave Table Synthesizer, supporting Direct Music.

Digital Audio (SPDIF IN/OUT)

1. Up to 24-bit stereo 44KHz sampling rate; voice playback/recording
2. Full-duplex playback and recording. 120dB audio quality measured.
3. Auto detectable SPDIF/IN signal level from 0.5V to 5V.

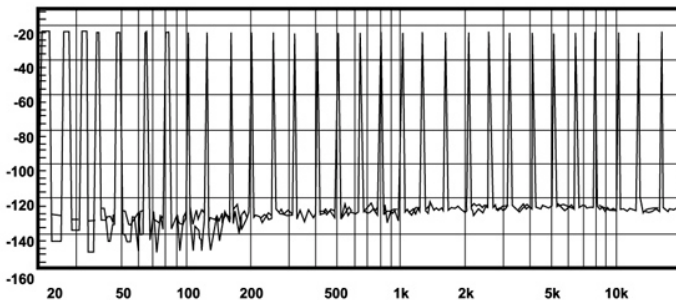

120 dB audio quality in playback, recording, and by pass modes.

Stereo Mixer

1. Stereo analog mixing from CD-Audio and Line-in
2. Stereo digital mixing from Voice, FM/Wave-table, and Digital CD-Audio
3. Mono mixing from MIC. Software adjustable volume.

Game and Midi Interface


Fully compatible with MPU-401 Midi UART and Sound Blaster Midi mode/Standard IBM PC joystick/game port

IWILL 6Channels Audio/ SuperAudio (Optional)


Connectors and Jumpers



JP5	Audio Extension (Digital I/O) Connector
JP7	CD-SPDIF IN
JP10	BASS/Center Select
Line-IN	LINE-IN Connect to the audio output port of stereo
Mic-IN	Connect to the Microphone (Mono)
Front- Speaker	Output to speakers with the amplifier or earphones or AUDIO-IN of home stereo
Rear-Speaker	Connect to the rear speakers while four/six channel speakers mode is enabled
Center/BASS	Connect to the center speaker and BASS while six channel speakers mode is enabled
GAME/MIDI	Connect to Joystick or devices using MIDI interface
RCA SPDIF IN/OUT	Connects to digital audio devices such as DAT and MiniDisc recorders, via RCA input/output
Optical SPDIF IN/OUT	Connects to digital audio devices such as DAT and MiniDisc recorders, via optical input/output

JP10 function

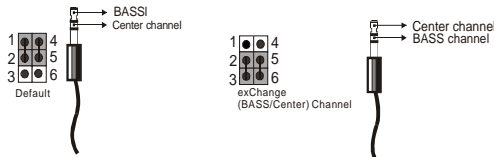


6Channels Audio

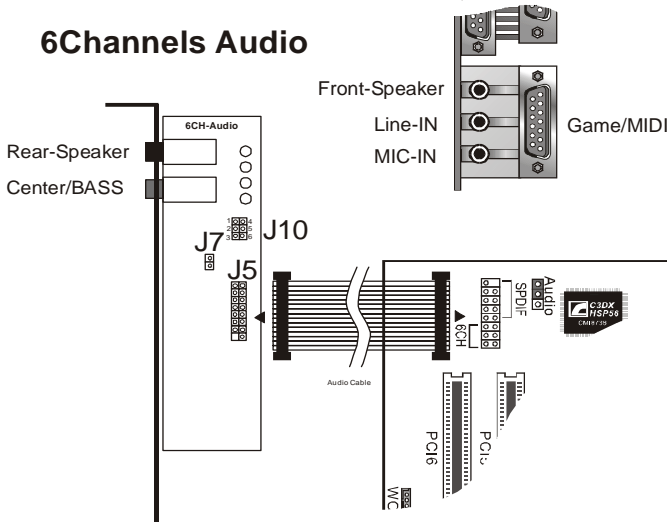

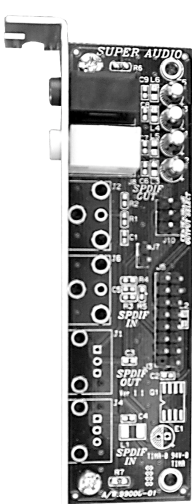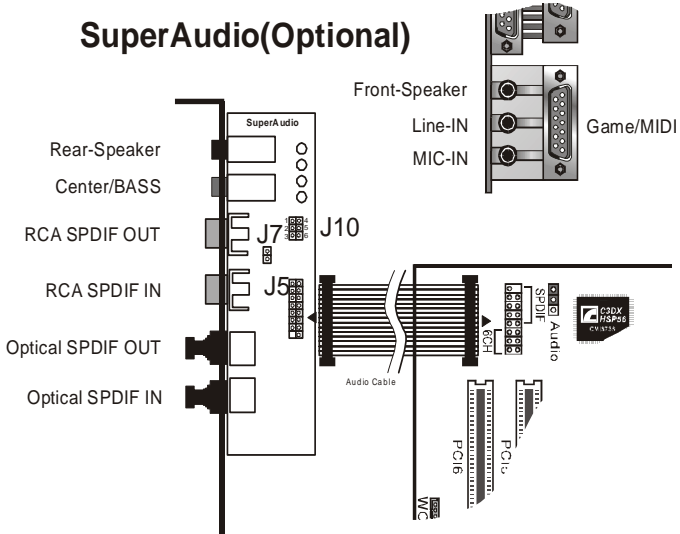

IWILL 6Channels Audio

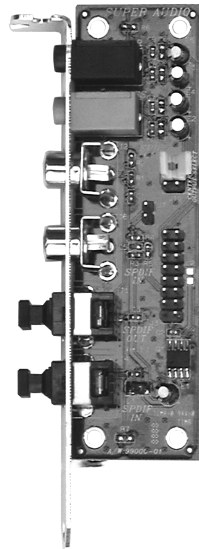

IWILL SuperAudio (Optional)

Driver Installation

DOS Installation

Before beginning the installation, please make sure that your hard disk has sufficient space(min. 4MB). Insert the Power Installer CD into the CD-ROM Drive.

1. Change directory to PCI audio DOS drivers folder (ex. D:\DOSDRV) at DOS prompt, and type: *INSTALL*[Enter]
2. Type the DOS utilities path you want to install the file in.
3. Program will expand the file to the path you've specified.
4. Install program will add initial drivers into AUTOEXEC.BAT file.

Win 95/98/ME/2000 Installation

1. Click "Start" at Windows bottom-left corner.
2. Select "Run"
3. Key in the drive path where the installation CD and installation program are in; for example, "D:\SETUP.EXE"
4. Click "OK" to start the applications installation procedure, and follow the on-screen instructions to complete the installation.
5. When all the application software has been installed, please shut down Windows system, and reboot your system for new driver installation. System will install the device drivers automatically.

Win 95/98/ME/2000 Un-Installation

1. Click "Start"
2. Select "Program."
3. Find "Uninstall device drivers and applications" program in PCI audio applications.
4. Run it.
5. Follow the on-screen instructions to uninstall the device drivers or applications.

Windows NT4.0 Installation


We recommend that you have Microsoft Windows NT installed, and remove any existing sound drivers from your current system, before you install this PCI sound device driver.

1. Click "Start", move the highlight bar to "Setting", and select the "Control Panel".
2. Double-click "Multimedia."
3. Select "Devices", and press "Add"
4. Select "Unlisted or Updated Driver" in List of Drivers."
5. Specify the drive path where NT drivers are in (such as D:\NT40\DRV).
6. Select "C-Media CM8738," and press "OK".
7. Select proper I/O value.
8. Press "OK."
9. Restart the system when being asked.
10. Now, you have already installed the PCI Audio Adapter under Microsoft Windows NT 4.0 successfully. If you want to install the Windows applications, continue the following steps.
11. Click "Start"
12. Select "Run"
13. Key in drive path where the Windows NT application installation program are in;
for example, "D:\NT40\APP\SETUP.EXE"
14. Click "OK" to start the installation procedure, and follow the on-screen instructions to complete the installation. When all of application software has been installed, shut down the Windows NT system, then reboot your system.

The Audio Rack

Introduction

By means of a user-friendly interface (as easy as operating your home stereo system), this PCI audio rack provides you with the control over your PC's audio functions, including the advantage of six speakers mode enable/ disable, and perfect digital sound (SPDIF version ONLY) input / output. control.

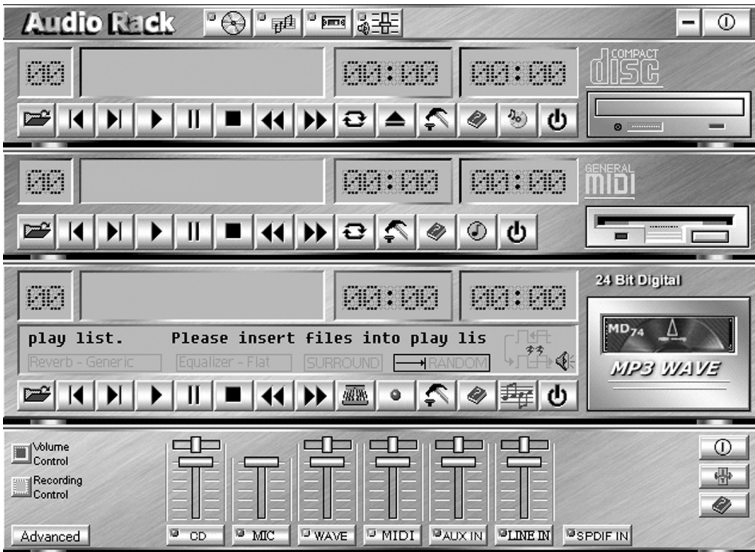

About Audio Rack

The Audio Rack is consisted of several major components.

Control Center

Controls the display of the PCI Audio Rack's components.



MIDI Player

MIDI Player can play MIDI files, *.mid/*.rmi, and allow you to create your own playlist.

MP3/Wave Player

Records and plays digital audio (mp3/wave) files. Allows you to create wave file playlists, and playback the wave files.

CD Player

Plays standard audio CDs. Allows you to create your favorite song playlists.

Mixer

Controls the volume level of your audio inputs and outputs

Mixer

Volume Control



For each output signal, the control slider regulates the loudness whereas a horizontal slider the balance between the two speakers. The mute button can temporarily stop the output without changing slider positions. A button with a lit LED means the output is available, and vice versa. Several output signals can usually be enabled at once.

Volume: This is the master control over all outputs. The power of an output signal is determined by both of the volume slider and the slider for the individual output. To modify all the outputs, adjust the volume slider. To change individual output(s), adjust its(their) slider(s).

CD: Regulates the CD drive audio input level.

MIC: Regulates the input level of microphone.

WAVE: Regulates wave (voice) playback levels.

MIDI: Regulates the MIDI music play level.

AUX IN: Regulates the Auxiliary input play level.

MONO IN: Regulates the Mono input level.

LINE IN: Regulates the Line-In levels.

Advanced: Regulates the advanced settings.

Recording Control



For each input signal, a control slider regulates the loudness whereas a horizontal slider the balance between the two channels. The select button can temporarily select input signal without changing slider positions. A button with a lit LED means it is available, and vice versa.

CD: Regulates the CD drive audio input level.

MIC: Regulates the input level of microphone.

WAVE: Regulates wave (voice) playback level.

FM: Regulates the FM music play level.


AUX IN: Regulates the Auxiliary input play level.

LINE IN: Regulates the Line-In level.

SPDIF IN: Enables the recording from SPDIF in. SPDIF-in is mutually exclusive with other input signals.

Advanced: Regulates the advanced settings.


Advanced - SPDIF

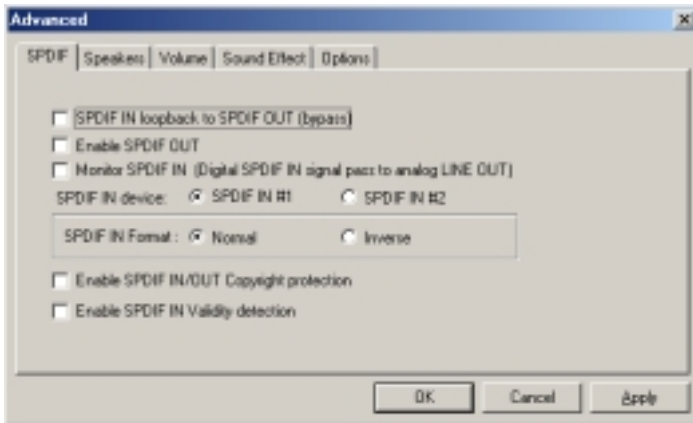


SPDIF dialog provides a full control over SPDIF IN/OUT functions. You can use these settings to connect your computer to other pieces of audio device, such as: Mini Disc players, amplifiers...etc.

Advanced - Speakers

Speakers dialog provides an interface allowing you to set your speakers configurations. First, You should make sure what model type your speakers are, and what the correct configurations are. And this dialog also shows the current status and functions of the phone jacks of your audio device. You can always refer to this to make sure whether or not the connections of your speakers and microphone are correct.

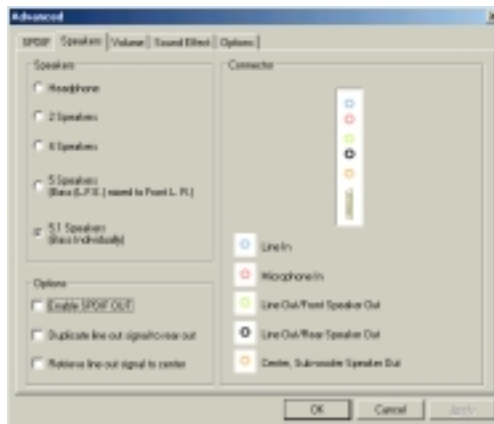


Advanced - Sound effects

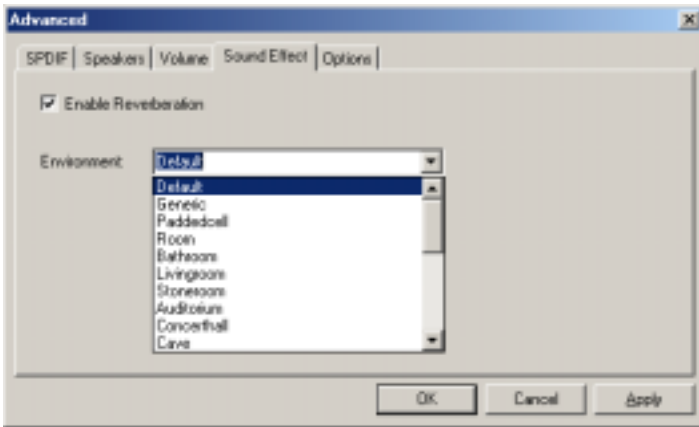

Sound effects dialog allows you to modify the special effects of the song and game being played. Currently, these effectors can only be used for the player or the game which utilizes DirectSound 2D and 3D to playback their music.

Advanced - Options

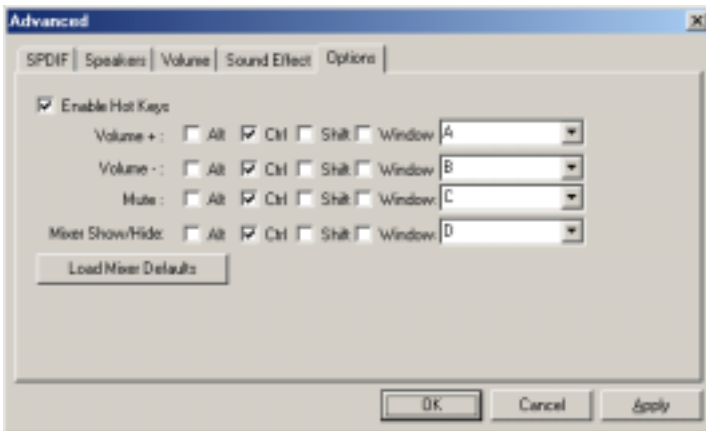

Options dialog provides a hot key setting to control the Mixer in an easy way. Please note that other applications might be affected by this if you use the same hot key setting.

Please use 'Load Mixer Defaults' to change all settings to default values.