

**MODEL : MAGIC-PRO MP-6VIP-VM / MP-6VIP-VMX**

**EDITION : July, 2000**

**VERSION : 1.0**

---

## **Federal Communications Commission Statement**

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

- ♦ This device may not cause harmful interference
- ♦ This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy. If this equipment is not installed and used in accordance with the manufacturer's instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ♦ Reorient or relocate the receiving antenna.
- ♦ Increase the separation between the equipment and receiver.
- ♦ Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- ♦ Consult the dealer or an experienced radio/TV technician for help.

The use of shielded cables for connection of the monitor to the graphics card is required to assure compliance with FCC regulations. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## **Canadian Department of Communications Statement**

This digital apparatus does not exceed the Class B limits for audio noise emissions from digital apparatuses set out in the Radio Interference Regulations of the Canadian Department of Communications.

## **Manufacturer's Disclaimer Statement**

The information in this document is subject to change without notice and does not represent a commitment on the part of the vendor. No warranty or representation, either expressed or implied, is made with respect to the quality, accuracy or fitness for any particular purpose of this document. The manufacturer reserves the right to make changes to the content of this document and/or the products associated with it at any time without obligation to notify any person or organization of such changes. In no event will the manufacturer be liable for direct, indirect, special, incidental or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages. This document contains materials protected by copyright. All rights are reserved. No part of this manual may be reproduced or transmitted in any form, by any means or for any purpose without expressed written consent of its authors. Product names appearing in this document are mentioned for identification purposes only. All **trademarks**, product names or brand names appearing in this document are registered property of their respective owners.

Copyright © Magic-Pro Computer Co., LTD.

All rights reserved

Author : Raymond

Printed in Taiwan

July 2000

**100%** POST-CONSUMER  
RECYCLED PAPER 

# CONTENTS

## CHAPTER 1

<b>INTRODUCTION .....</b>	<b>6</b>
1-1 ITEM LIST CHECKUP .....	6
1-2 CPU .....	6
1-3 CHIPSET .....	6
1-4 MEMORY .....	7
1-5 BIOS .....	7
1-6 MULTI-I/O FUNCTION .....	7
1-7 FORM FACTOR .....	7
1-8 S3 SAVAGE4 ACCELERATOR .....	8
1-9 AC'97 CODEC FUNCTION .....	8
1-10 OTHERS .....	8
1-11.1 MOTHERBOARD LAYOUT --- 6VIP-VM.....	9
1-11.2 MOTHERBOARD LAYOUT --- 6VIP-VMX .....	10
1-12 FLAT PANEL DESKTOP MONITOR SUPPORT .....	11
1-13 HIGH SCREEN RESOLUTION CRT SUPPORT .....	11
1-14 CHIPSET DIAGRAM .....	12

## CHAPTER 2

<b>HARDWARE SETUP .....</b>	<b>13</b>
2-1 CPU INSTALLATION .....	13
2-2.1 BUS RATIO SELECT .....	14
2-2.2 BUS CLOCK SELECT .....	15
2-2.3 CPU FREQUENCY .....	16
2-3 JUMPER DEFINITIONS .....	17
2-4 CONNECTORS .....	20
2-4.1 J2 AND J3 .....	20
2-4.2 CHASSIS PANEL CONNECTOR .....	23
2-4.3 FLAT-PANEL DISPLAY CONNECTOR .....	24
2-4.4 ATX POWER SUPPLY CONNECTOR .....	24
2-4.5 SECOND USB CONNECTOR .....	25
2-4.6 PS/2 MOUSE AND PS/2 KEYBOARD .....	26
2-4.7 IRQ DESCRIPTION .....	26
2-5 VOICE DIANOSTIC FUNCTION --- 6VIP-VMX.....	28

## CHAPTER 3

<b>SOFTWARE SETUP .....</b>	<b>29</b>
3-1 ABOUT SUPPORT CD .....	29
3-2 VIA CHIPSET DRIVER INSTALLATION (4-IN-1 DRIVER) .....	29

3-3 ONBOARD S3® SAVAGE4™ VGA DRIVER INSTALLATION .....	33
3-4 AC'97 AUDIO CODEC INSTALLATION .....	34
3-5 HARDWARE MONITOR INSTALLATION .....	35

## CHAPTER 4

<b>BIOS SETUP .....</b>	<b>36</b>
4-1 INTRODUCE THE BIOS .....	36
4-2 WHAT IS BIOS SETUP .....	36
4-3 HOW TO RUN BIOS SETUP .....	36
4-4 WHAT IS CMOS .....	36
4-5 WHAT IS POST .....	37
4-6 BIOS UPGRADE .....	37
4-6.1 BEFORE UPGRADE BIOS .....	37
4-6.2 UPGRADE PROCESS .....	37
4-7 CMOS SETUP UTILITY .....	40
4-8 STANDARD CMOS SETUP .....	41
4-9 ADVANCED BIOS FEATURES .....	44
4-10 ADVANCED CHIPSET FEATURES .....	48
4-11 INTEGRATED PERIPHERALS .....	53
4-12 POWER MANAGEMENT SETUP .....	58
4-13 PNP / PCI CONFIGURATION .....	64
4-14 PC HEALTH STATUS .....	67
4-15 FREQUENCY/VOLTAGE CONTROL .....	68
4-16 LOAD OPTIMIZED DEFAULTS .....	68
4-17 SET SUPERVISOR / USER PASSWORD .....	70
4-18 SAVE & EXIT SETUP .....	71
4-19 EXIT WITHOUT SAVING .....	71

# CHAPTER 1

## INTRODUCTION

### 1-1 ITEM LIST CHECKUP

- Motherboard
- Support CD
- User's Manual
- Temperature Sensor Cable
- ATA66 IDE Cable
- RS232 Cable

### 1-2 CPU

- Supports Intel® FC-PGA370 Pentium® III up to 1GHz, and FC-PGA370 Celeron™ & PPGA370 Celeron processors up to 700MHz.
- Supports VIA Cyrix III processors up to 600MHz.
- Supports 66 to 200 MHz system bus speed.
- Supports processor voltage Auto-Detect circuit.

### 1-3 CHIPSET

- Adopts VIA PM133 North Bridge chipset and VIA VT82C686A South Bridge chipset.
- VIA PM133 North Bridge:
  - Integrated VIA Apollo Pro 133A and S3® Savage4 in a single chip.
  - AGP Expansion Interface supporting AGP 4x, 2x, or 1x external AGP graphics card upgrade.
  - 64-bit Advanced Memory controller supporting PC100/PC133 SDRAM.
  - AGP Specification Rev. 2.0 compliant.
  - Supports SideBus Addressing (SBA) mode.
  - Supports 266MHz 4x mode for AD and SBA signaling.
- VIA VT82C686A South Bridge:
  - Integrated ISA Bus Controller with integrated DMA, timer, and interrupt controller.
  - Integrated Keyboard Controller with PS2 mouse support.
  - Integrated USB Controller with root hub and 4 function ports.
  - Integrated UDMA-33/66 master mode EIDE controller with enhanced

PCI bus commands.

- PCI-2.2 compliant with delay transaction and remote power management.
- Supports ATAPI compliant devices including DVD devices.
- Supports PCI native and ATA compatibility modes.
- APM v1.2 and ACPI v1.0 compliant.

## 1-4 MEMORY

- Supports 3 DIMMs or 6 banks for up to 1.5GB of DRAM (256MB DRAM technology)
- DRAM interface runs synchronous (66/66, 100/100, 133/133) mode or pseudo-synchronous (66/100, 100/66, 100/133, 133/100) mode with FSB.
- Concurrent CPU, AGP, and PCI access.

## 1-5 BIOS

- Award BIOS 6.0
- Supports Plug & Play (PnP).
- Flash Memory for easy upgrade.
- Supports Advanced Power Management (APM) Rev 1.2 function.
- Advanced Configuration Power Management Interface (ACPI) Rev 1.0 compliant.
- Year 2000 compliant.

## 1-6 MULTI-I/O FUNCTION

- One floppy port supports up to 2.88MB.
- Provides 2 Built-In USB connector set.(Another 2 Built-In USB connector set requires optional USB connector cable.)
- Ultra ATA33/66 bus master IDE supports up to 4 IDE devices (including ZIP / LS-120 floppy devices).
- 2x 16550A Built-In fast UART compatible serial port connectors.
- Built-In SPP/EPP/ECP parallel port connector.
- Built-In standard IrDA TX/RX header.
- Peripherals boot function with ATX power.

## 1-7 FORM FACTOR

- Micro ATX form factor, 4 layers PCB.
- Motherboard size: 22.0cm x 24.5cm

## 1-8 S3 SAVAGE4 ACCELERATOR

- Optimized Share Memory Architecture (SMA).
- 2 to 32MB frame buffer using system memory.
- Single cycle 128-bit 3D architecture.
- Full AGP 4x, including sideband addressing and execute mode.
- S3 DX7 texture compression (S3TC).
- High quality DVD video playback.
- Digital Visual Interface (DVI) 1.0 compliant.
- Flat Panel Monitor supports for all resolutions up to 1280x1024.
- 2D/3D resolutions up to 1920x1440.
- MPEG-2 video textures.
- Digital port for NTSC/PAL TV encoder.

## 1-9 AC'97 CODEC FUNCTION


- Onboard AC'97 Audio Codec controller chip.

## 1-10 OTHERS

- PCI 2.2 compliant, 32-bit 3.3V PCI interface with 5V tolerant inputs.
- Provides 3 PCI master slots, 1 AGP 4x slot, 3 DIMM sockets, and 1 DVC slot.
- Clock Generator supports 1MHz linear clock setting.
- Provides DIP switch for easy setting.
- Supports SCSI, CD-ROM, ZIP, and LS-120 boot up function.
- Supports Wake On LAN (WOL) boot up function.
- Supports BIOS Writing Protection.
- Supports BIOS CPU Core Voltage setting. (optional)
- Supports Hardware Monitor function.
- Supports Voice Diagnostic function for easy debug. (**6VIP-VMX** Only)
- Supports Suspend To RAM (STR) function.

# 1-11.1 MOTHERBOARD LAYOUT --- 6VIP-VM


- Default Setting: Intel Celeron 300A/66 MHz

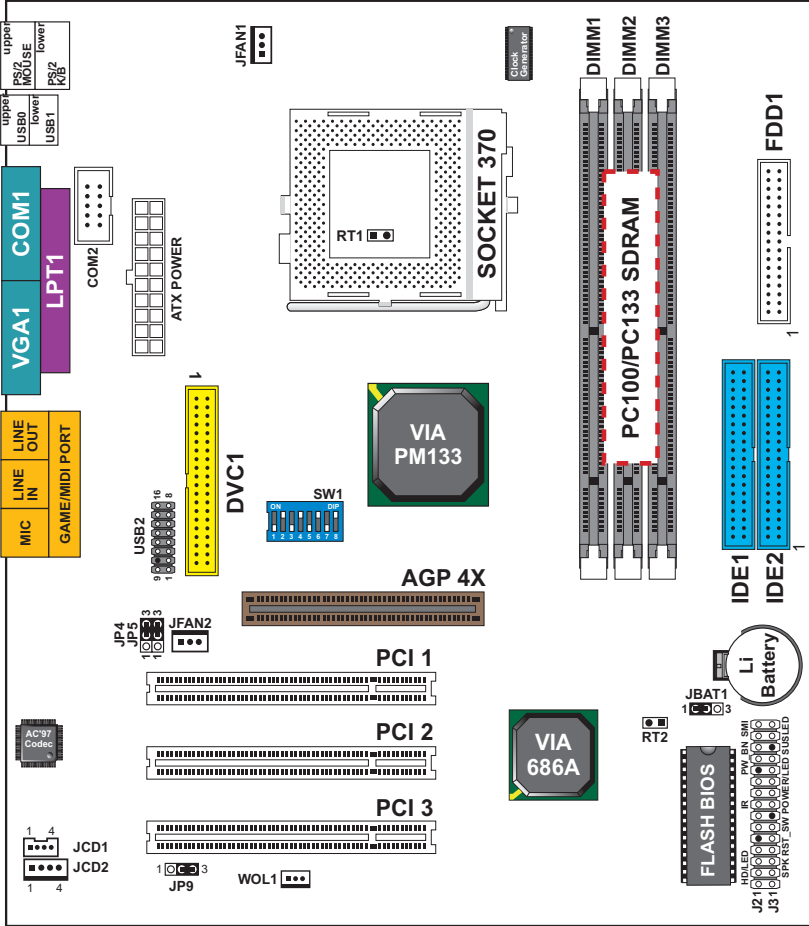



## 1-11.2 MOTHERBOARD LAYOUT --- 6VIP-VMX

- Default Setting: Intel Celeron 300A/66 MHz

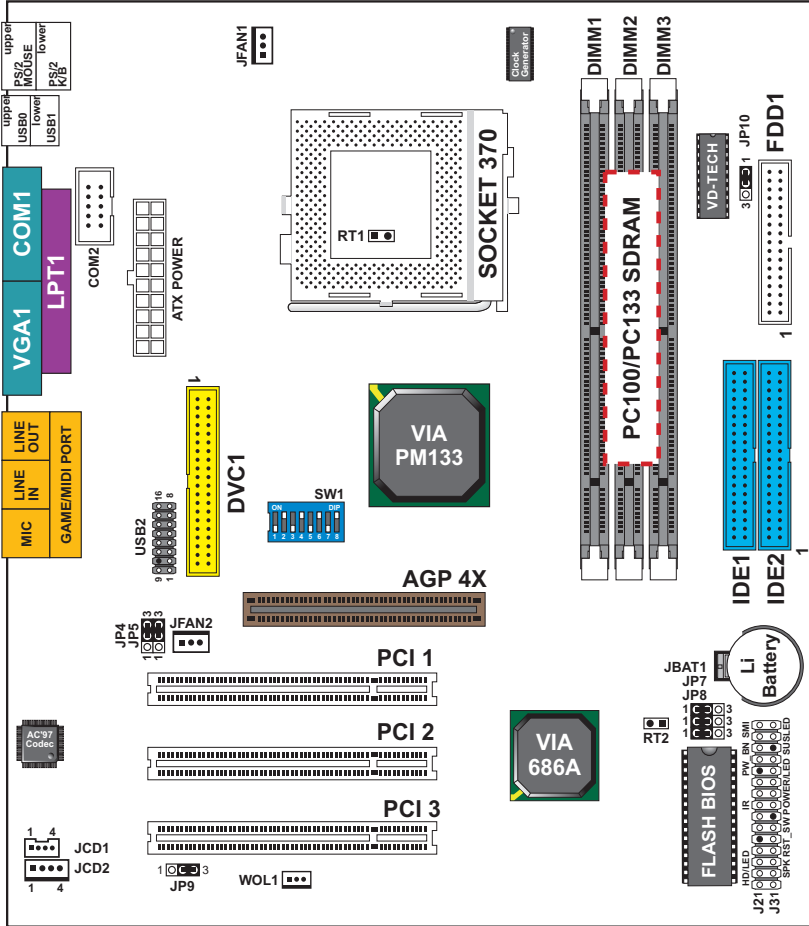

## 1-12 FLAT PANEL DESKTOP MONITOR SUPPORT

- The VT8605 / 86C370 has the capability of displaying graphics on TFT flat panel desktop monitors using a 12-bit digital interface to an external encoder. The VT8605 / 86C370 also supports autoexpansion and centering of all VGA text and graphics modes to ensure that the entire flat panel display will be utilized. All resolutions are supported up to 1280 x 1024 by flat panel desktop monitor. The resolution is Digital Visual Interface 1.0 specification compliant.


## 1-13 HIGH SCREEN RESOLUTION CRT SUPPORT

Resolution Supported	System Memory Frame Buffer Size (8MB Default)		
	4MB	8MB	16/32MB
640x480x8 /16/ 32	4MB	8MB	16/32MB
800x600x8 /16/ 32	✓	✓	✓
1024x768x8 /16/ 32	✓	✓	✓
1280x1024x8	✓	✓	✓
1280x1024x16	✓	✓	✓
1280x1024x32		✓	✓
1600x1200x8	✓	✓	✓
1600x1200x16	✓	✓	✓
1600x1200x32		✓	✓
1920x1440x8	✓	✓	✓
1920x1440x16		✓	✓

### High Screen Resolution CRT Support

## 1-14 CHIPSET DIAGRAM

- The VT8605 is a high performance, cost-effective and energy efficient SMA chip set for the implementation of AGP / PCI / LPC desktop personal computer system with 66MHz, 100MHz, and 133MHz CPU host bus (“Front Side Bus”) frequencies and based on 64-bit Socket-370 (Intel Pentium III, Celeron) super-scalar processors. VT8605 is the VIA part number.

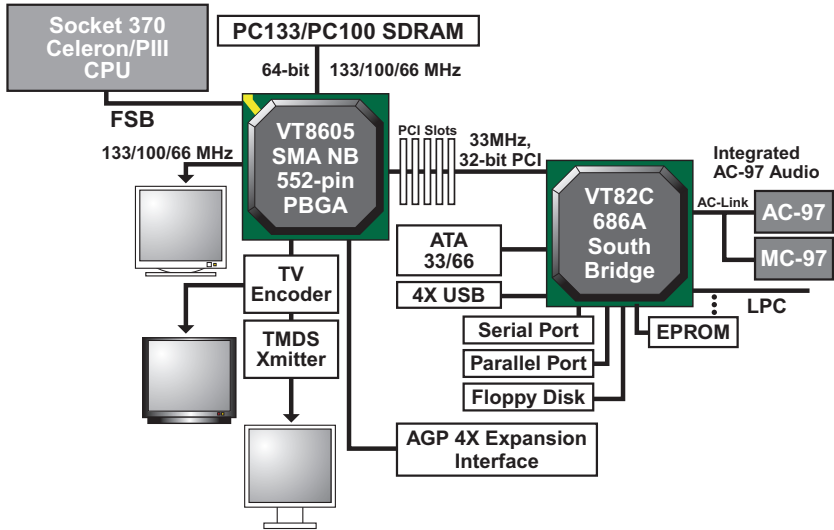


VT8605 System Block Diagram with VT82C686A PCI-TO-ISA South Bridge

# CHAPTER 2


## HARDWARE SETUP

### 2-1 CPU INSTALLATION


1. Pull the lever sideways away from the socket, and then raise the lever up to a 90-degree angle.

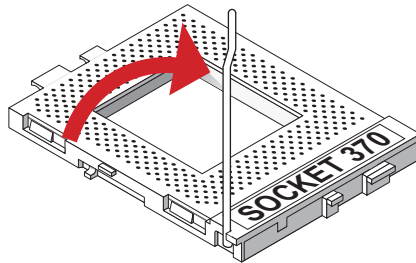

2. Take note of the red circle as below picture. When insert the CPU into socket, you can find out there is a definite pin orientation for CPU and socket.

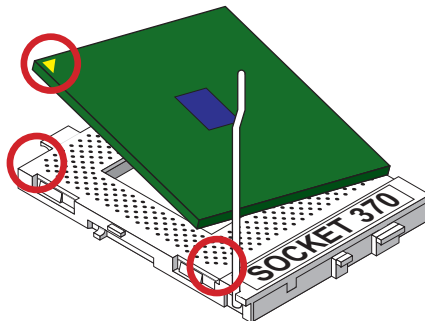

3. Make sure that the CPU positions in the socket tightly, and then put the lever down to complete the CPU installation.

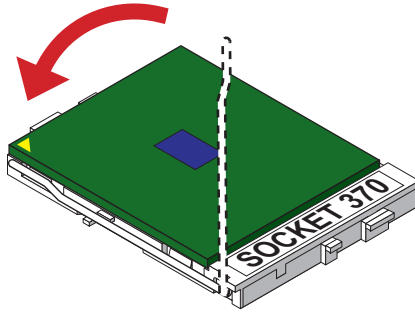

## 2-2.1 BUS RATIO SELECT

SW1 DIP1 ~ DIP4 SETTING			
3.0x	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8	3.5x	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8
	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8		<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8
4.0x	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8	4.5x	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8
	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8		<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8
5.0x	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8	5.5x	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8
	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8		<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8
6.0x	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8	6.5x	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8
	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8		<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8
7.0x	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8	7.5x	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8
	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8		<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8
8.0x	<input type="checkbox"/> ON <input type="checkbox"/> OFF 1 2 3 4 5 6 7 8		

## 2-2.2 BUS CLOCK SELECT

SW1 DIP5 ~ DIP8 SETTING	
<p>ON</p> <p>1 2 3 4 5 6 7 8</p>	<p>Auto Select 66/100/133 MHz (default)</p>
<p>ON</p> <p>1 2 3 4 5 6 7 8</p>	<p>66MHz</p>
<p>ON</p> <p>1 2 3 4 5 6 7 8</p>	<p>100MHz</p>
<p>ON</p> <p>1 2 3 4 5 6 7 8</p>	<p>133MHz</p>

## 2-2.3 CPU FREQUENCY



Manual DIP switches for diverse CPUs																									
<p>ON</p> <table border="1"> <tr><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr> <tr><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td></tr> </table>	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	1	2	3	4	5	6	7	8	<p>Celeron 266/66 (66MHz * 4.0x)                      Pentium II 400/100 (100MHz * 4.0x)                      Pentium III 533EB/133 (133MHz * 4.0x)<sup>#</sup></p>
ON	ON	ON	ON	ON	ON	ON	ON																		
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF																		
1	2	3	4	5	6	7	8																		
<p>ON</p> <table border="1"> <tr><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr> <tr><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td></tr> </table>	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	1	2	3	4	5	6	7	8	<p>Celeron 300/66 (66MHz * 4.5x)                      Pentium II/III 450/100 (100MHz * 4.5x)                      Pentium III 600EB/133 (133MHz * 4.5x)<sup>#</sup></p>
ON	ON	ON	ON	ON	ON	ON	ON																		
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF																		
1	2	3	4	5	6	7	8																		
<p>ON</p> <table border="1"> <tr><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr> <tr><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td></tr> </table>	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	1	2	3	4	5	6	7	8	<p>Celeron 333/66 (66MHz * 5.0x)                      Pentium II/III 500/100 (100MHz * 5.0x)                      Pentium III 500E/100 (100MHz * 5.0x)<sup>#</sup>                      Pentium III 667B/133 (133MHz * 5.0x)<sup>#</sup></p>
ON	ON	ON	ON	ON	ON	ON	ON																		
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF																		
1	2	3	4	5	6	7	8																		
<p>ON</p> <table border="1"> <tr><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr> <tr><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td></tr> </table>	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	1	2	3	4	5	6	7	8	<p>Celeron 366/66 (66MHz * 5.5x)                      Pentium II/III 550/100 (100MHz * 5.5x)                      Pentium III 550E/100 (100MHz * 5.5x)<sup>#</sup>                      Pentium III 733B/133 (133MHz * 5.5x)<sup>#</sup></p>
ON	ON	ON	ON	ON	ON	ON	ON																		
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF																		
1	2	3	4	5	6	7	8																		
<p>ON</p> <table border="1"> <tr><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr> <tr><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td></tr> </table>	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	1	2	3	4	5	6	7	8	<p>Celeron 400/66 (66MHz * 6.0x)                      Pentium II/III 600/100 (100MHz * 6.0x)                      Pentium III 600E/100 (100MHz * 6.0x)<sup>#</sup></p>
ON	ON	ON	ON	ON	ON	ON	ON																		
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF																		
1	2	3	4	5	6	7	8																		
<p>ON</p> <table border="1"> <tr><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr> <tr><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td></tr> </table>	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	1	2	3	4	5	6	7	8	<p>Celeron 433/66 (66MHz * 6.5x)                      Pentium II/III 650/100 (100MHz * 6.5x)                      Pentium III 650/100 (100MHz * 6.5x)<sup>#</sup></p>
ON	ON	ON	ON	ON	ON	ON	ON																		
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF																		
1	2	3	4	5	6	7	8																		
<p>ON</p> <table border="1"> <tr><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr> <tr><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td></tr> </table>	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	1	2	3	4	5	6	7	8	<p>Celeron 466/66 (66MHz * 7.0x)                      Pentium III 700/100 (100MHz * 7.0x)<sup>#</sup></p>
ON	ON	ON	ON	ON	ON	ON	ON																		
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF																		
1	2	3	4	5	6	7	8																		
<p>ON</p> <table border="1"> <tr><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr> <tr><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td></tr> </table>	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	1	2	3	4	5	6	7	8	<p>Celeron 500/66 (66MHz * 7.5x)                      Pentium III 750/100 (100MHz * 7.5x)<sup>#</sup></p>
ON	ON	ON	ON	ON	ON	ON	ON																		
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF																		
1	2	3	4	5	6	7	8																		
<p>ON</p> <table border="1"> <tr><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr> <tr><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td></tr> </table>	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	1	2	3	4	5	6	7	8	<p>Celeron 533/66 (66MHz * 8.0x)</p>
ON	ON	ON	ON	ON	ON	ON	ON																		
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF																		
1	2	3	4	5	6	7	8																		
<p>Over 8.0x</p>	<p>Using these CPUs which bus ratio exceed 8.0x, user can not change all values from the DIP switch but detection by BIOS automatically.</p>																								

## 2-3 JUMPER DEFINITIONS

- The figure below shows the location of the motherboard's jumper blocks.

### CAUTION

- Do not move the jumper with the power on. Always turn off the power and unplug the power cord from the computer before changing the jumper. Otherwise, the motherboard could be damaged.

JFAN1/JFAN2: ONBOARD FAN (12V)	
CPU FAN	JFAN1 
SYSTEM FAN	JFAN2 

 
 
Those connectors support processor/system/chassis cooling fan with +12V. Those support three pin head connector. When connecting the wire to FAN connectors, user should give attention that the red wire is the positive and should be connected to the +12V, the black wire is Ground and should be connected to GND. If your motherboard has Hardware Monitor chipset on-board, you must use a specially designed fan with speed sensor to take advantage of this function.

For fans with fan speed sensor, every rotation of the fan will send out 2 pulses. System Hardware Monitor will count and report the fan rotation speed.






 




NOTE 1: Always consult vendor for proper CPU cooling fan.



NOTE 2: CPU FAN supports the FAN control. You can install PC Alert utility. This will automatically control the CPU FAN speed according to the actual CPU temperature.

JP4/JP5: USB PORT SELECT (2)	
Redirect USB port 2 to USB 2 connector (default)	
Redirect USB port 2 to AGP	







JP7/JP8: VOICE DIAGNOSTIC LANGUAGE SELECT	
Chinese Language	JP7  JP8 
English Language (default)	JP7  JP8 
Japanese Language	JP7  JP8 
Spanish Language	JP7  JP8 

**NOTE: JP7 and JP8 are supported by 6VIP-VMX only.**

JP9: POWER LOST RESUME	
Normal (default)	JP9 
Enabled	JP9 

**NOTE: This jumper allows user to use the switch of ATX power supply to control ON/OFF switch directly instead of using the power switch on the motherboard.**

JP10: Super-Voice CONTROLLER CHIP	
Enabled (default)	JP10 
Disabled	JP10 

JBAT1: CLEAR CMOS DATA	
Clear CMOS Data	JBAT1 
Retain Data (default)	JBAT1 


**NOTE: We recommend user to unplug the power cord from ATX power supply to take precautions. Clear CMOS memory by shorting this jumper pin 2 & pin3 momentarily, and then remove the cap back to pin 1 & pin2 to retain original CMOS setting.**

**WOL1 : WAKE ON LAN (WOL) FUNCTION**

Connect the Wake On LAN signal from LAN card to WOL1

**WOL1**

**NOTE: For support WOL function, the ATX power supply must provide at least 5V / 720mA standby current.**

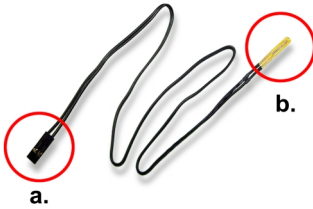**RT2: THERMAL SENSOR CONNECTOR**

- a: Connect to RT2.  
 b: Connect this thermal sensor to particular device which generates lots of heat such as Hard Driver, VGA chip, etc.,. When connected, user could observe the temperature change from the BIOS program.

**JCD1/JCD2: CD-ROM AUDIO CONNECTOR**

PIN NO.	JCD1	JCD2
<b>PIN 1</b>	<b>GND</b>	<b>Left Channel</b>
<b>PIN 2</b>	<b>Left Channel</b>	<b>GND</b>
<b>PIN 3</b>	<b>GND</b>	<b>GND</b>
<b>PIN 4</b>	<b>Right Channel</b>	<b>Right Channel</b>

**USB2: 2nd USB Connector Set**

**MIC port: Microphone Jack**

 
**Line In port: Audio In Jack**

**Line Out / Speaker Out port: Audio Out Jack**


## 2-4 CONNECTORS

- In this section we list all external connectors that user will use them.

### 2-4.1 J2 AND J3




HDD LED CONNECTOR	
PIN 1	+5V
PIN 2	HDD LED SIGNAL
PIN 3	HDD LED SIGNAL
PIN 4	+5V
DESCRIPTION	This connector supplies power to the cabinet's IDE activity LED. Read and write activity by devices connected to the Primary or Secondary IDE connector will cause the LED to light up.

 


INFRARED CONNECTOR	
PIN 6	INFRARED TRANSMIT SIGNAL
PIN 7	GND
PIN 8	INFRARED RECEIVE SIGNAL
PIN 9	NONE
PIN 10	+5V
DESCRIPTION	This connector supports an optional wireless transmitting and receiving infrared module. This module mounts to a small opening on system cases that support this feature. User must also configure the setting through BIOS program "Peripheral Setup" to select whether UART2 is directed for use with COM2 or IrDA. Use the five pins and connect a ribbon cable from the module to the motherboard's IR connector according to the pin definitions.



ATX POWER SWITCH	
PIN 12	ATX POWER SWITCH
PIN 13	GND
DESCRIPTION	<p>The system power is controlled by a momentary switch connected to this lead. Pressing the button once will switch the system between ON and SOFT OFF. Pushing the switch while in the ON mode for more 4 seconds will turn the system off. The system power LED shows the status of the system's power.</p>

 

SMI CONNECTOR	
PIN 14	SMI(System Managment Interrupt) SIGNAL
PIN 15	GND
DESCRIPTION	<p>This allows user to manually place the system into a suspend mode or "Green" mode, where system activity is decreased to save electricity and prolong the life of certain components when the system is not in use. This 2-pin connector connects to the case-mounted suspend switch. If you do not have a switch for the connector, you may use the "Turbo Switch".</p> <p>SMI is activated when it detects a short to open moment and therefore leaving it shorted will not cause any problems. This may require one or two presses depending on the position of the switch. Wake-Up can be controlled by settings in the BIOS but the keyboard will always allow wake-up(the SMI lead cannot wake up the system).</p>

 

SPEAKER CONNECTOR	
PIN 1	SPEAKER SIGNAL
PIN 2	NONE
PIN 3	GND
PIN 4	+5V
DESCRIPTION	This SPEAKER connector connects to the case-mounted speaker. Two sources (LINE OUT and SPEAKER) allow you to hear system beeps and warnings. Only SPEAKER allows you to hear system beeps before the integrated audio has been properly initialized.



RESET SWITCH CONNECTOR	
PIN 5	RESET SIGNAL
PIN 6	GND
DESCRIPTION	RESET SWITCH connector connects to the case-mounted reset switch for rebooting your system without having to turn off your power switch. This is a preferred method of reboot to prolong the life of the system's power supply.




POWER LED CONNECTOR	
PIN 8	+5V
PIN 9	NONE
PIN 10	GND
DESCRIPTION	This Power LED connector connects the system power LED, which lights when the system is powered on and blinks when it is in sleep mode.



SUSPEND LED	
PIN 14	SUSPEND LED SIGNAL
PIN 15	GND
DESCRIPTION	Connect to Suspend indicator light.

## 2-4.2 CHASSIS PANEL CONNECTOR

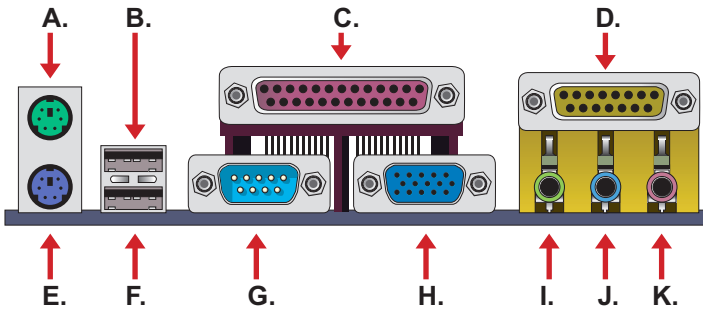


- A : PS/2 MOUSE PORT
- B : USB 0 PORT
- C : LPT1 PORT
- D : GAME/MIDI PORT
- E : PS/2 KEYBOARD PORT
- F : USB 1 PORT
- G : COM1 PORT
- H : VGA PORT
- I : LINE / SPEAKER OUT
- J : LINE IN
- K : MICROPHONE

### 2-4.3 FLAT-PANEL DISPLAY CONNECTOR

- This motherboard provides a special socket “ **DVC1** ” for user to connect to a flat-panel display adapter kit, and then connect it to a LCD monitor. This flat-panel display adapter kit can be purchased from your motherboard's vendor and manufacturer. (This adapter kit does not unveil by the end of May 2000, but user can still get further details from your motherboard dealer or website )


### 2-4.4 ATX POWER SUPPLY CONNECTOR

- This connector connects to an ATX power supply. The plug from the power supply only inserts in an orientation because of the different hole sizes. Find the proper orientation and push down firmly making sure that all pins are aligned.
- Reminding that your power supply should support at least 10mA on the 5V standby voltage. It may cause an difficulty to power on the system if the power supply cant support the load.
- **For Wake On LAN function, the power supply should support at least 720mA current.**

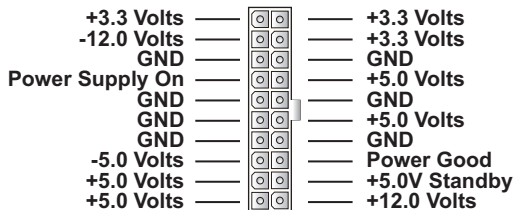


## 2-4.5 SECOND USB CONNECTOR


- This motherboard provides 4 sets of USB connector. Besides 2 sets of them can be connected directly by USB devices, the other are built onboard for user to extend the USB function.

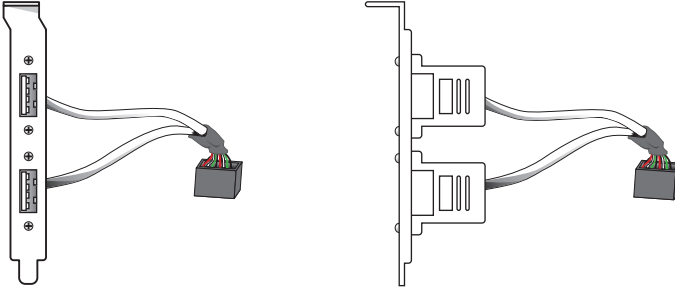

2nd USB Connector (Optional)

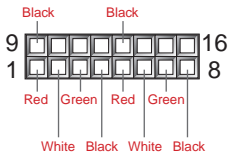


**USB 2**

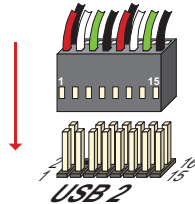




## 2-4.6 PS/2 MOUSE AND PS/2 KEYBOARD

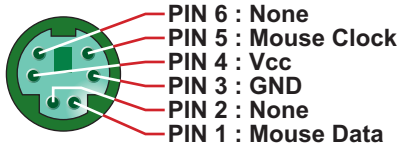

**PS/2 MOUSE**

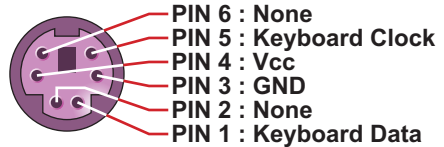

**PS/2 KEYBOARD**

## 2-4.7 IRQ DESCRIPTION

IRQ	Function Description	Priority
IRQ 0	System Timer	1
IRQ 1	Keyboard Controller	2
IRQ 2	Programmable Interrupt	N/A
IRQ 3	Serial Port (COM 2)	11
IRQ 4	Serial Port (COM 1)	12
IRQ 5		13
IRQ 6	Floppy Disk Controller	14
IRQ 7	Parallel Port (LPT1)	15
IRQ 8	Real Time Clock (RTC)	3
IRQ 9		4
IRQ 10		5
IRQ 11		6
IRQ 12	PS/2 Mouse Port	7
IRQ 13	Coprocessor	8
IRQ 14	Primary IDE Channel	9
IRQ 15	Secondary IDE Channel	10

- Both ISA and PCI expansion cards may require IRQs. System IRQs are available to cards installed in the ISA expansion bus first, then any remaining IRQs are available to PCI cards. Currently, there are two types of ISA cards.
- The original ISA expansion card design, now referred to as “Legacy” ISA

card, requires that you configure the card's jumpers manually and then install it in any available slot on the ISA bus. To see a map of your used and free IRQs in Windows 98, the *Control Panel* in *My Computer*, contains a *System* icon, which gives you a *Device Manager* tab. Double-Clicking on a specific hardware device gives you a *Resources* tab which shows the Interrupt number and address. Double-Clicking *Computers* to see all the interrupts and addresses for your system. Make sure that no two devices use the same IRQ or your computer will experience problems when those two devices are in use at the same time.

## 2-5 VOICE DIANOSTIC FUNCTION --- 6VIP-VMX

- The Voice Diagnostic Function provides user an indispensable assistance on troubleshooting while assembling your computer components. If there is any conflict or other latent problem triggers a boot-up failure, this new Super-Voice technology will voice you realistically where the conflict problem is, then user can remove the malfunction quickly.
- This function mainly provides 4 languages and their contents as following table:

<b>English Voice Content</b>
<ol style="list-style-type: none"><li>1. No memory module</li><li>2. Please check memory module</li><li>3. Please clear CMOS setting</li><li>4. Please check the Video adapter</li><li>5. Please check hard disk cable or setting</li></ol>
<b>國語語音內容</b>
<ol style="list-style-type: none"><li>1. 未安裝記憶體</li><li>2. 請檢查記憶體</li><li>3. 請清除 CMOS 設定</li><li>4. 請檢查顯示卡</li><li>5. 請檢查硬碟接線及設定</li></ol>
<b>El Contenido Español de la Voz</b>
<ol style="list-style-type: none"><li>1. No hay modulo de memoria</li><li>2. Por favor, chequea el modulo de memoria</li><li>3. Por favor, borra CMOS setting</li><li>4. Por favor, chequea la tarjeta de video</li><li>5. Por favor, chequea el cable o la instalacion del disco duro</li></ol>
<b>日本語音內容</b>
<ol style="list-style-type: none"><li>1. メモリーないじゃん (メモリーがありません)</li><li>2. メモリーだめだめ (メモリーをチェックして下さい)</li><li>3. CMOS だめっす? (CMOSの内容をクリアして下さい)</li><li>4. VGA どう? (ビデオカードをチェックして下さい)</li><li>5. ハードディスクつながってる? (HDDケーブル又は設定をチェックして下さい)</li></ol>

# CHAPTER 3

## SOFTWARE SETUP

### 3-1 ABOUT SUPPORT CD

- In support CD, it contains most informations for user's requirement, such as Acrobat Reader, BIOS, User's Manual, Driver, Hardware Monitor (if motherboard supports this function), Patch, and Utility etc,. User can browse the CD and get further details in regard of our motherboard. Of course, welcome to vendor's website for the newest release.

### 3-2 VIA CHIPSET DRIVER INSTALLATION (4-IN-1 DRIVER)

Step 1:

- Please put the Support CD attached to motherboard into the CD-ROM drive.
- When appears a welcome window as left screen, then user should choose "**Mainboard Driver**".

Step 2:


- Click on the "**MP-6VIP-VM / 6VIP-VMX**".

Step 3:

- Click on the "**VIA Service Pack 4**".


Step 4:

- Click on the "**Next**" to continue.

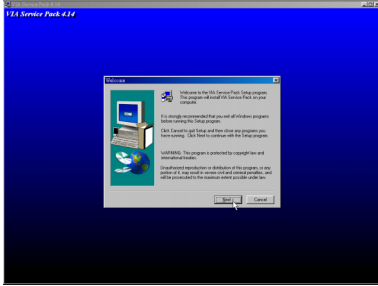


Step 5:

- Press Next button to continue.

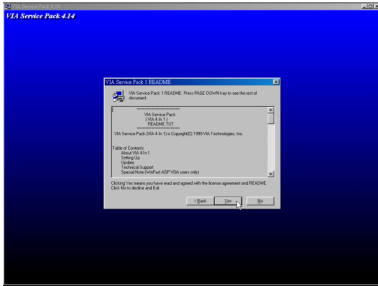

Step 6:


- Click “Yes” to continue.

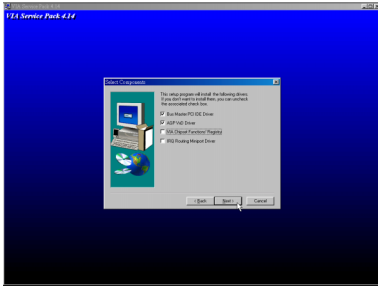

Step 7:


- Press select the checkbox as below:
  - ☑ Bus Master PCI IDE Driver
  - ☑ AGP VxD Driver
  - ☐ VIA Chipset Function's Registry
  - ☐ IRQ Routing Miniport Driver

Note: In Windows 98SE environment, user does not need to add “VIA Chipset Function's Registry” and “IRQ Routing Miniport Driver” items.

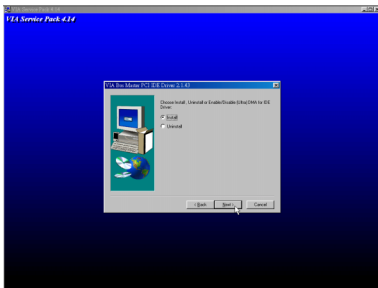

Step 8:


- Click “Install” and Press Next button to continue.

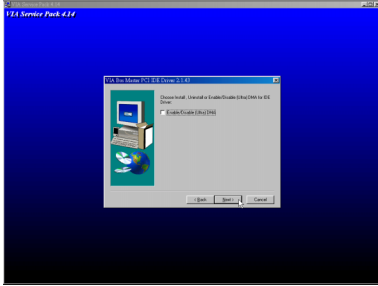

Step 9:


- We recommend user to leave “**Enable / Disable [Ultra] DMA**” checkbox empty.

Note: Whether select this item or not, user needs to enable the Hard Disk DMA function in Control Panel manually. (For further details, please refer to next page)

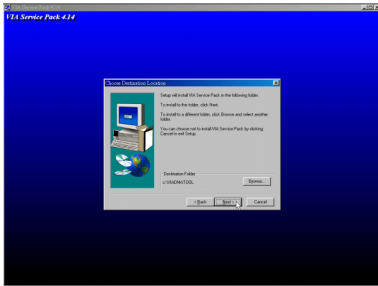


Step 10:

- The default setup destination is C:\VIADMATOOL, press Next button to continue.

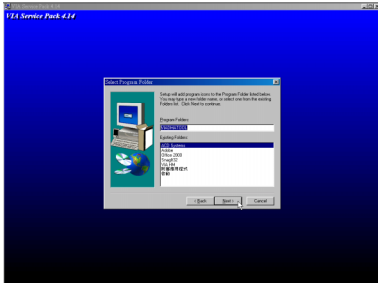


Step 11:

- Press Next button to continue.

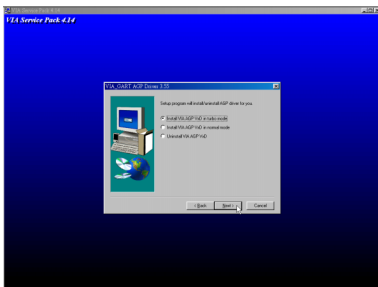

Step 12:

- Select “**Install VIA AGP VxD**” in turbo mode and press Next button to continue.

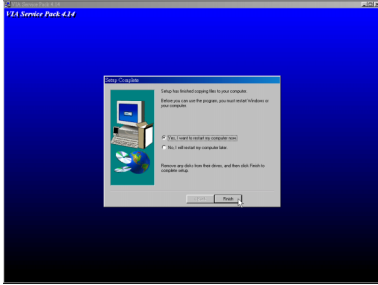

Step 13:

- After all the setup process is finished, please restart your computer by clicking on Finish.

## **A**bout Hard Disk DMA Function

Last but not least, user must enable the Hard Disk DMA function. The process is below:

1. [Start] [Setting] [Control Panel] [System] [Device Manager].
2. In Device Manager, select [Disk Drivers] [GENERIC IDE TYPEXX].
3. Select [Properties] for GENERIC IDE TYPEXX.
4. In Properties, select [Settings].
5. In Option item, select the DMA checkbox.
6. Restart your computer.

### 3-3 ONBOARD S3® SAVAGE4™ VGA DRIVER INSTALLATION

- We provide a simple process for user to install the S3® Savage4 VGA driver. Whichever Microsoft Windows operating system user adopts, they have similar installation below.

1. Start system with Windows 9X installed.
2. From “Start”, select the “Setting group”, then click on the “control Panel” icon.
3. In the “Control Panel”, double click on the “Display” icon.
4. In the “Settings” screen, click on the “Display Type...” button.
5. From the “Display Type” screen, and in the “Adapter Type” section, click on the “Change...” button.
6. In the “Change Display” screen, click on the “Have Disk...” button.
7. Please find and run \MB\VIA\PM133\win9x\savagenb.inf, then click on the “OK” button.
8. From the list of displayed S3 devices, select your S3 device.
9. From “Third-party Drivers”, click on the “Yes” button to proceed.
10. If a message appears stating the driver is already installed on the system, and asks if you want to use the current or new drivers, be sure to select the “New” button.
11. Back at the “Display Type” window, click on the “Close” button.
12. Back at the “Display Properties” window, click on the “Close” button.
13. When you see the “System Settings Change” window, asking if you wish to restart your computer, click on the “Yes” window to reboot now.

---

#### Note:

- When windows explorer appears, please go to the directory \MB\VIA\PM133\ and its subdirectory, which depends on your operating system, and find the VGA installation file in it. The S3® Savage4 VGA driver mainly supports Windows 95 / 98 / 98SE or latest version, Windows NT 4.0, and Windows 2000.

Below list is the default position of individual VGA driver in CD directory. D:\ is the disk title where CD-ROM is, the actual title may be different from user's system.

<p><b>D:\MB\VIA\PM133\WIN9X\SAVAGENB.INF</b>  <b>D:\MB\VIA\PM133\W2K\S3SAVNB.INF</b>  <b>D:\MB\VIA\PM133\NT40\S3NB.INF</b></p>
--



### 3-4 VIA AC'97 AUDIO CODEC INSTALLATION

Step 1:


- Please put the Support CD attached to motherboard into the CD-ROM drive.
- When appears a welcome window as left screen, then user should choose “**Mainboard Driver**”.

Step 2:

- Click on the “**VIA AC'97 Audio Driver**”.


Step 3:

- Click on the “**Next**”.

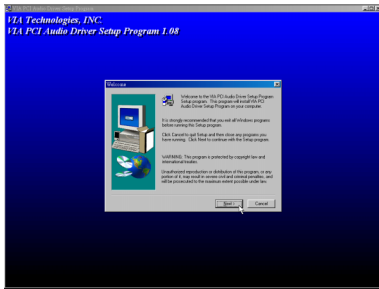


Step 4:

- Press Next button to continue.

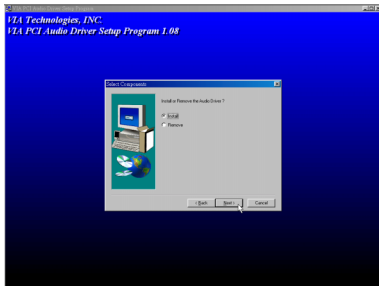

Step 5:

- When asking you install or remove the audio driver, please select “**Install**” and press Next button to continue.

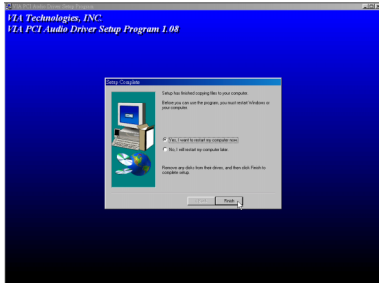

Step 6:

- It's recommended for user to restart the computer after the audio driver is finished. Please select “**Yes, I want to restart my computer now**”.

## 3-5 HARDWARE MONITOR INSTALLATION

Step 1:


- Please put the Support CD attached to motherboard into the CD-ROM drive.
- When appears a welcome window as left screen, then user should choose “**Mainboard Driver**”.

Step 2:

- Click on the “**Super-Cops III**”.


Step 3:

- Click on the “**Next**”.

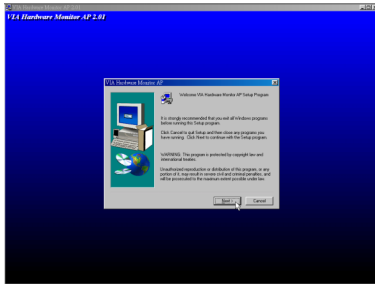


Step 4:

- Press **Next** button to continue.

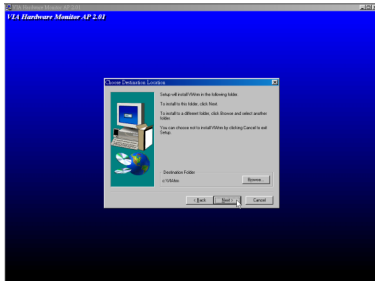

Step 5:

- The default destination is **C:\VIAhm**, then press **Next** button to continue.

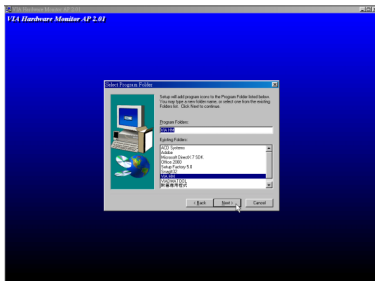

Step 6:

- Press **Next** button to finish the Hardware Monitor setup process.

# CHAPTER 4 BIOS SETUP

## 4-1 INTRODUCE THE BIOS

- BIOS stands for Basic Input Output System. It is sometimes called ROM BIOS because it is stored in a Read-Only Memory(ROM) chip on the motherboard. BIOS is the first program to run when you turn on your computer.
- BIOS performs the following functions:
  1. Initializing and testing hardware in your computer(a process called “POST”, for Power On Self Test).
  2. Loading and running your operating system.
  3. Helping your operating system and application programs to manage your PC hardware by means of a set of routines called BIOS Run-Time Service.

## 4-2 WHAT IS BIOS SETUP

- Setup is an interactive BIOS program that you need to run when:
  1. Changing the hardware on your system. (for example: installing a new Hard Disk etc.,)
  2. Modifying the behavior of your computer. (for example: changing the system time or date, or turning special features on or off etc.,)
  3. Enhancing your computer’s behavior. (for example: speeding up performance by turning on shadowing or caching)

## 4-3 HOW TO RUN BIOS SETUP

- One way of running SETUP is to press a special function key or key combination during POST, before the operating system is loaded during POST, the BIOS usually displays a prompt such as:

Press DEL to enter SETUP

## 4-4 WHAT IS CMOS

- CMOS is a special kind of memory maintained by a battery after you turn your computer off. The BIOS uses CMOS to store the settings you selected in SETUP. The CMOS also maintains the internal clock. Every time you turn on your computer, the BIOS Looks in CMOS for the settings you se-

lected and configures your computer accordingly. If the battery charge runs too low, the CMOS content will be lost and POST will issue a “CMOS invalid” or “CMOS checksum invalid” message. If this happens, you may have to replace the battery. After the battery is replaced, the proper settings will need to be stored in SETUP.

## **4-5 WHAT IS POST**

- POST is an acronym for Power On Self Test. It's a traditional name for the routines that the BIOS uses to test and initializes the devices on your system when the PC is powered on. Its meanings has grown to include anything the BIOS does before the operating system is started. Each of POST routines is assigned a POST code, an unique number which is sent to I/O port 080h before the routine is executed.

## **4-6 BIOS UPGRADE**

- Motherboards incorporate the system BIOS in a Flash memory component. Flash BIOS allows user upgrades without the need to replace an EPROM component.
- The upgrade utility fits on a floppy diskette and provides the capability to save, verify, and update the system BIOS. The upgrade utility can be run from a hard disk drive or a network drive, but no memory managers can be installed during upgrades.

### **4-6.1 BEFORE UPGRADE BIOS**

- It is recommended that you save a copy of the original motherboard BIOS along with a Flash EPROM Programming utility(AWDFLASH.EXE) to a bootable floppy disk in case you need to reinstall the BIOS later.

### **4-6.2 UPGRADE PROCESS**

- “AWDFLASH.EXE” is a Flash EPROM Programming utility that updates the BIOS by uploading a new BIOS file to the programmable flash ROM on the motherboard. This file only works in DOS mode. To determine the BIOS version, check the release date displayed on the top of your screen during bootup. Newer dates represents a newer BIOS file.

## MP-6VIP-VM / 6VIP-VMX

### *Create a Boot Floppy (using a DOS system to create the bootable floppy)*

- Place an unformatted floppy diskette in the floppy drive and format the floppy using the /S option.

*Example: format a: /s*

- Alternatively, place a formatted floppy in the floppy drive and use the “sys” command.

Example: sys a:

### *Create the BIOS Upgrade Floppy Diskette*

- Download both the newest BIOS file and AWDFLASH.EXE file via motherboard maker’s website.
- The BIOS file you downloaded will be a \*.bin format.
- Copy those two indispensable files to a bootable formatted floppy diskette.

*Example: copy awdf flash.exe a:*

*Example: copy \*.bin a:*

### *Upgrading the system BIOS*

- Place the bootable floppy containing the BIOS into Drive A: of the system that you want to upgrade and boot the system while the floppy diskette is in the drive.
- When booting is finished, type awdf flash \*.bin /sn/py/cc/r and then press <Enter> to run BIOS upgrade program. (\*.bin depends on your motherboard model and version code)

The parameters of AWDFLASH.EXE

/sn: No original BIOS backup


/py: Program flash memory

/cc: Clear CMOS data after programming

/r : Reset system after programming

**NOTE:** User can type AWDFLASH /? to get further details about parameters. Wrong usage of parameter will damage the BIOS information, so that we strongly recommend user to leave parameters away unless you realize their function.

- Then appears a program window as below:

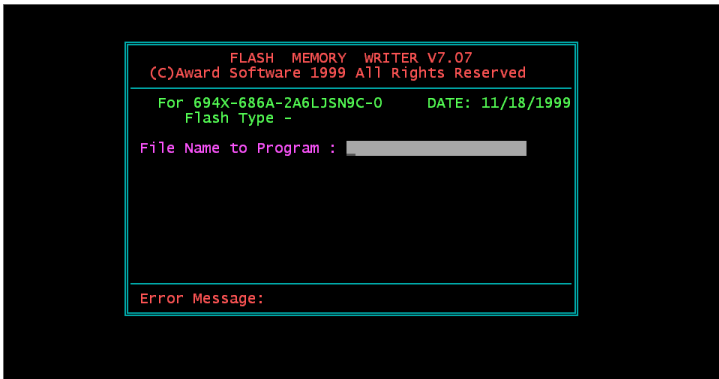A screenshot of a terminal window titled "FLASH MEMORY WRITER V7.07". The text is displayed in a monospaced font with various colors: red for the title and copyright, green for the hardware and date information, and purple for the file name prompt. The copyright notice reads "(C)Award Software 1999 All Rights Reserved". The hardware information is "For 694X-686A-2A6LJSN9C-0" and the date is "DATE: 11/18/1999". The flash type is listed as "Flash Type -". The prompt "File Name to Program :" is followed by a white rectangular input field. At the bottom of the window, there is a section labeled "Error Message:".

```
FLASH MEMORY WRITER V7.07
(C)Award Software 1999 All Rights Reserved

For 694X-686A-2A6LJSN9C-0    DATE: 11/18/1999
Flash Type -

File Name to Program : 

Error Message:
```

- After upgraded, the system will reboot itself automatically.
- **NOTE:** You will see a message “**CMOS checksum error - Default loaded**” during booting the system. Please press <Del> to run BIOS program, then reload “**LOAD SETUP DEFAULTS**” and save this change.

## 4-7 CMOS SETUP UTILITY

- This VIA PM-133 motherboard comes with the AWARD BIOS from AWARD Software Inc. Enter the Award BIOS program Main Menu by:
1. Turn on or reboot your system. After a series of diagnostic checks, the following message will appear:

**PRESS <DEL> TO ENTER SETUP**

2. Press the <DEL> key and the main program screen will appear as follows.

CMOS Setup Utility - Copyright (C) 1984 - 2000 Award Software

<ul style="list-style-type: none"> <li>▶ Standard CMOS Features</li> <li>▶ Advanced BIOS Features</li> <li>▶ Advanced Chipset Features</li> <li>▶ Integrated Peripherals</li> <li>▶ Power Management Setup</li> <li>▶ PnP/PCI Configurations</li> <li>▶ PC Health Status</li> </ul>	<ul style="list-style-type: none"> <li>▶ Frequency Control</li> <li>Load Optimized Defaults</li> <li>Set Supervisor Password</li> <li>Set User Password</li> <li>SAVE &amp; EXIT SETUP</li> <li>EXIT WITHOUT SAVING</li> </ul>
Esc : Quit <span style="float: right;">↑↓→← : Select Item</span> F10 : Save & Exit Setup	
Time, Date, Hard Disk Type...	

3. Using the arrows on your keyboard, select an option, and press <Enter>. Modify the system parameters to reflect the options installed in your system.
4. You may return to the Main Menu anytime by pressing <ESC>.
5. In the Main Menu, “SAVE AND EXIT SETUP” saves your changes and reboots the system, and “EXIT WITHOUT SAVING” ignores your changes and exits the program.

## 4-8 STANDARD CMOS SETUP

- Standard CMOS Setup allows you to record some basic system hardware configuration and set the system clock and error handling. You only need to modify the configuration values of this option when you change your system hardware configuration or the configuration stored in the CMOS memory gets lost or damaged.

Run the STANDARD CMOS SETUP as following:

1. Choose "STAND CMOS SETUP" from the Main Menu and a screen with a list of option will appear:

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
Standard CMOS Features

Date (mm:dd:yy)	Thu, Dec 30 1999	Item Help
Time (hh:mm:ss)	9 : 52 : 15	Menu Level ▶
▶ IDE Primary Master	Press Enter 13022 MB	
▶ IDE Primary Slave	Press Enter None	
▶ IDE Secondary Master	Press Enter None	
▶ IDE Secondary Slave	Press Enter None	
Drive A	1.44M, 3.5 in.	
Drive B	None	
Video	EGA/VGA	
Halt On	All Errors	
Base Memory	640K	
Extended Memory	31744K	
Total Memory	32768K	

↑ ↓ → ← : Move Enter : Select +/- / PU / PD : Value F10 : Save ESC : Exit F1 : General Help  
F5 : Previous Values F6 : Fail-Safe Defaults F7 : Optimized Defaults

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys.



**MP-6VIP-VM / 6VIP-VMX**

**Date (mm:dd:yy)** Set the current date and time.

**Time (hh:mm:ss)**

**Primary / Secondary Master / Slave** This field records the specifications for all non-SCSI hard disk drives installed in your system. Refer to the respective documentation on how to install the drives.

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
IDE Primary Master

IDE HDD Auto-Detection	Press Enter	Item Help
IDE Primary Master	Auto	Menu Level ▶▶
Access Mode	Auto	
Capacity	13022 MB	
Cylinder	25232	
Head	16	
Precomp	0	
Landing Zone	25231	
Sector	63	

↑ ↓ → ←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

**Drive A / Drive B** Set this field to the type(s) of floppy disk drive(s) installed in your system. The choices are:

- 360KB, 5.25in.,
- 1.2MB, 5.25in.,
- 720KB, 3.5in.,
- 1.44MB, 3.5in., Drive A (default)
- 2.88MB, 3.5in.,
- None., Drive B (default)

**Video** Set this field to the type of video display card installed in the system. The choices are:

Mono,  
EGA / VGA (default) ,  
CGA 40,  
CGA 80

**Halt On** Set this warning feature for the type of errors that will cause the system to halt. The choices are:

All Errors,  
No Errors,  
All, But Keyboard,  
All, But Diskette,  
All, But Disk / Key.

3. Press <ESC> to return to the Main Menu when you finish setting up all items.

## 4-9 ADVANCED BIOS FEATURES

- ADVANCED BIOS FEATURS allows you to improve your system performance or set up system features according to your preference.

Run the ADVANCED BIOS FEATURES as following:

1. Choose "ADVANCED BIOS FEATURES" from the Main Menu and a screen with a list of option will appear:
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys. An explanation of the <F> keys follows:

<F1>: "Help" gives options available for each item.

<F5>: Get the previous values. These values are the values with which the user started in the current session.

<F6>: Load all options with Fail-Safe default values.

<F7>: Load all options with Optimized default values.

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
Advanced BIOS Features

		Item Help
Virus Warning	Disabled	Menu Level ▶
CPU Internal Cache	Enabled	
External Cache	Enabled	
CPU L2 Cache ECC Checking	Enabled	
Processor Number Feature	Disabled	
Quick Power On Self Test	Enabled	
First Boot Device	Floppy	
Second Boot Device	HDD-0	
Third Boot Device	CDROM	
Boot Other Device	Enabled	
Swap Floppy Drive	Disabled	
Boot Up Floppy Seek	Disabled	
Boot Up NumLock Status	On	
Gate A20 Option	FAST	
Typematic Rate Setting	Disabled	
× Typematic Rate (Chars/Sec)	6	
× Typematic Delay (Msec)	250	
Security Option	Setup	
OS Select For DRAM > 64MB	Non-OS2	
Video BIOS Shadow	Enabled	
C8000-CBFFF Shadow	Disabled	
CC000-CFFFF Shadow	Disabled	
D0000-D3FFF Shadow	Disabled	
D4000-D7FFF Shadow	Disabled	
D8000-DBFFF Shadow	Disabled	
DC000-DFFFF Shadow	Disabled	

↑ ↓ → ←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

**Virus Warning** Enabled: Activates automatically when the system boots up causing a warning message to appear if there is anything attempting to access the boot sector or hard disk partition table.

Disabled: No warning message will appear when there is something attempting to access the boot sector or hard disk partition table.

**NOTE:** *Many diagnostic (or boot manager) programs which attempt to access the boot sector table can cause the above warning message. If you will be running such a program, we recommend that you disable the virus protection first.*

**CPU Internal Cache** Choose Enabled (default) or Disabled. This option allows you to enable or disable the CPU's internal cache.

**External Cache** Choose Enabled (default) or Disabled. This option allows you to enable or disable the external cache.

**CPU L2 Cache ECC Checking** This item allows you to enable/disable CPU L2 Cache ECC checking.  
The choice: Enabled, Disabled.

**Processor Number Feature** Choose Disabled or Enabled. When enabled, the processor serial number will display during the boot up screen.

**Quick Power On Self Test** Choose Enabled (default) or Disabled. This option allows you to speed up the Power-On Self-Test routine.

**First/Second/Third/Other Boot Device** The BIOS attempts to load the operating system from the devices in the sequence selected in these items.  
The choice: Floppy, LS/ZIP, HDD, SCSI, CDROM, Disabled.

**Swap Floppy Drive** Choose Enabled or Disabled (default). This option swaps floppy drive assignments when it is enabled.

- Boot Up Floppy Seek** Enabled : During POST, BIOS checks the track number of the floppy disk drive to see whether it is 40 or 80 tracks.  
Disabled: During POST, BIOS will not check the track number of the floppy disk drive.
- Boot Up NumLock Status** Choose ON (default) or OFF. This option lets user activates the NumLock function at boot-up.
- Gate A20 Option** Choose Normal or Fast (default). This option allows the RAM to access the memory above 1MB by using the fast gate A20 line.
- Typematic Rate Setting** Choose Enabled or Disabled (default). Enable this option to adjust the keystroke repeat rate.
- Typematic Rate (Chars / Sec)** Range between 6 (default) and 30 characters per second. This option controls the speed of repeating keystrokes.
- Typematic Delay (Msec)** Choose 250 (default), 500, 750 and 1000. This option sets the time interval for displaying the first and the second characters.
- Security Option** Choose System or Setup (default). This option prevents unauthorized system boot-up or use of BIOS setup.
- OS Select For DRAM > 64MB** Non-OS/2 (default): For Non-OS/2 system.  
OS: For OS/2 operating system.
- Video BIOS Shadow** Enabled copies Video BIOS to shadow RAM for improving performance.  
The choice: Enabled (default), Disabled.
- C8000-CBFFF to DC000-DFFFF Shadow** These options are used to shadow other expansion card ROMs.

3. Press <ESC> to return to the Main Menu when you finish setting up all items.

## 4-10 ADVANCED CHIPSET FEATURES

- ADVANCED CHIPSET FEATURES allows you to change the values of chipset registers. These registers control the system options.

Run the ADVANCED CHIPSET FEATURES as following:

1. Choose “ADVANCED CHIPSET FEATURES” from the Main Menu and a screen with a list of option will appear:
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys. An explanation of the <F> keys follows:

<F1>: “Help” gives options available for each item.

<F5>: Get the previous values. These values are the values with which the user started in the current session.

<F6>: Load all options with Fail-Safe default values.

<F7>: Load all options with Optimized default values.

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
Advanced Chipset Features

		Item Help
Bank 0/1 DRAM Timing	SDRAM 8/10ns	Menu Level ▶
Bank 2/3 DRAM Timing	SDRAM 8/10ns	
Bank 4/5 DRAM Timing	SDRAM 8/10ns	
SDRAM Cycle Length	3	
DRAM Clock	Host CLK	
DRAM Drive Strength	Auto	
× DRAM Drive Value	2F	
Memory Hole	Disabled	
P2C/C2P Concurrency	Enabled	
Fast R-W Turn Around	Disabled	
System BIOS Cacheable	Disabled	
Video RAM Cacheable	Disabled	
Frame Buffer Size	8M	
AGP Aperture Size	64M	
AGP-4X Mode	Disabled	
AGP Driving Control	Auto	
× AGP Driving Value	DA	
AGP Fast Write	Disabled	
OnChip USB	Enabled	
OnChip USB 2	Enabled	
USB Keyboard Support	Disabled	
USB Mouse Support	Disabled	
OnChip Sound	Auto	
OnChip Modem	Auto	
CPU to PCI Write Buffer	Enabled	
PCI Dynamic Bursting	Disabled	
PCI Master 0 WS Write	Enabled	
PCI Delay Transaction	Enabled	
PCI#2 Access #1 Retry	Disabled	
AGP Master 1 WS Write	Disabled	
AGP Master 1 WS Read	Disabled	
CPU Vcore Select	Default	

↑ ↓ → ← : Move Enter: Select +/- /PU/PD: Value F10: Save ESC: Exit F1: General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults



## MP-6VIP-VM / 6VIP-VMX

**Bank 0/1 2/3 4/5 DRAM Timing** This item allows you to select the value in this field, depending on whether the board has paged DRAMs or EDO (Extended Data Output) DRAMs.

The choice: SDRM 8 / 10ns

Normal

Medium

Fast

Turbo

**SDRAM Cycle Length Time** You can select CAS latency time in HCLKs of 2/2 or 3/3. The system board designer should have set the values in this field, depending on the DRAM installed. Do not change the values in this field unless you change specifications of the installed DRAM or the installed CPU.

**DRAM Clock** This item allows you to control the DRAM speed.  
The choice: Host Clock, HCLK+33M, HCLK-33M.

**DRAM Drive Strength** Leave this item with Auto mode.  
The choice: Auto, Manual.

**DRAM Drive Value** When “DRAM Drive Strength” is set to “Auto”, this item will be unable to be selected. We don’t recommend user to adjust this item.

**Memory Hole** In order to improve performance, certain space in memory is reserved for ISA cards. This memory must be mapped into the memory space below 16MB.  
The choice: 15M-16M, Disabled.

**P2C/C2P Concurrency** This item allows you to enable/disable the PCI to CPU, CPU to PCI concurrency.  
The choice: Enabled, Disabled.

**Fast R-W Turn Around** This item controls the DRAM timing. It allows you to enable / disable the fast read / write turn around.  
The choice: Enabled, Disabled.

- System BIOS Cacheable** Choose Enabled or Disabled (default). When enabled, the access to the system BIOS ROM addressed at F0000H - FFFFFH is cached.
- Video RAM Cacheable** Choose Enabled or Disabled (default). When enabled, the access to the VGA RAM addressed is cached.
- Frame Buffer Size** 4M/8M(default)/16M/32M/NA.This option allows you select memory size shared to onboard VGA.
- AGP Aperture Size** Choose 4, 8, 16, 32, 64 (default), 128 or 256 MB. Memory mapped and graphics data structures can reside in a Graphics Aperture. This area is like a linear buffer. BIOS will automatically report the starting address of this buffer to the O.S.
- AGP-4X Mode** This item allows user enable/disable the AGP 4X (133MHz clock)mode.  
The choice: Enabled, Disabled(default)
- AGP Driving Control** This item allows you to adjust the AGP driving force. Choose Manual to key in a AGP Driving Value in the next selection. This field is recommended to set in Auto for avoiding any error in your system.  
The choice: Manual, Auto.
- AGP Driving Value** This item allows you to adjust the AGP driving force.  
The choice: Min=0000 ~ Max=00FF.
- AGP Fast Write** The choice: Enabled, Disabled(Disabled).  
Note: Don't enable this option unless the AGP card supports this function. Please refer to the AGP card manual before changes this option.
- OnChip USB / USB2** This should be enabled if your system has a USB installed on the system board and you want to use it. Even when so equipped, if you add a higher performance controller, you will need to disable this feature.  
The choice: Enabled, Disabled.
- USB Keyboard Support** Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have a USB keyboard.  
The choice:Enabled,Disabled.

## MP-6VIP-VM / 6VIP-VMX

- USB Mouse Support** Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have a USB mouse.  
The choice: Enabled, Disabled.
- OnChip Sound** Enabled (default): Turn on AC'97 codec chip controller.  
Disabled: Turn off AC'97 codec chip controller or user can plug external add-on sound card.
- OnChip Modem** Enabled: Turn on MC99 feature.  
Disabled (default): Turn off AC'97 codec chip controller or user can connect external add-on modem.
- CPU to PCI Write Buffer** When this field is Enabled, writes from the CPU to the PCI bus are buffered, to compensate for the speed differences between the CPU and the PCI bus. When Disabled, the writes are not buffered and the CPU must wait until the write is complete before starting another write cycle.  
The choice: Enabled, Disabled.
- PCI Dynamic Bursting** The choice: Enabled, Disabled.
- PCI Master 0 WS Write** When Enabled, writes to the PCI bus are executed with zero wait states.  
The choice: Enabled, Disabled.
- PCI Delay Transaction** The choice: Enabled, Disabled.
- PCI # 2 Access # 1 Retry** The choice: Enabled, Disabled(default).
- AGP Master 1 WS Write** The choice: Enabled, Disabled(default).
- AGP Master 1 WS Read** The choice: Enabled, Disabled(default).
- CPU Vcore Select** This item allows you select the CPU's Vcore voltage.  
The choice: Default, +0.05V, +0.1V, +0.2V, +0.3V, +0.4V, -0.05V, -0.1V.
3. Press <ESC> to return to the Main Menu when you finish setting up all items.

## 4-11 INTEGRATED PERIPHERALS

- INTEGRATED PERIPHERALS option allows you to get some informations inside your system when it is working.

Run the INTEGRATED PERIPHERALS as following:

1. Choose "INTEGRATED PERIPHERALS" from the Main Menu and a screen with a list of option will appear:

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
Integrated Peripherals

		Item Help
OnChip IDE channel 0	Enabled	
OnChip IDE channel 1	Enabled	Menu Level ▶
IDE Prefetch Mode	Enabled	
Primary Master PIO	Auto	
Primary Slave PIO	Auto	
Secondary Master PIO	Auto	
Secondary Slave PIO	Auto	
Primary Master UDMA	Auto	
Primary Slave UDMA	Auto	
Secondary Master UDMA	Auto	
Secondary Slave UDMA	Auto	
Init Display First	PCI Slot	
IDE HDD Block Mode	Enabled	
Onboard FDC Controller	Enabled	
Onboard Serial Port 1	Auto	
Onboard Serial Port 2	Auto	
UART 2 Mode	Standard	
× IR Function Duplex	Half	
× TX, RX inverting enable	No, Yes	
Onboard Parallel Port	378/IRQ7	
Onboard Parallel Mode	Normal	
ECP Mode Use DMA	3	
Parallel Port EPP Type	EPP1.9	
Onboard Legacy Audio	Enabled	
Sound Blaster	Disabled	
SB I/O Base Address	220H	
SB IRQ Select	IRQ 5	
SB DMA Select	DMA 1	
MPU-401	Disabled	
MPU-401 I/O Address	330-333H	
Game Port (200-207H)	Enabled	

↑ ↓ → ← : Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

## **MP-6VIP-VM / 6VIP-VMX**

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys. An explanation of the <F> keys follows:

<F1>: "Help" gives options available for each item.

<F5>: Get the previous values. These values are the values with which the user started in the current session.

<F6>: Load all options with Fail-Safe default values.

<F7>: Load all options with Optimized default values.

- On-Chip IDE channel 0/1** The chipset contains a PCI IDE interface with support from two IDE channels. Select Enabled to activate the first and/or the second IDE interface. Select Disabled to deactivate an interface if you install a primary and/or second add-on IDE interface.  
The choice: Enabled (default), Disabled.
- IDE Prefetch Mode** The onboard IDE drive interfaces supports IDE prefetching for faster drive accesses. If you install a primary and/or secondary add-in IDE interfaces, set this field to Disabled if the interface does not support prefetching.  
The choice: Enabled, Disabled.
- Primary Master / Slave PIO** Choose Auto (default) or Mode 0~4. The BIOS will detect the HDD mode type automatically when you choose Auto. You need to set to a lower mode than  
**Secondary Master / Slave PIO** Auto when your hard disk becomes unstable.  
The choice: Auto, Mode 0, Mode 1, Mode 2, Mode 3, Mode 4.
- Primary Master / Slave UDMA** Ultra DMA/66 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA drive and your system software  
**Secondary Master / Slave UDMA** both support Ultra DMA/66, select Auto to enable BIOS support.  
The choice: Auto, Disabled.
- Init Display First** This option allows you to decide to activate PCI Slot or AGP first.  
The choice: PCI Slot (default), AGP.
- IDE HDD Block Mode** Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/write per sector the drive can support.  
The choice: Enabled, Disabled.

## MP-6VIP-VM / 6VIP-VMX

- Onboard FDC Controller** Select Enabled if your system has a floppy drive controller (FDC) installed on the system board and you want to use it. If you install add-in FDC or the system has no floppy drive, select Disabled in this field.  
The choice: Enabled, Disabled.
- Onboard Serial Port 1 / Port 2** Select an address and corresponding interrupt for the first and second serial ports.  
The choice: 3F8/IRQ4, 2E8/IRQ3, 3E8/IRQ4, 2F8/IRQ3, Disabled, Auto.
- UART 2 Mode** This item allows you to select which mode for the Onboard Serial Port 2.  
The choice: Standard, HPSIR, ASKIR
- IR Function Duplex** This item allows you to select the IR half / full duplex function.  
The choice: Half, Full.
- TX, RX inverting enable** This item allows you to enable the TX, RX inverting which depends on different H/W requirement. This field is not recommended to change its default setting for avoiding any error in your system.  
The choice: "No, No", "No, Yes"(default), "Yes, No", "Yes, Yes".
- Onboard Parallel Port** This item allows you to determine onboard parallel port controller I/O address setting.  
The choice: 378/IRQ7, 278/IRQ5, 3BC/IRQ7, Disabled.
- Onboard Parallel Port Mode** Select an operating mode for the onboard parallel (printer) port. Select Normal, Compatible, or SPP unless you are certain your hardware and software both support one of the other available modes.  
The choice: Normal , EPP, ECP, ECP/EPP.
- ECP Mode Use DMA** Select a DMA channel for the parallel port for use during ECP mode.  
The choice: 3, 1.

**Parallel Port EPP Type** Select EPP port type 1.7 or 1.9  
The choice: EPP1.7, 1.9.

**Onboard Legacy Audio** This field controls the onboard audio.

- Sound Blaster
- SB I/O Base Address
- SB IRQ Select
- SB DMA Select
- MPU-401
- MPU-401 I/O Address
- Game Port (200-207H)

3. Press <ESC> to return to the Main Menu when you finish setting up all items.



## 4-12 POWER MANAGEMENT SETUP

- POWER MANAGEMENT SETUP allows you to set the system's power saving functions.

Run the POWER MANAGEMENT SETUP as following:

1. Choose "POWER MANAGEMENT SETUP" from the Main Menu and a screen with a list of option will appear:

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
Power Management Setup

ACPI Function	Enabled	Item Help
▶ Power Management	Press Enter	Menu Level ▶
ACPI Suspend Type	S1(POS)	
PM Control by APM	Yes	
Video Off Option	Suspend -> Off	
Video Off Method	V/H SYNC+Blank	
MODEM Use IRQ	3	
Soft-Off by PWRBTN	Instant-Off	
▶ State After Power Failure	Auto	
Wake Up Events	Press Enter	

↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys. An explanation of the <F> keys follows:

<F1>: "Help" gives options available for each item.

<F5>: Get the previous values. These values are the values with which the user started in the current session.

<F6>: Load all options with Fail-Safe default values.

<F7>: Load all options with Optimized default values.

**ACPI Function** Enabled: Turn on ACPI function.  
 Disabled (default): Turn off ACPI function.

- Press <Enter> on the Power Management item, then there is a list of it appears for you to choose further setting.

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
 Power Management

Power Management	User Define	Item Help
HDD Power Down	Disable	Menu Level ▶
Doze Mode	Disable	
Suspend Mode	Disable	

↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
 F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

**Power Management** This category allows you to select the type (or degree) of power saving and is directly related to the following modes:

**HDD Power Down** When enabled and after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

**Doze Mode** When enabled and after the set time of system inactivity, the CPU clock will run at slower speed while all other devices still operate at full speed.

**Suspend Mode** When enabled and after the set time of system inactivity, all devices except the CPU will be shut off.

## MP-6VIP-VM / 6VIP-VMX

**ACPI Suspend Type** This item will allow you to select the ACPI suspend type. You can select S3(STR) for suspending to DRAM or S1(POS) for power on suspend under Windows 98 ACPI mode.  
The choice: S1(POS), S3(STR).

**PM Control by APM** When enabled, an Advanced Power Management device will be activated to enhance the Max. Power Saving mode and stop the CPU internal clock, If Advanced Power Management (APM) is installed on your system, selecting Yes gives better power savings. If the Max. Saving is not enabled, this will be present to No.

**Video Off Option** When enabled, this feature allows the VGA adapter to operate in a power saving mode.

Always On	Monitor will remain on during power saving modes.
Suspend --> Off	Monitor blanked when the systems enters the Suspend mode.
All Modes --> Off	Monitor blanked when the system enters either Suspend or Standby modes.

**Video Off Method** This determines the manner in which the monitor is blanked.

V/H SYNC + Blank	This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.
Blank Screen	This option only writes blanks to the video buffer.
DPMS Supports	Select this option if your monitor supports the Display Power Management Signaling (DPMS) standard of the Video Electronics Standards to select video power management values.

**MODEM Use IRQ** This determines the IRQ in which the MODEM can use.  
The choice: 3, 4, 5, 7, 9, 10, 11, NA.

**Soft-Off by PWRBTN** Instant-Off (default): Turn off the system power at once after pushing the power button.  
 Delay 4 Sec: Turn off the system power 4 seconds after pushing the power button. (to meet PC97/98 spec)

**State after Power Failure** This field lets you determine the state that your PC returns to after a power failure. If set to off, the PC will not boot after a power failure. If set to On, the PC will restart after a power failure.

- Press <Enter> on the Wake Up Events item, then there is a list of it appears for you to choose further setting.

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
 Wake Up Events

VGA	OFF	Item Help
LPT & COM	LPT/COM	Menu Level ▶
HDD & FDD	ON	
PCI Master	OFF	
Wake Up On LAN/Ring	Disabled	
RTC Alarm Resume	Disabled	
Date (of Month)	0	
× Resume Time (hh:mm:ss)	0 0 0	
× Primary INTR	ON	
IRQs Activity Monitoring	Press Enter	
▶		

↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
 F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

**VGA** When Enabled, you can set the VGA awakens the system

**LPT & COM** When On of LPT & COM, any activity from one of the listed system peripheral devices or IRQs wakes up the system.

## MP-6VIP-VM / 6VIP-VMX

- HDD & FDD** When On of HDD & FDD, any activity from one of the listed system peripheral devices wakes up the system.
- PCI Master** When On of PCI Master, any activity from one of the listed system peripheral devices wakes up the system.
- Wake Up On LAN/Ring** An input signal on the serial Ring Indicator (RI) line (in other words, an incoming call on the modem) awakens the system from a soft off state.  
The choice: Enabled, Disabled.
- RTC Alarm Resume** When Enabled, you can set the data and time at the which the RTC (Real Time Clock) alarm awakens the system from suspend mode.  
The choice: Disabled (default), Enabled.
- Date (of Month)** Set a certain date when RTC Alarm Resume option is Enabled to awaken the system. This option is concurrent with Resume Time option.
- Resume Time (hh:mm:ss)** Set a certain time when RTC Alarm Resume option is Enabled to awaken the system. This option is concurrent with Date option.
- Primary INTR** When set to on, any event occurring at will awaken a system which has been powered down.  
On(default):The system can not enter the power saving mode when I/O ports or IRQ# is activated.  
Off:The system still can enter the power saving mode when I/O ports or IRQ# is activated.

The following is a list of IRQ's (Interrupt ReQuests), which can be exempted much as the COM ports and LPT ports above can. When an I/O device wants to gain the attention of the operating system, it signals this by causing an IRQ to occur. When the operating system is ready to respond to the request, it interrupts itself and performs the service. When set On, activity will neither prevent the system from going into a power management mode nor awaken it.

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
 IRQ Activity Monitoring

IRQ 3 (COM2)	Enabled	Item Help
IRQ 4 (COM1)	Enabled	Menu Level ▶
IRQ 5 (LPT2)	Enabled	
IRQ 6 (Floppy Disk)	Enabled	
IRQ 7 (LPT1)	Enabled	
IRQ 8 (RTC Alarm)	Disabled	
IRQ 9 (IRQ2 Redir)	Disabled	
IRQ 10 (Reserved)	Disabled	
IRQ 11 (Reserved)	Disabled	
IRQ 12 (PS/2 Mouse)	Enabled	
IRQ 13 (Coprocessor)	Disabled	
IRQ 14 (Hard Disk)	Enabled	
IRQ 15 (Reserved)	Disabled	

↑↓ → ←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
 F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

3. Press <ESC> to return to the Main Menu when you finish setting up all items.

## 4-13 PNP / PCI CONFIGURATION

- PNP/PCI CONFIGURATION allows you to set the system's power saving functions.

Run the PNP/PCI CONFIGURATION as following:

1. Choose "PNP/PCI CONFIGURATION" from the Main Menu and a screen with a list of option will appear:

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
PnP/PCI Configurations

PNP OS Installed	No	Item Help
Reset Configuration Data	Disabled	Menu Level ▶
Resources Controlled By	Auto(ESCD)	
× IRQ Resources	Press Enter	
× DMA Resources	Press Enter	
PCI/VGA Palette Snoop	Disabled	
Assign IRQ For VGA	Enabled	
Assign IRQ For USB	Enabled	

↑ ↓ → ←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys. An explanation of the <F> keys follows:

<F1>: "Help" gives options available for each item.

<F5>: Get the previous values. These values are the values with which the user started in the current session.

<F6>: Load all options with Fail-Safe default values.

<F7>: Load all options with Optimized default values.

**PNP OS Installed** Yes: OS supports Plug and Play function.  
 No (default): OS doesn't support Plug and Play function.

**NOTE:** BIOS will automatically disable all PnP resources except the boot device card when you select Yes on Non-PnP operating system.

**Reset Configuration Data** Choose Enabled or Disabled (default). Disabled retains PnP configuration data in BIOS and Enabled resets the PnP configuration data in BIOS.

**Resource Controlled By** Choose Manual (default) or Auto. The BIOS checks the IRQ / DMA channel number on the ISA and PCI card manually if you choose Manual and the IRQ / DMA channel number will be checked automatically if you choose Auto.

**IRQ Resources** Press Enter. Please refer to the below list.

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
 IRQ Resources

IRQ-3 assigned to	PCI/ISA PnP	Item Help
IRQ-4 assigned to	PCI/ISA PnP	Menu Level ▶
IRQ-5 assigned to	PCI/ISA PnP	
IRQ-7 assigned to	PCI/ISA PnP	
IRQ-9 assigned to	PCI/ISA PnP	
IRQ-10 assigned to	PCI/ISA PnP	
IRQ-11 assigned to	PCI/ISA PnP	
IRQ-12 assigned to	PCI/ISA PnP	
IRQ-14 assigned to	PCI/ISA PnP	
IRQ-15 assigned to	PCI/ISA PnP	

↑ ↓ ← →: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help  
 F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults



## MP-6VIP-VM / 6VIP-VMX

**DMA Resources** Press Enter. Please refer to the below list.

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
DMA Resources

DMA-0 assigned to	PCI/ISA PnP	Item Help
DMA-1 assigned to	PCI/ISA PnP	Menu Level ▶
DMA-3 assigned to	PCI/ISA PnP	
DMA-5 assigned to	PCI/ISA PnP	
DMA-6 assigned to	PCI/ISA PnP	
DMA-7 assigned to	PCI/ISA PnP	

↑ ↓ → ← : Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

**PCI/VGA Palette Snoop** Leave this field at Disabled.  
The choice: Enabled, Disabled(default).

**Assign IRQ for VGA** Enabled (default): Add one IRQ to VGA controller.  
Disabled: Remove IRQ from USB controller. The system will have extra IRQ for other devices but the VGA controller will still not be disabled. (only IRQ was removed)

**Assign IRQ for USB** Enabled (default): Add one IRQ to USB controller.  
Disabled: Remove IRQ from USB controller. The system will have extra IRQ for other devices but the USB controller will still not be disabled. (only IRQ was removed)

3. Press <ESC> to return to the Main Menu when you finish setting up all items.

## 4-14 PC HEALTH STATUS

- This section helps you to get more information about your system including CPU temperature, FAN speed and voltage. It is recommended that you contact with your motherboard supplier to get proper value about your setting of the CPU temperature.

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
PC Health Status

Current CPU Temp.	36°C/96°F	Item Help
Current System Temp.	°C/32°F	Menu Level ▶
Current CPUFAN1 Speed	5120 RPM	
Current CPUFAN2 Speed	0 RPM	
Vcore	1.53V	
2.5V	2.50V	
3.3V	3.28V	
5V	5.00V	
12V	11.76V	

↑ ↓ → ← : Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

**Current CPU Temp.** Shows current CPU temperature.

**Current System Temp.** Shows current system temperature.

**Current CPUFAN1 Speed** Shows current CPUFAN1 speed. The fan must provide rotary pulse. (Normally these types of fan have a three-wire connector)

**Current CPUFAN2 Speed** Shows current CPUFAN2 speed. The fan must provide rotary pulse. (Normally these types of fan have a three-wire connector)

**Voltage** Shows power supply actual voltage value.

- Press <ESC> to return to the Main Menu when you finish setting up all items.

## 4-15 FREQUENCY/VOLTAGE CONTROL

CMOS Setup Utility - Copyright (C) 1984-2000 Award Software  
Frequency Control

Auto Detect DIMM/PCI CLK	Enabled	Item Help
Spread Spectrum	Disabled	Menu Level ▶
CPU Host Clock	66	

↑ ↓ → ←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

**Auto Detect DIMM/PCI CLK** This item allows you to enable/disable detect DIMM/PCI Clock.  
The choice: Enabled, Disabled.

**Spread Spectrum Modulated** This item allows you to enable/disable the spread spectrum modulate.  
The choice: Enabled, Disabled.

**CPU Host Clock (CPU/PCI)** This item allows you to select CPU/PCI frequency.  
The choice: Key in a DEC number between Min=66 to Max=200.

- Press <ESC> to return to the Main Menu when you finish setting up all items.

## 4-16 LOAD OPTIMIZED DEFAULTS

- When you press <Enter> on this item you get a confirmation dialog box with a message similar to:

`" Load Optimized Defaults (Y / N) ? "`

Pressing "Y" loads the BIOS default values that are factory settings for optimal performance system operations.

## 4-17 SET SUPERVISOR / USER PASSWORD

- These two options allow you to set your system passwords. Normally, the supervisor has a higher ability to change the CMOS setup option than the user. The way to set up the passwords for both Supervisor and User are as follows:

1. Choose "Change Password" in the Main Menu and press <Enter>. The following message appears:

**"Enter Password : "**

2. The first time you run this option, enter your password up to 8 characters and press <Enter>. The screen does not display the entered characters.
3. After you enter the password, the following message appears prompting you to confirm the password:

**"Confirm Password : "**

4. Enter the same password "exactly" as you just typed again to confirm the password and press <Enter>.
5. Move the cursor to Save & Exit Setup to save the password.
6. If you need to delete the password you entered before, choose the Supervisor Password and press <Enter>. It will delete the password that you had before.
7. Move the cursor to Save & Exit Setup to save the option you did, otherwise the old password will still be there the next time you turn your system on.
8. Press <Enter> to exit to the Main Menu.

**NOTE:** *If you forget or lose the password, the only way to access the system is to clear the CMOS RAM. All setup information will be lost and you need to run the BIOS setup program again.*

**NOTE:** *You determine when the password is required within the Advanced BIOS Features and its Security option. If the Security option is set to "system", the password will be required both at boot and at entry to Setup. If set to "setup", prompting only occurs when trying to enter Setup.*

## 4-18 SAVE & EXIT SETUP

- SAVE & EXIT SETUP allows you to save all modifications you have specified into the CMOS memory. Highlight this option on the Main Menu and the following message appears:

`"SAVE to CMOS and EXIT (Y/N) ?"`

Press <Enter> key to save the configuration changes.

## 4-19 EXIT WITHOUT SAVING

- EXIT WITHOUT SAVING option allows you to exit the Setup Utility without saving the modifications that you have specified. Highlight this option on the Main Menu and the following message appears:

`"Quit Without Saving (Y/N) ?"`

You may change the prompt to "Y" and press <Enter> key to leave this option .