

Chapter 2


Hardware Installation

2.1 Central Processing Unit: CPU


The **Micro ATX VII6** mainboard operates with **Intel® Pentium® processor/ Pentium® processor w/MMX™ technology, Cyrix®/IBM 6x86/6x86L/ 6x86MX/MII, and AMD® K6/K6-2/K6-III** processors. It could operate with 2.2V to 3.2V processors. The mainboard provides a 321-pin ZIF Socket 7 for easy CPU installation. The CPU should always have a cooling fan attached to prevent overheating.

2.1-1 CPU Installation Procedures


1. Pull the lever sideways away from the socket. Then raise the lever up to a 90-degree angle.

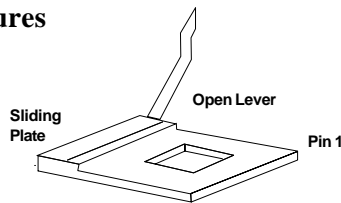

2. Locate Pin 1 in the socket and look for the white dot or cut edge in the CPU. Match Pin 1 with the white dot/cut edge. Then, insert the CPU. It should insert easily.

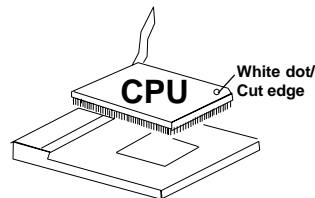

3. Press the lever down to complete the installation.

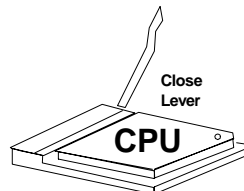

2.1-2 CPU Core Speed Derivation Procedure

1. The DIP Switch SW1 (1, 2, and 3) are used to set the Core/Bus (Fraction) ratio of the CPU. The actual core speed of the CPU is the Host Clock Frequency multiplied by the Core/Bus ratio. For example:

If CPU Clock = 66MHz
 Core/Bus ratio = 3.5
then CPU core speed = Host Clock x Core/Bus ratio
 = 66MHz x 3.5
 = 233MHz


SW1			CPU
1	2	3	Core/Bus Ratio
ON	OFF	OFF	2
ON	ON	OFF	2.5
OFF	ON	OFF	3
OFF	OFF	OFF	3.5
ON	OFF	ON	4
ON	ON	ON	4.5
OFF	ON	ON	5
OFF	OFF	ON	5.5

2. The DIP Switch SW1 (5, 6, 7, and 8) are used to adjust the CPU clock frequency.

SW1				Clock
5	6	7	8	CPU
OFF	OFF	OFF	ON	66
ON	OFF	OFF	OFF	75
OFF	ON	OFF	ON	83.3
OFF	ON	ON	OFF	95
OFF	ON	ON	ON	100

2.1-3 Processor Voltage Setting

The jumper Switch JV1 (1-5) is used to set the processor Vcore voltage setting.

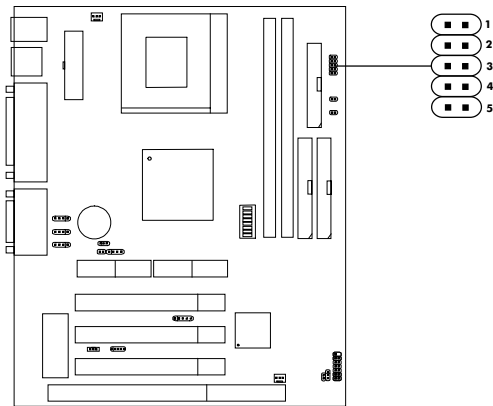


JV1					
1	2	3	4	5	Vcore
OPEN	SHORT	OPEN	OPEN	OPEN	2.2
SHORT	SHORT	OPEN	OPEN	OPEN	2.3
OPEN	OPEN	SHORT	OPEN	OPEN	2.4
OPEN	OPEN	OPEN	SHORT	OPEN	2.8
SHORT	OPEN	OPEN	SHORT	OPEN	2.9
OPEN	OPEN	SHORT	SHORT	OPEN	3.2

Note: Always consult vendor for proper CPU specification, before setting the processor voltage (Vcore/Vio). Improper setting may damage the processor and other components.

2.1-4 Fan Power Connectors: CFAN1/SFAN1

These connectors support system cooling fan with +12V. It supports three pin head connector. When connecting the wire to the connector, always take note that the red wire is the positive and should be connected to the +12V, the black wire is Ground and should be connected to GND. If your mainboard has System Hardware Monitor chipset on-board, you must use a specially designed fan with speed sensor to take advantage of this function.

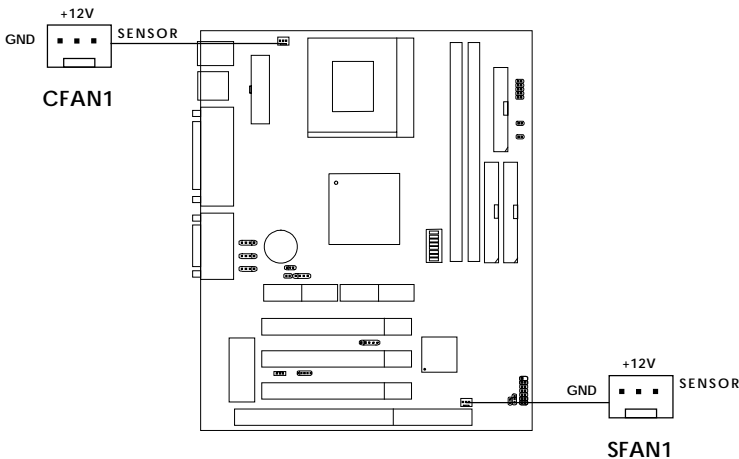

CFAN1: Processor Fan

SFAN1: System Fan

For fans with fan speed sensor, every rotation of the fan will send out 2 pulses. System Hardware Monitor will count and report the fan rotation speed.

Note: 1. Always consult vendor for proper CPU cooling fan.
 2. CPU FAN supports the FAN control. You can install PC Alert utility. This will automatically control the CPU FAN Speed according to the actual CPU temperature.

2.1-5 CPU Speed and Voltage Setting: SW1, JV1

To adjust the speed and voltage of the CPU, you must know the specifications of your CPU (*always ask the vendor for CPU specifications*). Then refer to **Table 2.1 (Intel® processors)**, **Table 2.2 (Cyrrix® processors)** and **Table 2.3 (AMD® processors)** for proper setting.

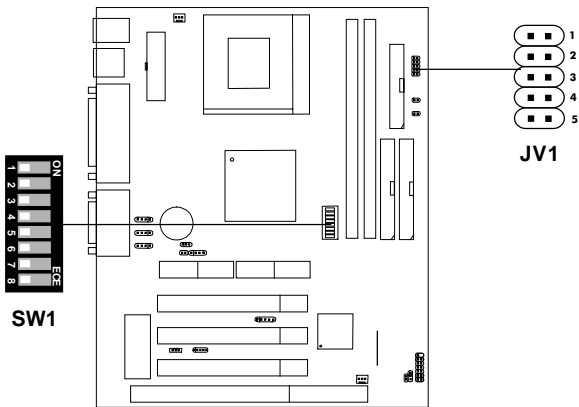


Table 2.1 Intel® processors

Intel® Pentium® processors with MMX™ technology





CPU Type	CPU Speed & Voltage			
	VI/O	Vcore	JV1	SW1
166MHz	3.3	2.8	<div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div></div>	<div><div>ON</div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>ECE</div></div>
200MHz				<div><div>ON</div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>ECE</div></div>
233MHz				<div><div>ON</div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>ECE</div></div>

Note: If you encounter a CPU with different voltage, just go to Section 2.1-3 and look for the proper voltage settings.




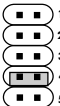


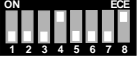

Table 2.2 Cyrix® processors

Cyrix® 6x86 processor uses PR to rate the speed of their processors based on Intel® Pentium® processor core speed. For example PR150 (120MHz) has 150MHz core speed of Intel® Pentium® processor but has 120MHz core speed in Cyrix®. Cyrix® 6x86 processor should always use a more powerful fan (ask vendor for proper cooling fan).

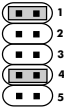



Cyrix® 6x86/6x86L processors

CPU Type	CPU Speed & Voltage			
	VI/O	Vcore	JV1	SW1
6x86L PR166	3.3	2.8		
6x86L PR200				

Cyrix® 6x86MX Processor

CPU Type	CPU Voltage			CPU Speed
	VI/O	Vcore	JV1	SW1
PR200 (66 x 2.5)	3.3	2.9		
PR233 (75 x 2.5)				
(66 x 3)				
(83 x 2)				
PR266 (75 x3)				
(66 x 3.5)				
(83 x 2.5)				

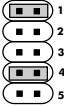
















Cyrix® MII Processor

CPU Type	CPU Voltage			CPU Speed
	VI/O	Vcore	JV1	SW1
PR300 (66 x 3.5)	3.3	2.9		
(75 x 3)				
PR333 (83 x 3)				

Note: If you encounter a CPU with different voltage, just go to **Section 2.1-3** and look for the proper voltage settings.



Table 2.3 AMD® Processor

AMD® K6/K6-2/K6-3 Processor

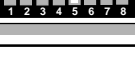
CPU Type	CPU Voltage			CPU Speed
	VI/O	Vcore	JV1	SW1
166MHz	3.3	2.9		
200MHz				
233MHz	3.3	3.2		
266MHz	3.3	2.2		
300MHz				
K6-2 300MHz				
K6-2 333MHz				
K6-2 350MHz				
K6-2 380MHz				
K6-2 400MHz				
K6-2 450MHz	3.3	2.4		
K6-III 400MHz				
K6-III 450MHz				

2.2 Clear CMOS Jumper: JBAT1

 A battery must be used to retain the mainboard configuration in CMOS RAM. Short 1-2 pins of JBAT1 to store the CMOS data.

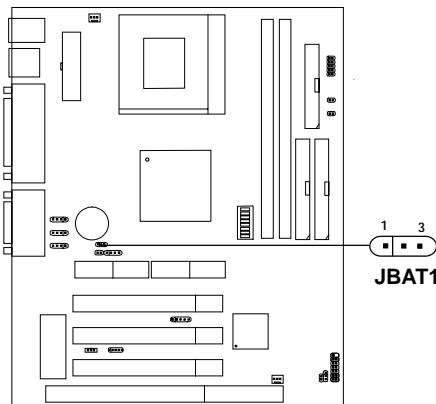

Keep Data

 


Clear Data

Note: You can clear CMOS by shorting 2-3 pin, while the system is off. Then, return to 1-2 pin position. Avoid clearing the CMOS while the system is on, it will damage the mainboard. Always unplug the power cord from the wall socket.

2.3 Memory Installation


2.3-1 Memory Bank Configuration

The mainboard supports a maximum memory size of 256MB(64-bit technology) or 512MB(128-bit technology for SDRAM: It provides two 168-pin **unbuffered** DIMMs (Double In-Line Memory Module) sockets. It supports 8 MB to 128 Mbytes DIMM memory module.

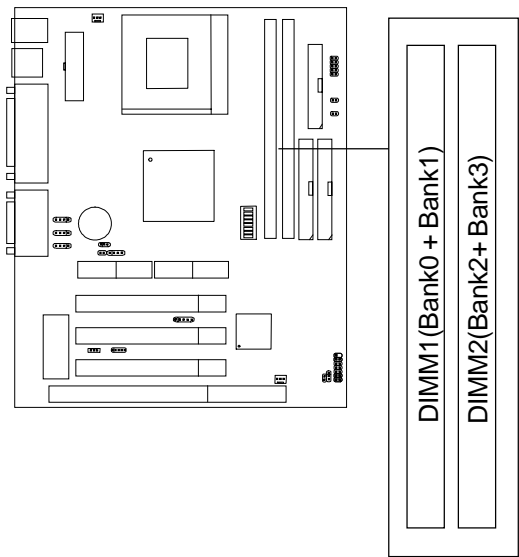


2.3-2 Memory Installation Procedures

A. How to install a DIMM Module

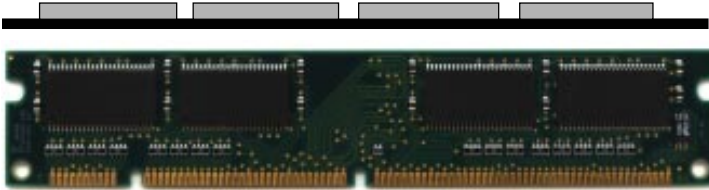


Single Sided DIMM

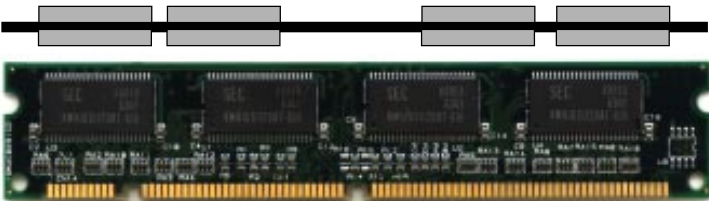

Double Sided DIMM

1. The DIMM slot has 2 Notch Keys “VOLT and DRAM”, so the DIMM memory module can only fit in one direction.
2. Insert the DIMM memory module vertically into the DIMM slot. Then push it in.

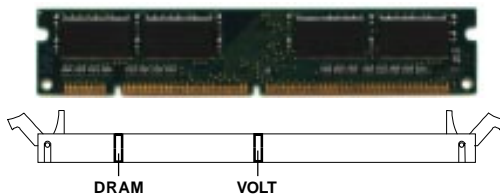

3. The plastic clip at the side of the DIMM slot will automatically close.

2.3-3 Memory Population Rules


1. Supports only SDRAM DIMM.
2. To operate properly, at least one 168-pin DIMM module must be installed.
3. This mainboard supports Table Free memory, so memory can be installed on DIMM1 or DIMM 2 in any order.
4. Supports 3.3 volt DIMM.
5. The DRAM addressing and the size supported by the mainboard is shown below:

Table 2.3-1 SDRAM Memory Addressing

DRAM Tech.	DRAM Density & Width	DRAM Addressing	Address Size		MB/DIMM	
			Row	Column	Single no. Side(S) pcs.	Double no. Side(D) pcs.
16M	1Mx16	ASYM	11	8	8MBx4	16MBx8
	2Mx8	ASYM	11	9	16MBx8	32MBx16
64M	2Mx32	ASYM	11	9	32MBx2	64MBx4
	2Mx32	ASYM	12	8	16MBx2	32MBx4
	4Mx16	ASYM	11	10	32MB	64MB
	4Mx16	ASYM	13	8	32MB	64MB
	8Mx8	ASYM	13	9	64MB	128MB
	2Mx32	ASYM	11	8	16MB	32MB
64M	4Mx16	ASYM	12	8	---	---
	8Mx8	ASYM	12	9	---	---

2.4 Case Connector: JFP1

The Power Switch, Reset Switch, Power LED, Speaker, and HDD LED are all connected to the JFP1 connector block.

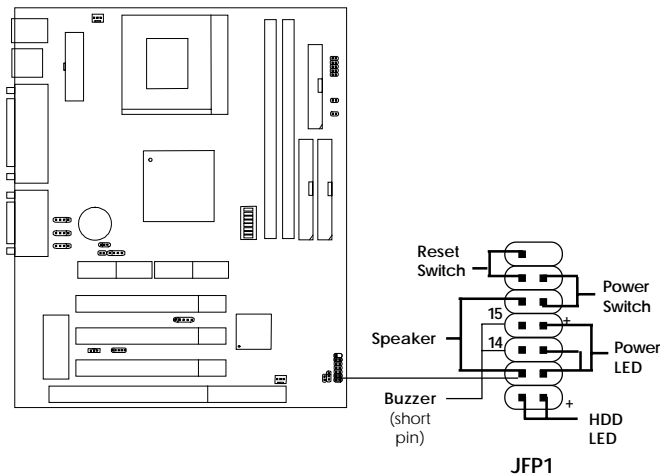

2.4-1 Power Switch

Connect to a 2-pin push button switch. This switch has the same feature with JRMS1.

2.4-2 Reset Switch

Reset switch is used to reboot the system rather than turning the power ON/OFF. Avoid rebooting while the HDD LED is lit. You can connect the Reset switch from the system case to this pin.

2.4-3 Power LED

The Power LED is lit while the system power is on. Connect the Power LED from the system case to this pin. There are two types of LED that you can use: 3-pin single color LED or 2-pin dual color LED(ACPI request).

- a. 3 pin single color LED connect to pin 4, 5, & 6. This LED will lit when the system is on.
- b. 2 pin dual color LED connect to pin 5 & 6.

GREENColor: Indicate the system is in full on mode.

ORANGEColor: Indicate the system is in suspend mode.

2.4-4 Speaker

Speaker from the system case is connected to this pin.

If on-board Buzzer is available:

Short pin 14-15: On-board Buzzer Enabled.


Open pin 14-15: On-board Buzzer Disabled.

2.4-5 HDD LED

HDD LED shows the activity of a hard disk drive. Avoid turning the power off while the HDD led is lit. You can connect the HDD LED from the system case to this pin.


2.5 Floppy Disk Connector: FDD

The mainboard also provides a standard floppy disk connector FDD that supports 360K, 720K, 1.2M, 1.44M and 2.88M floppy disk types. This connector supports the provided floppy drive ribbon cables.

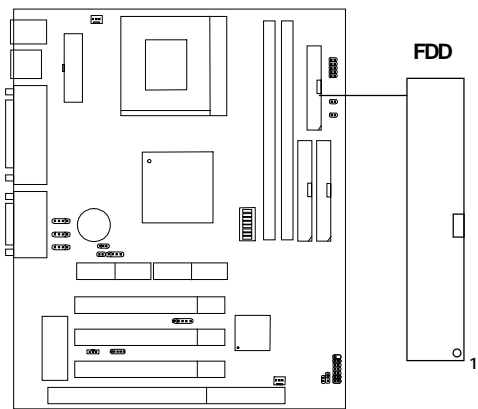

2.6 Hard Disk Connectors: IDE1 & IDE2

The mainboard has a 32-bit Enhanced PCI IDE and Ultra DMA33/66 Controller that provides PIO mode 0~4, Bus Master, and Ultra DMA 33/66 function. It has two HDD connectors IDE1 (primary) and IDE2 (secondary). You can connect up to four hard disk drives, CD-ROM, and other devices to IDE1 and IDE2. These connectors support the provided IDE hard disk cable.

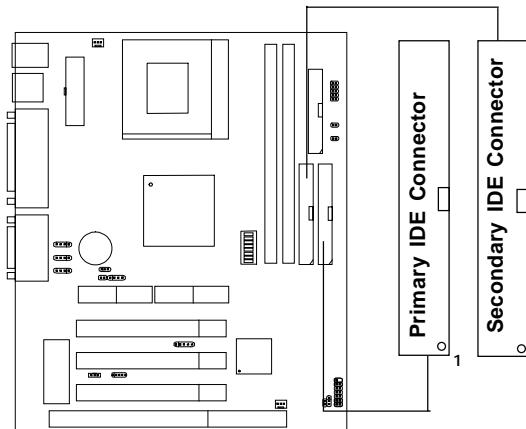

IDE1(Primary IDE Connector)

The first hard drive should always be connected to IDE1. IDE1 can connect a Master and a Slave drive. You must configure second hard drive to Slave mode by setting the jumper accordingly.


IDE2(Secondary IDE Connector)

IDE2 can also connect a Master and a Slave drive.

2.7 Power Supply

2.7-1 ATX 20-pin Power Connector: JPWR1

This connector supports the power button on-board. Using the ATX power supply, functions such as Modem Ring Wake-Up and Soft Power Off are supported by this mainboard. This power connector supports instant power on function which means that system will boot up instantly when the power connector is inserted on the board.

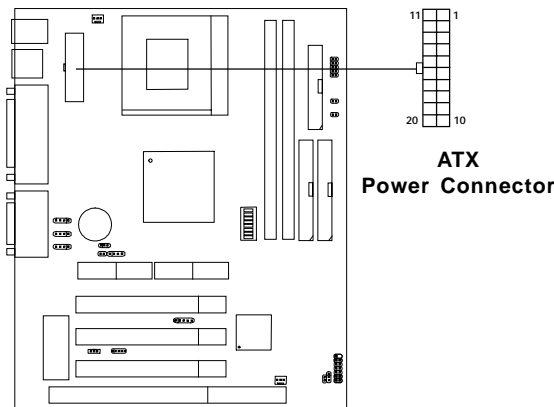


PIN DEFINITION

PIN	SIGNAL	PIN	SIGNAL
1	3.3V	11	3.3V
2	3.3V	12	-12V
3	GND	13	GND
4	5V	14	PS_ON
5	GND	15	GND
6	5V	16	GND
7	GND	17	GND
8	PW_OK	18	-5V
9	5V_SB	19	5V
10	12V	20	5V

Warning: Since the mainboard has the instant power on function, make sure that all components are installed properly before inserting the power connector to ensure that no damage will be done.


2.7-2 Remote Power On/Off Switch: JRMS1

Connect to a 2-pin push button switch. During OFF state, press once and the system turns on. **During ON stage, push once and the system goes to sleep mode: pushing it more than 4 seconds will change its status from ON to OFF.** If you want to change the setup, you could go to the BIOS Power Management Setup. This is only used for ATX type power supply.

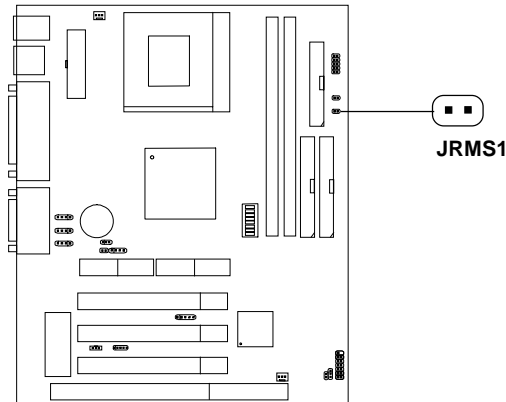


2.8 IrDA Infrared Module Connector: IR1

The mainboard provides one infrared (IR1) connector for IR modules. This connector is for optional wireless transmitting and receiving infrared module. You must configure the setting through the BIOS setup to use the IR function.

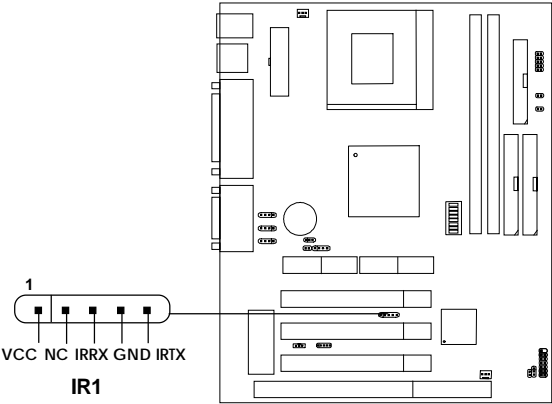

2.9 Serial Port Connectors: COM A

The mainboard has a 9-pin male DIN connector for serial port COM A. This port is a 16550A high speed communication port that send/receive 16 bytes FIFOs. You can attach a mouse or a modem cable directly into this connector.

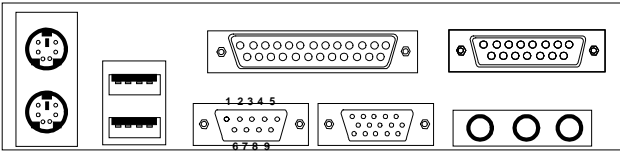

COM A


Serial Port (9-pin Male)

PIN DEFINITION

PIN	SIGNAL
1	DCD (Data Carry Detect)
2	SIN (Serial In or Receive Data)
3	SOUT (Serial Out or Transmit Data)
4	DTR (Data Terminal Ready)
5	GND
6	DSR (Data Set Ready)
7	RTS (Request To Send)
8	CTS (Clear To Send)
9	RI (Ring Indicate)

2.10 VGA DB 15 Pin Connector

The mainboard provides a DB 15-pin connector to connect to a VGA monitor.

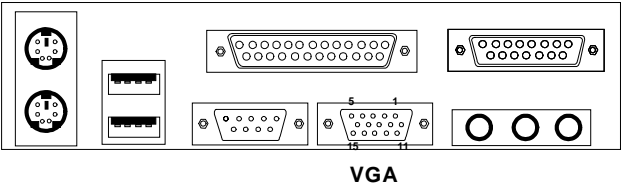


Analog Video Display Connector(DB15-S)	
Pin	Signal Description
1	Red
2	Green
3	Blue
4	Not used
5	Ground
6	Ground
7	Ground
8	Ground
9	Not used
10	Ground
11	Not used
12	SDA
13	Horizontal Sync
14	Vertical Sync
15	SCL

2.11 Parallel Port Connector: LPT1

The mainboard provides a 25 pin female centronic connector for LPT. A parallel port is a standard printer port that also supports Enhanced Parallel Port(EPP) and Extended capabilities Parallel Port(ECP). See connector and pin definition below:

Parallel Port (25-pin Female)

LPT 1

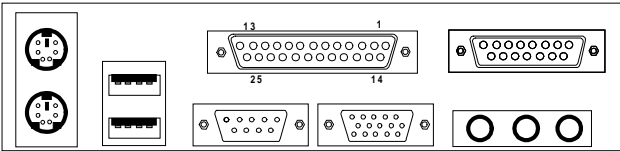


PIN DEFINITION

PIN	SIGNAL	PIN	SIGNAL
1	STROBE	14	AUTO FEED#
2	DATA0	15	ERR#
3	DATA1	16	INIT#
4	DATA2	17	SLIN#
5	DATA3	18	GND
6	DATA4	19	GND
7	DATA5	20	GND
8	DATA6	21	GND
9	DATA7	22	GND
10	ACK#	23	GND
11	BUSY	24	GND
12	PE	25	GND
13	SELECT		

2.12 Mouse Connector: JKBMS1


The mainboard provides a standard PS/2® mouse mini DIN connector for attaching a PS/2® mouse. You can plug a PS/2® mouse directly into this connector. The connector location and pin definition are shown below:

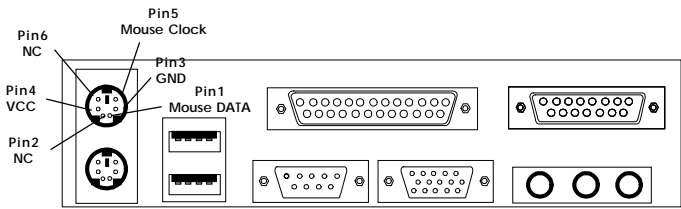

PS/2 Mouse (6-pin Female)

2.13 Keyboard Connector: JKBMS1


The mainboard provides a standard PS/2® keyboard mini DIN connector for attaching a keyboard. You can plug a keyboard cable directly to this connector.

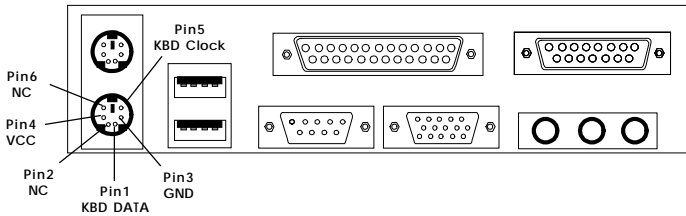

PS/2 Keyboard (6-pin Female)


2.14 Joystick/Midi Connectors

You can connect joystick or game pad to this connector.

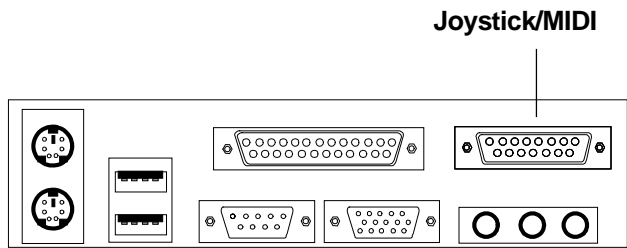

2.15 Audio Port Connectors


Line Out is a connector for Speakers or Headphones. **Line In** is used for external CD player, Tape layer, or other audio devices. **Mic** is a connector for the microphones.

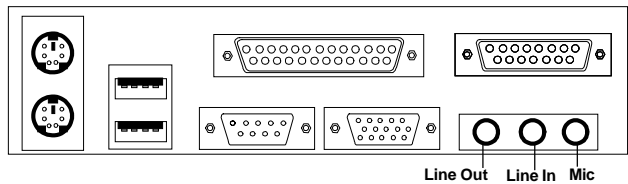

1/8" Stereo Audio Connectors

2.16 USB Connectors


The mainboard provides a **UHCI(Universal Host Controller Interface)** **Universal Serial Bus root** for attaching USB devices like: keyboard, mouse and other USB devices. You can plug the USB device directly to this connector.

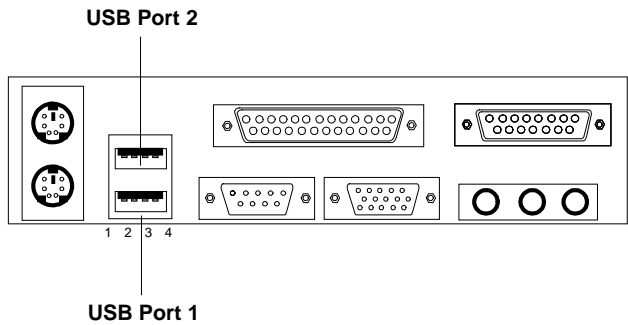

PIN	SIGNAL
1	VCC
2	-Data0
3	GND
4	+Data0


2.17 Power Saving Switch Connector: JGS1

Attach a power saving switch to **JGS1**. When the switch is pressed, the system immediately goes into suspend mode. Press any key and the system wakes up.

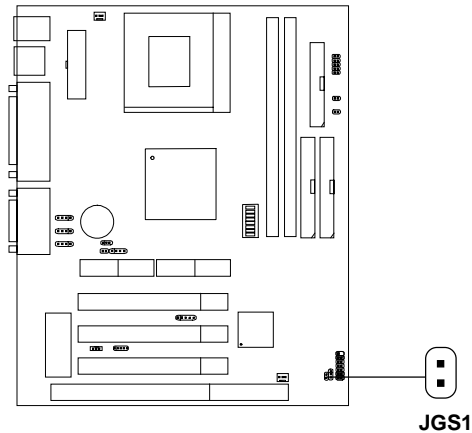

2.18 Power Saving LED Connector: JGL1


JGL1 can be connected with an LED. There are two types of LED that you can use: 3-pin LED or 2-pin LED(ACPI request). When the 2-pin LED is connected to JGL1, the light will turn green, when system is On. During sleep mode, the 2-pin LED will change color from Green to Orange. For 3-pin LED, when LED is connected to JGL1, this will light when the system is On.

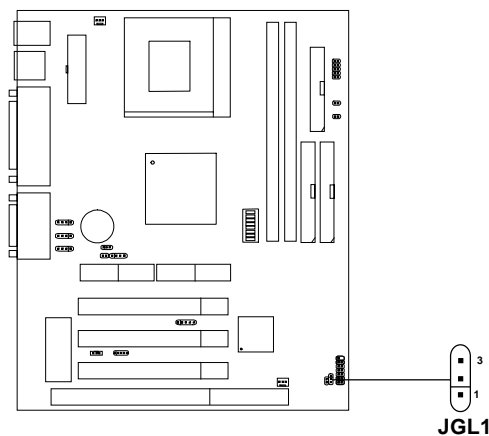

3-pin LED	2-pin LED
<div><div>Green Color</div><div><div><div>3</div><div>1</div></div><div><div><div><div></div><div></div><div></div></div></div></div><div>Orange Color</div></div></div>	<div><div>Orange Color</div><div><div><div>3</div><div>1</div></div><div><div><div><div></div><div></div><div></div></div></div></div><div>Green Color</div></div></div>
1-2 Single Color	1-2 Dual Color

2.19 Wake-Up on LAN Connector: JWOL1

The JWOL1 connector is for use with LAN add-on cards that supports Wake Up on LAN function. To use this function, you need to set the “Wake-Up on LAN” to enable at the BIOS Power Management Setup.

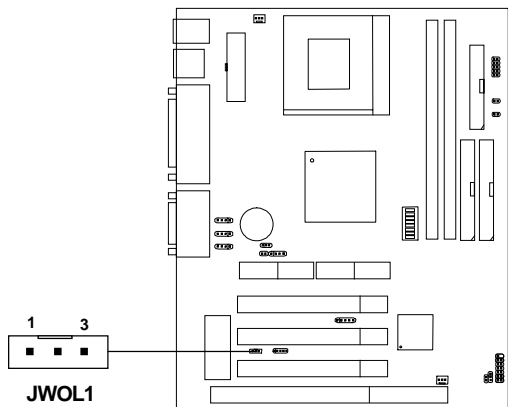


PIN	SIGNAL
1	5VSB
2	GND
3	MP_WAKEUP

Note: LAN wake-up signal is active “high”.

Note: To be able to use this function, you need a power supply that provide enough power for this feature. (Power supply with 750ma 5V Stand-by)

2.20 Modem Wake Up Connector: JMDM1

The JMDM1 connector is for use with Modem add-on card that supports the Modem Wake Up function.

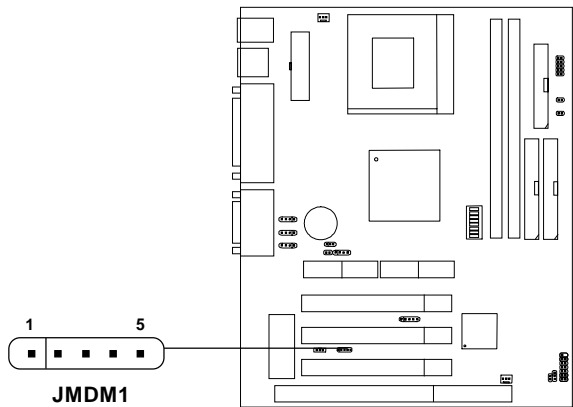


PIN	SIGNAL
1	NC
2	GND
3	MDM_WAKEUP
4	NC
5	5VSB

Note: Modem wake-up signal is active “low”.

Note: To be able to use this function, you need a power supply that provide enough power for this feature. (Power supply with 750ma 5V Stand-by)

2.21 Modem-In: MODEM1

The connector is for Modem with internal voice connector.

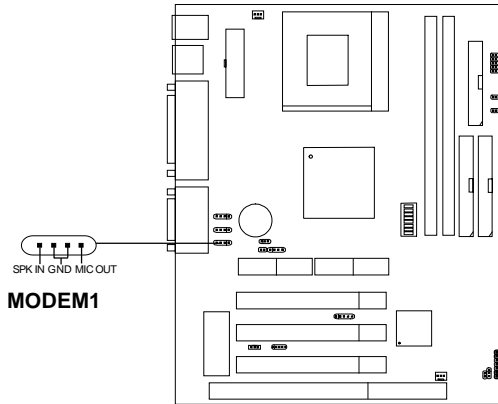


SPK_IN is connected to the Modem Speaker Out connector.

MIC_OUT is connected to the Modem Microphone In connector.


2.22 AUX Line In Connector: J AUX1

This connector is used for DVD Add on Card with Line In connector.

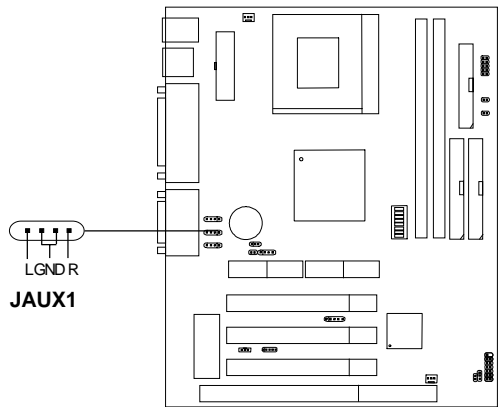


2.23 CD-In Connector: JCD1

This connector is for CD-ROM audio connector.

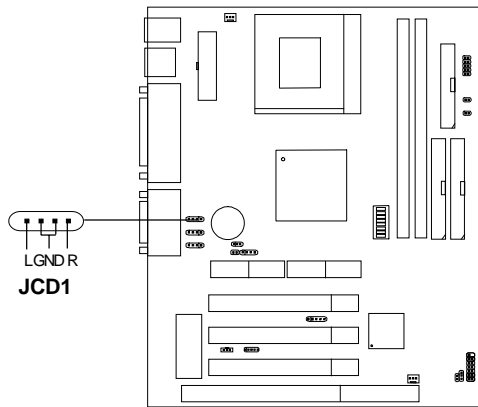



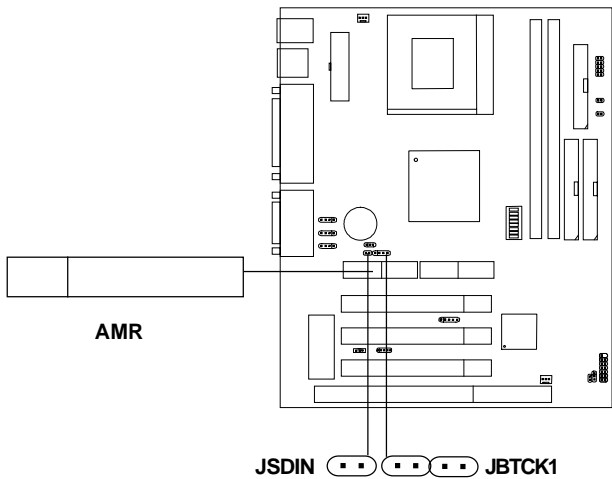

2.24 AMR (Audio Modem Riser)

The Audio/Modem Riser specification is an open industry-standard specification that defines a hardware scalable Original Equipment Manufacturer (OEM) mainboard riser board and interface, which supports both audio and modem.




AMR/MR Card Jumper

JBTCK1	JSDIN1	Feature
		Onboard AC97 Audio and Modem Riser Card
		AMR Card

2.25 PTI (PanelLink TV-Out Interface)

The TV-Out Interface is a MSI in-house design which support TV-out or PanelLink function. To be able to utilize both AMR and PTI simultaneously, you need to use MSI product like MS-5967 & MS-5966.

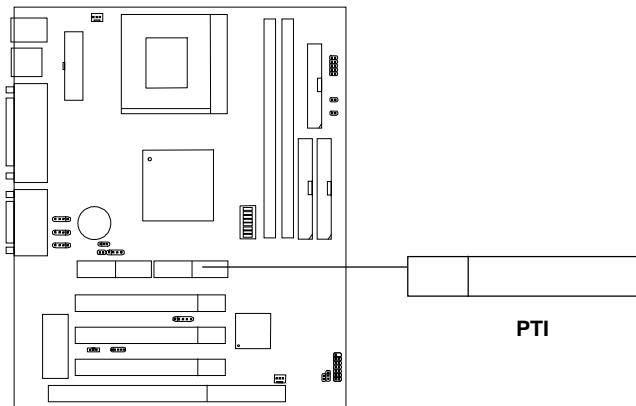

2.26 Power LED Connector: JPL1

JPL1 can be connected with an LED. When the system is powered on., the LED will lit. When the system is shutdown, the LED will ceased to lit.

