

Chapter 5

AGP Retention Module Procedure

AGP Retention Module



1. Locate the AGP slot.



2. Insert the AGP Retention Module into the AGP slot.



3. Check for a perfect fit.



4. Insert the AGP card into AGP slot.



How To Uninstall AGP Card From AGP slot

1. Pull the lever to release the AGP card.



2. Remove AGP card from AGP slot.

