



Password Setting

When this function is selected, the following message appears at the center of the screen to assist you in creating a password.

ENTER PASSWORD

Type the password, up to eight characters, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection.

To disable password, just press <Enter> when you are prompted to enter password. A message will confirm the password being disabled. Once the password is disabled, the system will boot and you can enter BIOS Setup freely.

PASSWORD DISABLED

If you have selected '**System**' in 'Password Setting' of 'BIOS Features Setup' menu, you will be prompted for the password every time the system reboots or any time you try to enter BIOS Setup.

If you have selected '**Setup**' at 'Password Setting' from 'BIOS Features Setup' menu, you will be prompted for the password only when you enter BIOS Setup.



IDE HDD Auto Detection

The Enhanced IDE features are included in all Award BIOS. Below is a brief description of these features.

ROM PCI/ISA BIOS (2A69KQ10) CMOS SETUP UTILITY AWARD SOFTWARE, INC.								
HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE
Primary Master:								
Select Primary Master Option (N=Skip): N								
OPTION	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE	
2(Y)	541	525	32	0	1049	67	LBA	
1	541	1050	16	65535	1049	63	NORMAL	
3	541	525	32	65535	1049	63	LARG	
Note: Some OSes (like SCO-UNIX) must use "NORMAL" for installation								
ESC: Skip								

Figure-11 IDE HDD Auto Detection Menu

1. Setup Changes

With auto-detection

- BIOS setup will display all possible modes supported by the HDD including NORMAL, LBA and LARGE.
- If HDD does not support LBA modes, no 'LBA' option will be shown.
- If number of physical cylinder is less than or equal to 1024, 'LARGE' option may not be shown.
- Users can select their appropriate mode .

With Standard CMOS Setup

	CYLS	HEADS	PRECOMP	LAND	SECTOR	MODE
				ZONE		
Drive C: User(516MB)	1120	16	65535	1119	59	Normal
Drive D: None(203MB)	684	16	65535	685	38	-----

When HDD type is in 'user' type, the 'MODE' option will be available for users to select their own HDD mode.



2. HDD Modes

The Award BIOS supports 3 HDD modes: NORMAL, LBA and LARGE, also Auto detect.

NORMAL

Generic access mode in which neither the BIOS nor the IDE controller will make any transformation during accessing. The maximum number of cylinders, heads and sectors for NORMAL mode are 1024,16 and 63.

If the user sets his HDD to NORMAL mode, the maximum accessible HDD size will be 528 megabytes even though its physical size may be greater than that.

LBA (Logical Block Addressing) mode

A new HDD accessing method to overcome the 528 Megabyte bottleneck. The number of cylinders, heads and sectors shown in setup may not be the number physically contained in the HDD.

During HDD accessing, the IDE controller will transform the logical address described by sector, head and cylinder number into its own physical address inside the HDD. The maximum HDD size supported by LBA mode is 8.4 Gigabytes.

LARGE mode

Some IDE HDDs contain more than 1024 cylinder without LBA support (in some cases, users do not want LBA). The Award BIOS provides another alternative to support these kinds of HDD.

BIOS tricks DOS (or other OS) into recognizing the number of cylinders is less than 1024 by dividing it by 2. At the same time, the number of heads is multiplied by 2. A reverse transformation process will be made inside INT13h in order to access the right HDD address.

Auto detect

If using Auto detect, the BIOS will automatically detect the IDE hard disk mode and set it as one of the three modes.

3. Remark

To support LBA or LARGE mode of HDDs, there must be some softwares involved which are located in Award HDD Service Routine(INT13h).It may fail to access a HDD with LBA (LARGE) mode selected if you are running under an Operating System which replaces the whole INT 13h.

Boot with BIOS defaults

If you have made all the changes to CMOS values and the system can not boot with the CMOS values selected in setup, clear CMOS after power-down, then power on again. System will boot with BIOS default settings.



-- This page is intentionally left blank --



Appendix A

QDI Motherboard Utility CD-ROM

A QDI Motherboard Utility CD-ROM is supplied with each motherboard. The contents used for this motherboard are:

1. Chipset Dispatches:
Intel Chipset Drivers included in the directory \ChipDrv\Intel can be used for this motherboard.
 - a. Intel PIIX4 Driver, included in directory \ChipDrv\Intel\PIIX4
This driver is for Windows 95/OSR2 which supports the latest Intel PCI devices such as the PCI IDE hard disk controller, PCI USB device etc. It can also remove the yellow question mark in the Device Manager of Windows 95 after installation.
Running \ChipDrv\Intel\PIIX4\Setup.exe for installation.
 - b. Intel Bus Master Driver, included in directory \ChipDrv\Intel\BMIDE
It's Intel Bus Master Driver for Windows 95, which can enhance the capability of IDE data transaction up to Ultra DMA/33MB supported by 440BX chipset or other ultimate chipset.
Running \ChipDrv\Intel\BMIDE\Setup.exe for installation.
2. PC-cillin 98
New viruses are appearing frequently; the chance of your PC being infected increases; antivirus softwares are becoming a must. PC-cillin 98 offers you full-time active virus protection as well as manual scans, plus virus clean capability. Keeping up to date on the latest threats and updating significant files are crucial in keeping antivirus software effective. PC-cillin 98 provides Free Virus Pattern File Updates from the Trend Micro Website:
<http://www.trend.com/download/pattern.htm> or
<http://www.antivirus.com/download/pattern.htm>.

Installation of PC-cillin 98
For Windows 95/98 English version, run Setup.exe for installation from the utility CD directory \Pccillin\Win9x.
For Windows 95/98 Chinese version, run Setup.exe for installation from the utility CD directory \Pccillin\PWin9x.
For Windows NT 4.0, run Setup.exe for installation from the utility CD directory \Pccillin\WinNT4.0.
S/N is PN EF-9991-6558-5857-5535.
3. QDI ManageEasy V2.0
It is well known that guaranteeing the computer's security and reliability is essential. Especially today, effectively managing and monitoring the computer's hardware is even more important; because processing and exchanging critical data through computer and network are happening everyday.



Moving with the computer's development, the system of the computer will become more and more complex; at the same time, the control computer's hardware will be strengthened. Today, it is possible to monitor and manage your complex hardware from Windows 9X and Windows NT. QDI ManageEasy is a system tool, a bridge between the complex hardware and OS, used to access hardware status and to execute control functions. It supports stronger functions for Windows 9X and Windows NT. These functions enable you to view more than one hundred of the basic information about the system and monitor some key reference data concerning computer health in real time. QDI ManageEasy also helps you to use remote access and control computers in your local area network. With QDI ManageEasy, you can improve your management level.

Installation of QDI ManageEasy V2.0

Run Setup.exe from the utility CD directory \QME2 to install the QDI ManageEasy V2.0. The QDI ManageEasy Setup Wizard will guide you through the installation process.

For detailed information on how to use QDI ManageEasy V2.0, please refer to the QDI ManageEasy V2.0 online help.

 
4. QDI SecurityEasy
This software provides a convenient access method to activate SecurityEasy. Other than pushing the SLEEP button, clicking the watchdog icon on the task bar also allows the system to enter Lock Status. Running \QSE\lock.exe for Windows 95 and Windows NT installation. (After installation refer to readme file for details by clicking Start/Programs/Security Easy Access). Please note, hardware is a manufacturing option.
5. QDI Motherboard Utility:
AWDFLASH.EXE
CBLOGO.EXE
LF.EXE
Refer to the online help for information on how to use these utilities.
6. Documents for QDI Motherboard:
The files included in the directory \Doc are:
Adobe Acrobat Reader V3.0 —ar32e301.exe
ManageEasy Manuals —QMEV12.PDF.




Appendix B.

Retention Mechanism & Pentium® II/ Celeron™ Processor Installation Procedures

1. Place Plastic Guide with plastic caps on the motherboard, and secure all four caps.

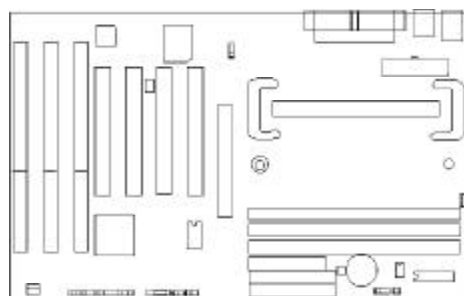

Plastic Guide with
four nuts


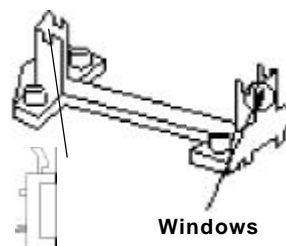 


Windows

Celeron fittings


- Note: 1. Please choose four caps which match the motherboard.
2. If choosing to use Celeron™ Processor, snap-on Celeron fittings onto the Plastic Guide.
 3. Please note the Plastic Guide has one orientation. If one way doesn't fit, change the direction to the other way. Do not forcefully press the Plastic Guide onto the motherboard.

  2. Install HSSBASE (Heatsink Support Base) on motherboard, then insert the two plastic pins through the HSSBASE securing it to the motherboard.

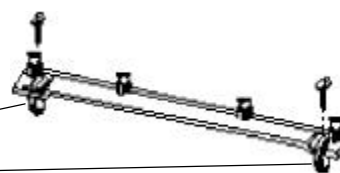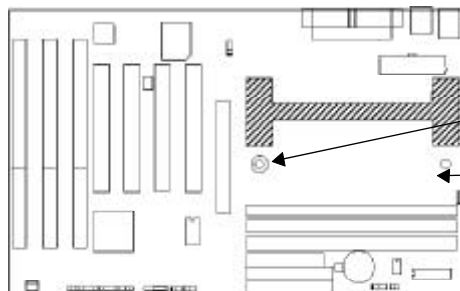




 3. Insert Pentium® II or Celeron™ Processor in Slot1.

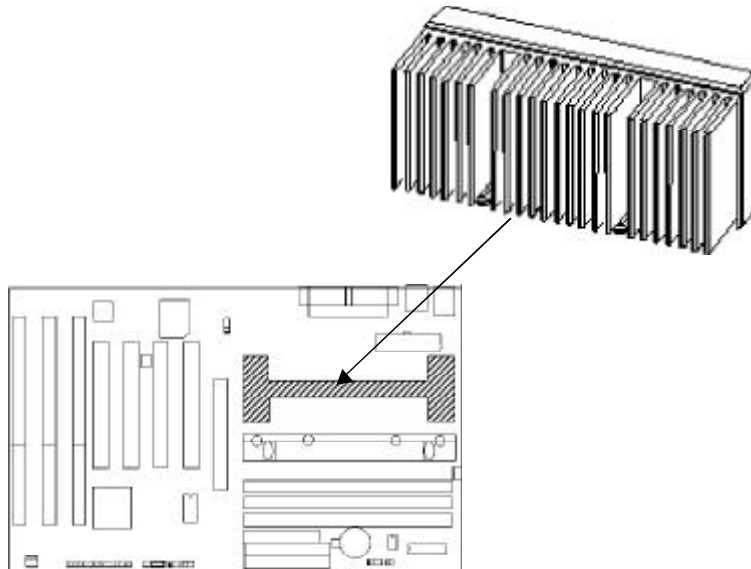


 4. Clip Plastic Bar onto the HSSBASE through the fins on the processors' heatsink.

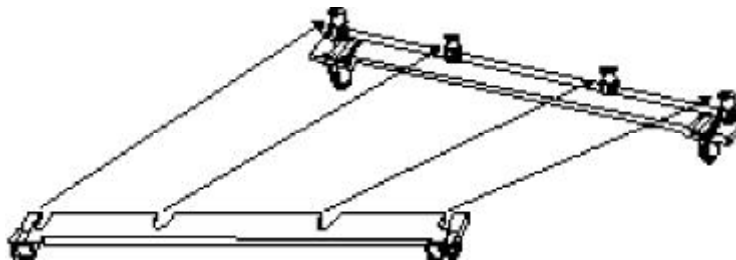



 5. The Retention Mechanism installation procedure is completed as shown below.

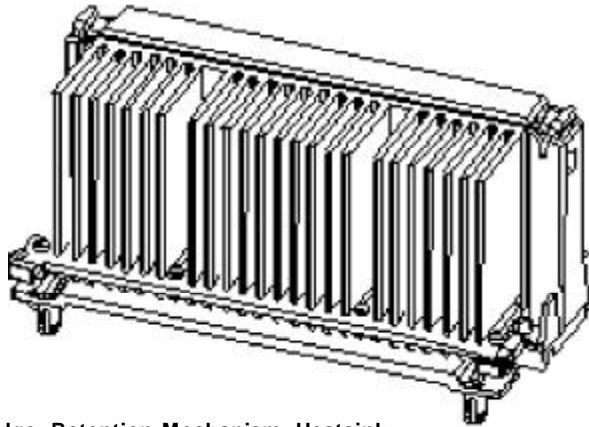

S.E.C Cartridge, Retention Mechanism, Heatsink support, and ATX Form Factor Heatsink Isometric View
Not To Scale

Remark:

Please skip step2 and step4 for Boxed Pentium® II Processor and refer to relevant details of this kind of processor for your installation.



Appendix C.

Boot Logo

When you power on or reset your system, the picture listed below will be shown on the screen.



If you press <Esc>, it switches to the booting message screen. Otherwise, it enters operating system directly. You can use '**cblogo.exe**' (included on the QDI Motherboard Utility CD) to replace it by any other logo which you prefer. Regarding the method of using **cblogo.exe** utility, please refer to it's online help. If you don't prefer the logo displayed on the screen during boot up, set the 'Show Bootup Logo' option as Disabled in the 'BIOS FEATURES SETUP' section of the BIOS

*** We reserve the right of modifying the default full-logo of QDI without further notification.**

Item Checklist

Completely check your package. If you discover damaged or missing items, contact your retailer.

- ☒ BrillianX 1S/2000 motherboard
- ☒ QDI Motherboard Utility CD-ROM
- ☒ Retention Module
- ☒ I/O shield
- ☒ 1 IDE ribbon cable
- ☒ 1 floppy ribbon cable
- ☒ User' s manual

Notice

The information in this document is subject to change in order to improve reliability, design, or function without prior notice and does not represent a commitment on the part of this company. In no event will we be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or the possibility of such damages.

All trademarks are the property of their respective owners.

If you need any further information, please visit our web-site: "www.qdigrp.com".

Board Layout of BrilliantX 1S/2000 V2.0

