

# Declaration of conformity



**QUANTUM DESIGNS(HK) LTD.**  
**5/F Somerset House, TaiKoo Place 979 Kings Road,**  
**Quarry Bay, Hong Kong**

declares that the product

**Pentium®II Motherboard**  
**P6I440BX/BV**

is in conformity with  
(reference to the specification under which conformity is declared in  
accordance with 89/336 EEC-EMC Directive)

- ☒ EN 55022 Limits and methods of measurements of radio disturbance characteristics of information technology equipment
- ☒ EN 50081-1 Generic emission standard part 1:  
Residential, commercial and light industry
- ☒ EN 50082-1 Generic immunity standard part 1:  
Residential, commercial and light industry

European Representative:

QDI COMPUTER (UK) LTD

QDI SYSTEM HANDEL GMBH

QDI COMPUTER (FRANCE) SARL


QDI COMPUTER (ESPANA) S.A.

QDI COMPUTER (SCANDINAVIA) A/S

QDI COMPUTER (NETHERLANDS) B. V.

QDI COMPUTER HANDELS GMBH

QDI COMPUTER (SWEDEN) AB

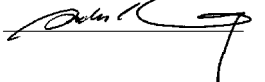Signature : 

Place / Date : HONG KONG 1998

Printed Name : Anders Cheung

Position/ Title : President

## Declaration of conformity



 
Trade Name:	QDI Computer ( U. S . A. ) Inc.
Model Name:	P6I440BX/BV
Responsible Party:	QDI Computer ( U. S. A.) Inc.
Address:	41456 Christy Street Fremont, CA 94538
Telephone:	(510) 668-4933
Facsimile:	(510) 668-4966
Equipment Classification:	FCC Class B Subassembly
Type of Product:	AGP Pentium®II Motherboard
<b>Manufacturer:</b>	<b>Quantum Designs (HK) Inc.</b>
Address:	5/F, Somerset House, TaiKoo Place 979 Kings Road, Quarry Bay, HONG KONG

### Supplementary Information:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Signature : 

Date : 1998



## CONTENTS

 SpeedEasy Quick Setup(English) .....	1
SpeadEasy Schnell-Installation(Deutsch) .....	3
Fácil Y Veloz Rápida Instalación(Español) .....	5
Facilité de vitesse Initialisation(Francais) .....	7
Setup Della Scheda Speedeasy(Italiano) .....	9
SpeedEasy ¿ È Ø ¨ Ö Ä Ü Ö Ð Ä Ì à .....	11
SpeedEasy ¿ È Ø ¨ Ö Ä Ü Ö Ð Æ ð à .....	13
<b>1. Introduction .....</b>	<b>15</b>
Overview .....	15
Key Features .....	15
<b>2. Installation Instructions .....</b>	<b>19</b>
<b>External Connectors .....</b>	<b>19</b>
PS/2 Keyboard & PS/2 mouse Connector .....	19
USB1&USB2 .....	19
Parallel Port Connector and Serial Port Connector .....	19
Line-in jack, Microphone-in jack and Line/Speaker-out jack MIDI/Joystick Connector .....	20
ATX Power Supply Connector&Power Switch .....	20
Hard Disk LED Connector .....	21
Reset Switch .....	21
Speaker Connector .....	21
Power LED Connector .....	21
Key_Lock Connector .....	21
Green LED Connector .....	21
Hardware Green Connector .....	21
Infrared Header .....	22
Fan Connector(CPUFAN&CHSFAN) .....	22
Wake-Up On LAN (WOL) .....	22
Wake-Up On Internal Modem (WOM) .....	23
Chassis Security Switch(CHSSEC) .....	23
Digital Audio Connector(CDLIN, AUXIN) .....	23
Microphone-in and Line-in Connector(BLSND) .....	24
First COM Port Connector(1STCOM) .....	24
Sound Connector(PC-PCI) .....	24
Expansion Slots & I/O Ports description .....	25



## CONTENTS

<b>Jumper Settings</b> .....	25
ClearCMOS .....	25
Enable keyboard password power-on function .....	26
Speaker/Line-out selection .....	26
<b>Memory Configuration</b> .....	27
<b>3. SecurityEasy</b> .....	29
<b>4. BIOS Description</b> .....	31
Utility Support .....	31
<b>AWARD BIOS Description</b> .....	33
Entering Setup .....	33
Load Setup Defaults .....	33
StandardCMOS Setup .....	33
SpeedEasyCPU Setup .....	36
BIOS Features Setup .....	37
Chipset Features Setup .....	39
Power Management Setup .....	41
PNP/PCIconfiguration Setup .....	44
Integrated Peripherals .....	46
System Monitor Setup .....	48
SecurityEasy Setup .....	49
Password Setting .....	51
IDE HDD Auto Detection .....	52
Power-on Boot .....	53
<b>5. Creative Audio Description</b> .....	55
Features .....	55
Creative Software Installation .....	56
Installation of Windows 95 driver .....	56
Installing Driver in DOS/Windows 3.1X .....	57
Installation of Windows NT 4.0 Driver .....	57
Enabling/Disabling the Creative 3D Stereo Enhancement effect .....	58
Software Wavetable Synthesis .....	59
<b>Appendix A</b> QDI Motherboard Utilities CD-ROM .....	61
<b>Appendix B</b> Installation Procedures .....	62
<b>Appendix C</b> Boot Logo .....	65



## SpeedEasy Quick Setup

### Procedures :

1. Correctly insert the Pentium®II or Intel® Celeron™ processor.
2. Plug in other configurations and restore the system.
3. Switch on power to the system and press the <Del> key to enter BIOS Setup.
4. Enter "SpeedEasy CPU SETUP" menu to set up the CPU speed.

**Note: If you do not set the CPU speed, your system will run at the default setting ( 200MHz for processor with 100MHz host bus speed, 133MHz for processor with 66MHz host bus speed.).**

5. Save and exit BIOS Setup, your system will now boot successfully.



## SpeedEasy CPU Setup Menu

Select <SpeedEasy CPU SETUP> item from the main menu and enter the sub-menu:



Figure - 1 SpeedEasy CPU Setup Menu

BIOS provides you with a set of basic values for your processor selection instead of the jumper settings. The processor speed can be manually selected on the “SpeedEasy CPU SETUP” menu screen.



### Warning:

Do not set CPU frequency higher than its working frequency. If you do, we will not be responsible for any damage caused.



## Schnell-Installation durch SpeedEasy

### Vorgehensweise der Installation:

1. Legen sie die Pentium®/ Intel® Celeron™ im Slot 1 mit Hilfe der mitgelieferten Halterung.
2. Vervollständigen Sie das System mit den weiteren erforderlichen Computerkomponenten
3. Drücken Sie die Taste < Entf > und schalten Sie das System an um das BIOS-setup zu gelangen.
4. Steigen Sie in das Menü "SpeedEasy CPU SETUP" ein, um die Geschwindigkeit einzustellen.

**ACHTUNG:** Falls Sie die Taktfrequenz der CPU nicht setzen, arbeitet Ihr System mit den Standardwerten für die CPU. (200MHz für den CPU mit 100MHz Host Bus Speed, 133MHz für den CPU mit 66MHz Host Bus Speed).

5. Speichern Sie die Einstellungen und verlassen Sie das BIOS, um die zuvor eingestellte Taktfrequenz zu aktivieren.



## SpeedEasy CPU Installationsmenü

Wählen Sie < SpeedEasy CPU SETUP> aus dem Hauptmenü und öffnen Sie das untergeordnete Menü

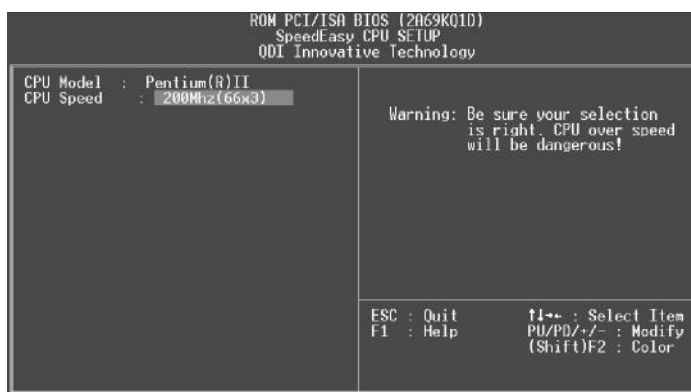


Abb. 1 SpeedEasy CPU Installationsmenü

Das BIOS stellt Ihnen eine Reihe von Grundeinstellungen für Ihren CPU zur Verfügung, anstelle von "jumper setting". Sie können manuell die Geschwindigkeit des CPU innerhalb des "SpeedEasyCPUSETUP" einstellen



### warnung:

Bitte Setzen Sie die Taktfrequenz der CPU nicht höher als die tatsächliche freigegebene Taktfrequenz, ansonsten Kann QDI für rechtliche Ansprüche nicht herangezogen werden.





## SpeedEasy Instalación rápida

### Procedimiento:

1. Introduzca correctamente el Pentium®II/ Intel® Celeron™
2. Finalize el proceso de ensamblaje de su equipo.
3. Presione la tecla <Supr> y encienda el sistema, para entrar en BIOS.
4. Entre al menu "SpeedEasy CPU SETUP" para establecer la velocidad de su CPU.

**Nota: Si no establece la velocidad del CPU, su sistema funcionará a la velocidad minima por defecto (200MHz para CPU con velocidad de bus de 100MHz, 133MHz para CPU con velocidad de bus de 66MHz )**

5. Salve y salga de BIOS, luego su sistema arrancará a la velocidad por Ud. seleccionada.



## Menu del SpeedEasy CPU

Seleccione el ítem <SpeedEasy CPU SETUP> desde el menu principal, y entre en el submenu:

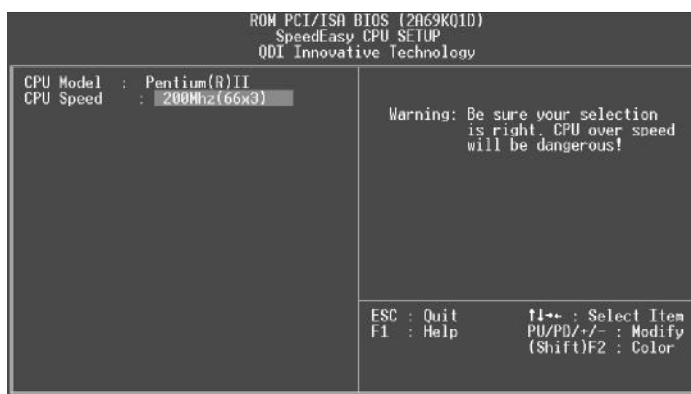


Figura-1 Menu del CPU SpeedEasy

BIOS le proporcionará unos valores básicos para la elección de su CPU, en vez de tener que configurar jumpers. Ud. puede seleccionar manualmente la velocidad de CPU en el menu "SpeedEasyCPUSETUP".



### Aviso

No es recomendable seleccionar una frecuencia de trabajo superior a la cual esta diseñada su CPU. De otra manera, no seremos responsables de los daños que esto pudiera ocasionar.