

# **MAINBOARD**

## **User's Manual**

**Rev: 1.00**

**Date: January - 99**

- \* All other product names are trademarks or copyrights of their respective owners.
- \* Specifications and information contained in this manual are subject to change without notice.

---

## FCC & DoC Compliance Statement

This device complies with Part 15 of the FCC rules, operation is subject to the following two conditions.

1. This device may not cause harmful interference and,
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interface to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Move the equipment away from the receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for additional suggestions.

The FCC requires the user to be notified that any change or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the user's authority to operate such equipment. The use of shielded cables for connection of the monitor to the graphics card is required to assure compliance with FCC regulations.



---

# Table of Contents

<b>INTRODUCTION .....</b>	<b>5</b>
Product Description .....	5
Item Checklist .....	6
Specifications .....	7
Board Level Feature.....	8
Comprehensive Mainboard View .....	10
<b>INSTALLATION .....</b>	<b>11</b>
Installing the CPU .....	11
Setting the Jumpers .....	12
Connections.....	15
Installing the Memory (DIMM) Modules.....	27
Installing an AGP Card .....	28
<b>MAINBOARD BIOS SETUP .....</b>	<b>29</b>
About the BIOS .....	29
Main Menu.....	31
Standard CMOS Setup.....	32
BIOS Features Setup.....	36
Chipset Features Setup .....	40
Power Management Setup .....	43
PNP/PCI Configuration Setup.....	46
Load BIOS Defaults.....	48
Load Setup Defaults.....	48
Integrated Peripherals Setup .....	49
Supervisor Password and User Password Setting.....	52
IDE HDD Auto Detection .....	53
Save & Exit Setup / Exit Without Saving.....	53
PCI Device Listing .....	54

**TABLE OF CONTENTS**

---

**BUILT-IN SYMBIOS SCSI BIOS.....55**

**FLASH BIOS PROGRAMMING UTILITY .....62**

**DMI UTILITY .....64**

---

# INTRODUCTION

## Product Description

Designed as a flexible, high-performance and cost-effective solution for System Integrators and End Users alike, this mainboard provides the power and expandability to meet the requirements of the most advanced operating systems and software applications.

This mainboard is designed to provide Pentium ®-based (FSB 100MHz) system by utilizing the Intel® 440ZX-100 AGPset on ATX AGP/PCI Platform. By incorporating such advanced features as Ultra DMA/66 Bus Mastering IDE and Universal Serial Bus (USB) onto the mainboard, optimum system performance is assured and system design and implementation is simplified.

Fully “Plug & Play” compatible via an Award BIOS, this mainboard facilitates easy system configuration and peripheral setup. Advanced BIOS features include Temperature Monitoring and Alert functions designed to prevent the CPU from overheating. Also, the Award BIOS supports ACPI Readiness and is compatible with the PC’98 specification. This mainboard is the ideal foundation for high-end computer systems.

# INTRODUCTION

---

## Item Checklist


Your mainboard package should include the items listed below. Damaged or missing items should be reported to your vendor.

- The mainboard
- Floppy disk drive ribbon cable
- IDE ribbon cable
- This User's Manual
- CD-ROM/Diskettes containing
  - Xstore Pro IDE Bus Master driver
  - Support software for updating the FLASH BIOS and IDE drivers
  - Trend ® PC-cillin Anti-Virus Software
  - ESS Solo-1 Drivers

## Specifications

<b>Processor</b>	Socket 370 support INTEL® Celeron (S370) processors up to 500 MHz
<b>Chipset</b>	Intel® 440ZX-100 AGPset
<b>BIOS</b>	Award ® BIOS, support DMI, Green PC, Plug-and-Play, ACPI, Boot from CD-ROM, SCSI, LS-120 120MB F.D.D., and ZIP Devices Support Symbios® SCSI BIOS Anti-Virus BIOS to prevent boot-virus
<b>System Memory</b>	2×168-pin DIMM sockets for up to 256 MB SDRAM memory capacity Support 8/16/32/64/128 MB memory modules ECC supported
<b>On-board I/O Features</b>	1×FDC Port ( LS120) 1×Parallel Port (EPP, ECP Port) 2×Serial Port (16550 Fast UART Compatible) 2×USB ports 1×IrDA TX/RX Header
<b>Advanced Features</b>	<ol style="list-style-type: none"> <li>1. Modem Ring-in / Keyboard / Mouse Power on</li> <li>2. Wake up on LAN</li> <li>3. Hardware Monitoring (CPU Fan, CPU Temperature, Voltage)</li> <li>4. SB-Link supports Sound Blaster card for early DOS games</li> <li>5. Free bundle Xstore Pro IDE Bus Master Driver</li> <li>6. Free bundle Anti-Virus PC-Cillin software</li> </ol>
<b>PCI Bus Master IDE</b>	2×UltraDMA/66 IDE Port UltraDMA/33 Mode up to 33MB/s transfer rate
<b>Power Connector</b>	3V, 5V and 12V ATX 20-pin Power Connector
<b>Switching VR</b>	Switching Voltage Regulator to support 1.3V to 3.5V
<b>Expansion Slots</b>	1×32-bit AGP slot, 5×32-bit PCI Slots, 2×16-bit ISA Slots
<b>Onboard Audio Features</b>	ESS Solo1 PCI Sound Chip – software Wavetable support 1×MIDI/Game port 1×Audio jacks: Line-out, Line-in and Mic-in
<b>Form Factor</b>	ATX Size ( 7.5” x 12” or 190mm x 305mm)

## Board Level Feature

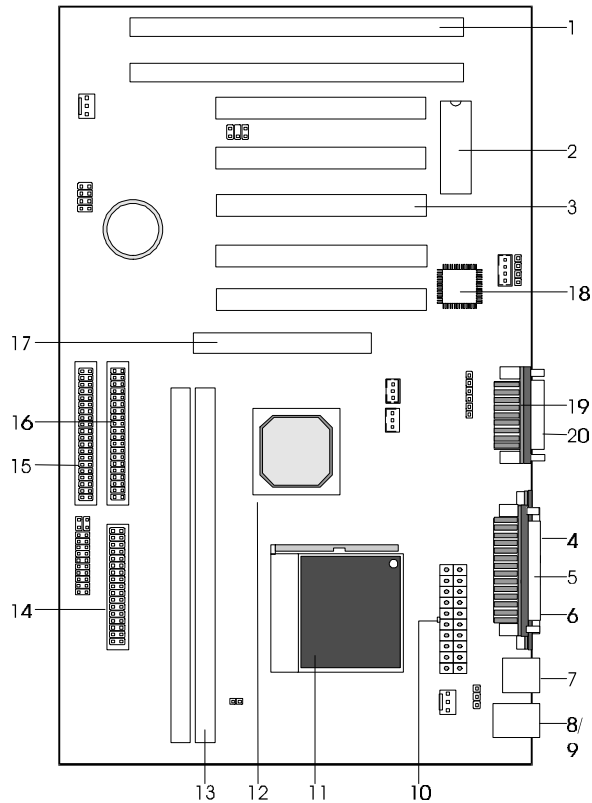

- |                                    |                              |
|------------------------------------|------------------------------|
| 1. ISA slots                       | 11. CPU socket ( Socket 370) |
| 2. Mainboard BIOS                  | 12. Intel® 440ZX-100 AGPset  |
| 3. PCI slots                       | 13. DRAM DIMM sockets        |
| 4. COM2 connector                  | 14. Floppy connector         |
| 5. Printer port connector          | 15. Primary IDE connector    |
| 6. COM1 connector                  | 16. Secondary IDE connector  |
| 7. USB connectors                  | 17. AGP slot                 |
| 8. PS/2 Mouse connector(top)       | 18. Sound chip               |
| 9. PS/2 Keyboard connector(bottom) | 19. MIDI/Game port           |
| 10. ATX power connector            | 20. Audio port               |


\* Board Size: ATX Size : 7.5" x 12" (190mm x 305mm)



1. **ISA SLOTS:** (2) 16-bit ISA slots.
2. **MAINBOARD BIOS:** Award BIOS supporting “Plug and Play”, DMI, Green PC specification, Enhanced IDE and Multi-I/O. The BIOS is FLASH Upgradeable via the AWDFLASH Utility.
3. **PCI SLOTS:** (5) 32-bit PCI slots are provided.
4. **COM2 CONNECTOR:** High-speed UART compatible serial port. COM2 can be directed to the Infrared Module for wireless connection capability
5. **PRINTER PORT CONNECTOR:** EPP and ECP compatible parallel port.
6. **COM1 CONNECTOR:** High-speed UART compatible serial port.
7. **USB CONNECTORS:** These connectors permit the connection of two USB peripheral devices directly to the port without an external hub. USB is a new technology supporting keyboards, mouse, printers, fax modems and other telephony devices.
8. **PS/2 MOUSE CONNECTOR:** Supports PS/2 style mice
9. **PS/2 KEYBOARD CONNECTOR:** Supports PS/2 style keyboards.
10. **ATX POWER CONNECTOR:** 20-pin ATX Power Connector.
11. **CPU SOCKET:** Socket 370 mainboard supports CPU speeds up to 466MHz.
12. **INTEL® 440ZX-100 AGPSET:** Supports Socket 370 100MHz CPUs.
13. **DRAM DIMM SOCKETS:** (2) 168-pin DIMM sockets are provided to support a maximum RAM memory capacity of 256MB.DIMM types 3.3V Extended Data Output (EDO) DRAMs and SDRAM.
14. **FLOPPY CONNECTOR:** Built-in floppy controller supports (2) floppy drives.
15. **PRIMARY IDE CONNECTOR:** Connector for first IDE channel. The on-board PCI Bus Mastering IDE controller features support for DMA Mode 2, PIO Modes  $\frac{3}{4}$ , and Ultra DMA/33 (33MB/sec) for faster data transfer rates. (2) Connectors are provided for support of up to (4) IDE devices on two channels. Other ATAPI and Enhanced IDE devices such as Tape Drives and CD-ROMs are also supported.
16. **SECONDARY IDE CONNECTOR:** Connector for second IDE channel.
17. **AGP SLOT:** (1) Accelerated Graphics Port for high performance graphics capabilities, especially 3D.
18. **SOUND CHIP:** ESS PCI Sound Chip supporting software wavetable.
19. **MIDI/GAME PORT:** 15-pin female MIDI/Joystick connector.
20. **AUDIO PORT:** Three 1/8” female jacks for Line Out, Line In and MIC.

# INTRODUCTION

## Comprehensive Mainboard View

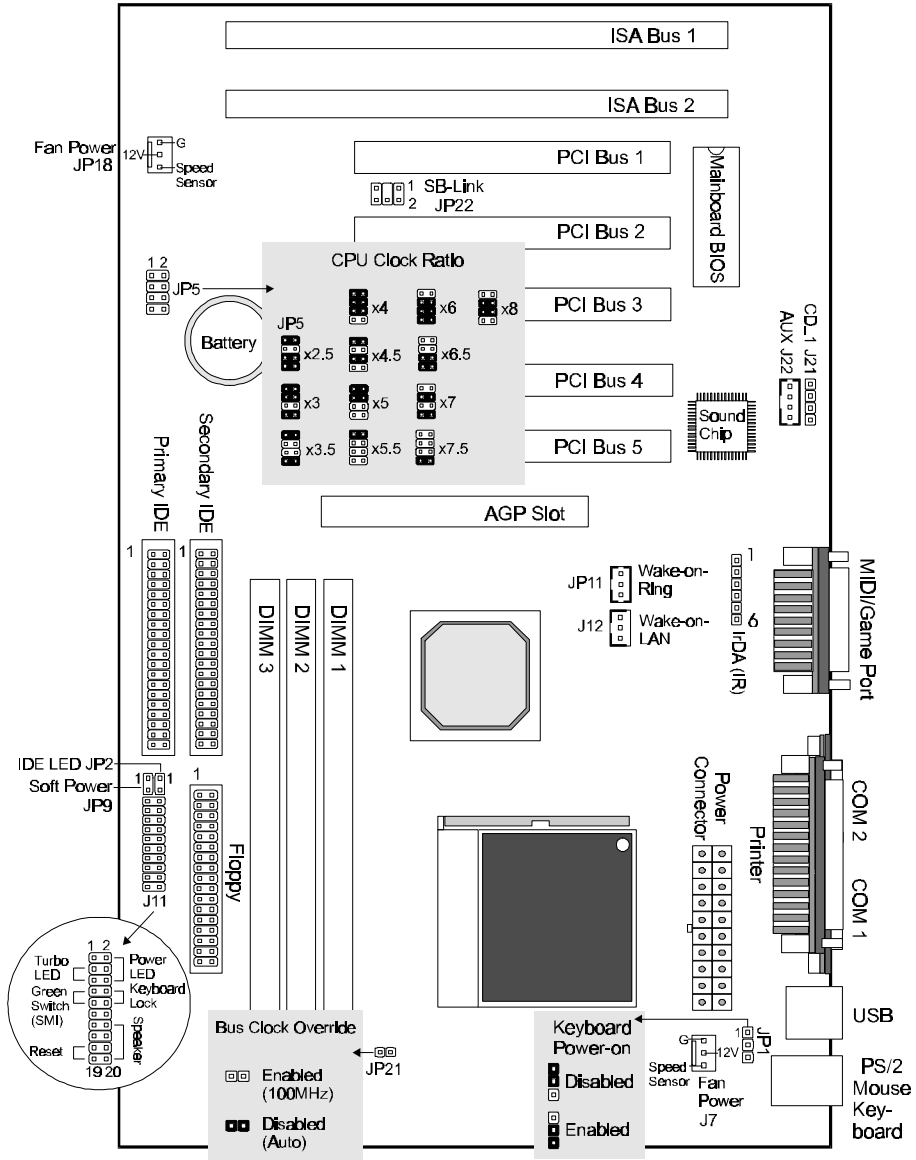

---

# INSTALLATION

## *Static Precautions*


Static electricity can be a serious danger to the electronic components on this mainboard. To avoid damage caused by electrostatic discharge, observe the following precautions:

- ✓ Don't remove the mainboard from its anti-static packaging until you are ready to install it into a computer case.
- ✓ Before you handle the mainboard in any way, touch a grounded, anti-static surface, such as an unpainted portion of the system chassis, for a few seconds to discharge any built-up static electricity.
- ✓ Handle add-in cards and modules by the edges or mounting bracket.

## Installing the CPU

✓ **WARNING:** Use of a CPU Cooling Fan is required to prevent CPU from overheating. The Fan should be installed first before inserting the CPU into its socket.

1. Locate the ZIF (Zero Insertion Force) Socket 370.
2. First open the socket by pulling the lever sideways, then upwards. Notice how the lever locks in place when pressed all the way down.
3. The CPU must be inserted with the correct orientation. One corner of the CPU has a "Notch". Align this corner towards the end of the lever as shown in the figure at right. Insert the CPU and press it down.
4. Close the lever until it locks into place.

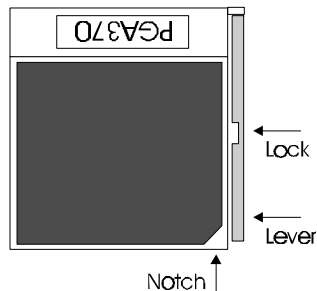


# INSTALLATION


---

## Setting the Jumpers

Jumpers are used on this mainboard to select various settings and features. A 2-pin jumper has two settings: Open and Short (or Closed). The jumper is closed by placing the Jumper Cap across the two pins, thereby connecting them. 3-pin jumpers can be set to pins 1-2 or 2-3 connected. Pin-1 is labeled on the circuit board.

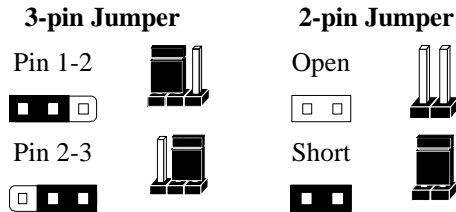

### Setting the Bus Clock Override Jumper (JP21)

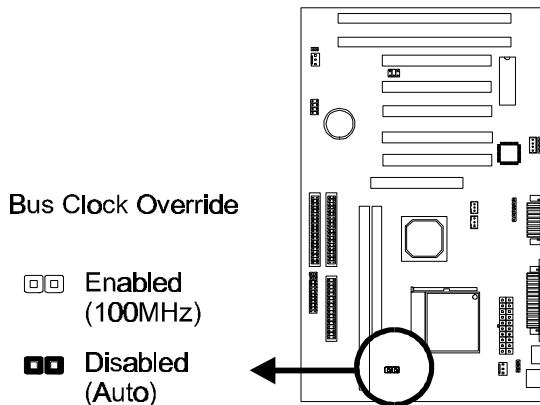


- Setting the Bus Clock Override Jumper to **Enabled** overrides the CPU's default Bus Clock and set it at 100 MHz.
- Over-clocking may cause serious system damage.

## Setting the CPU Clock Selection Jumpers (JP5)

**Note:** *JP5 is for test purpose only.* The final product of Intel S-370 will have its CPU ratio preset and locked internally. The CPU ratio setting from the mainboard will be ignored.

- The Internal (Core) frequency corresponds to the number marked on the CPU. The External Frequency when multiplied with the Ratio gives the CPU's internal frequency.
- New settings may be available for new CPU products.
- Such information is available via the Intel WWW site.

CPU Clock	Ratio	Bus Clock
233MHz	×3.5	66MHz
266MHz	×4.0	66MHz
300MHz	×4.5	66MHz
333MHz	×5.0	66MHz
366MHz	×5.5	66MHz
400MHz	×6.0	66MHz
433MHz	×6.5	66MHz
350MHz	×3.5	100MHz
400MHz	×4.0	100MHz
450MHz	×4.5	100MHz
500MHz	×5.0	100MHz
550MHz	×5.5	100MHz
600MHz	×6.0	100MHz
650MHz	×6.5	100MHz
700MHz	×7.0	100MHz

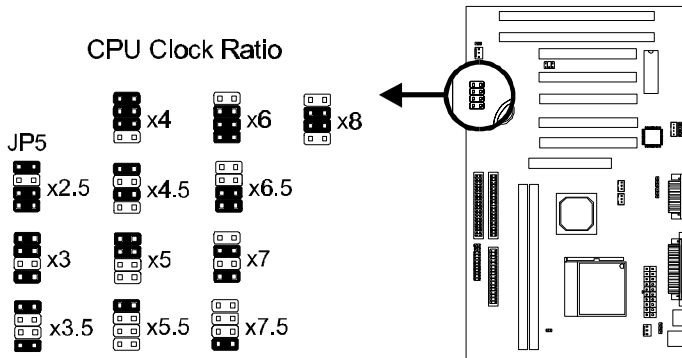


# INSTALLATION

---

## ***Keyboard Power-on Jumper (JP1)***

This mainboard features the Keyboard Power-on function. You have the options of pressing a key combination (Ctrl and one of the function keys F1-F12) to power on the system, or you may choose to type a password to power on the system. These options are set in the ***Integrated Peripherals Setup*** of the BIOS.

**Note:** If you choose to use a password to power on the system, it is recommended to keep a written record of your password. If you forget the password, the CMOS must be cleared by removing the mainboard's battery AND disconnecting the mainboard's power supply for a couple of seconds then re-installing them back. This is the only way you can power on your system again.

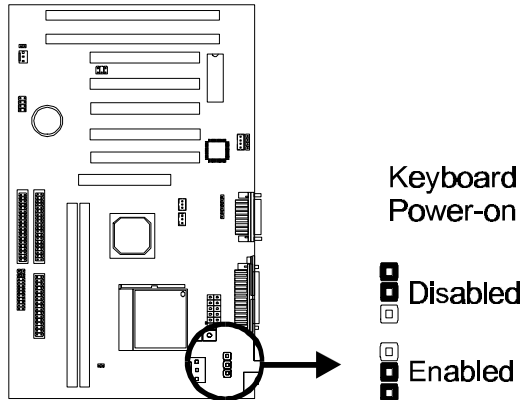


## Connections

### *Cooling Fan Connector (J7 and JP18)*

This mainboard features a fan speed monitoring function to alert you when the cooling fan starts to malfunction.

Plug the 3-pin Header Connector from the cooling fan to J7 or JP18. These connectors are keyed to ensure proper connection.

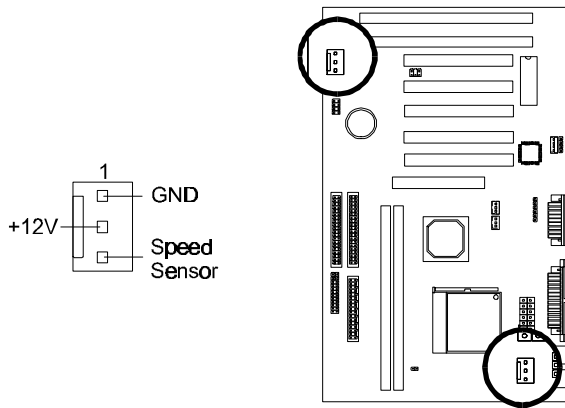

# INSTALLATION

---

## ***IDE Activity LED (JP2)***


Hook the IDE LED lead to this jumper, with the RED lead corresponding to Pin1.

## ***Soft Power Switch (JP9)***

Connects to the Power Switch featured on ATX case design. This switch must be hooked up before the system can be powered on, unlike the traditional “Baby-AT” designs where the power switch is located on the power supply itself.

**Note:** Under the following two conditions, you have to press and hold the switch for longer than 4 seconds to power off your system, regardless of the “Soft-Off by PWRBTN” setting in the ***Power Management Setup*** of the BIOS.


- *Shortly after the system is powered on, when the BIOS message is not yet appear.*
- *When CPU hangs.*

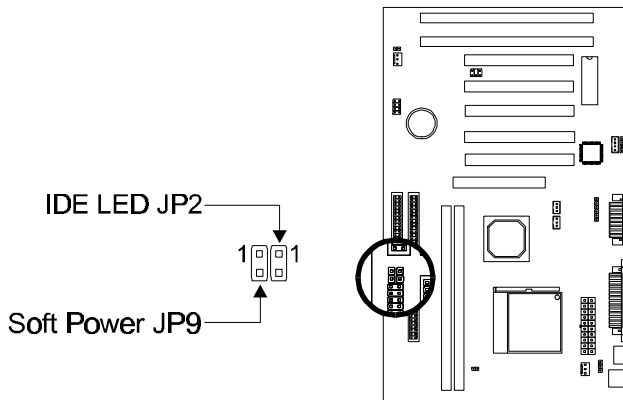



## *Power Supply Connector*



This mainboard features an ATX Power Connector. This connector is keyed to prevent connection in the wrong direction. Line up the locking mechanism on the connector from the ATX Power Supply with the tab on the mainboard connector. Press down until the two connectors are locked.

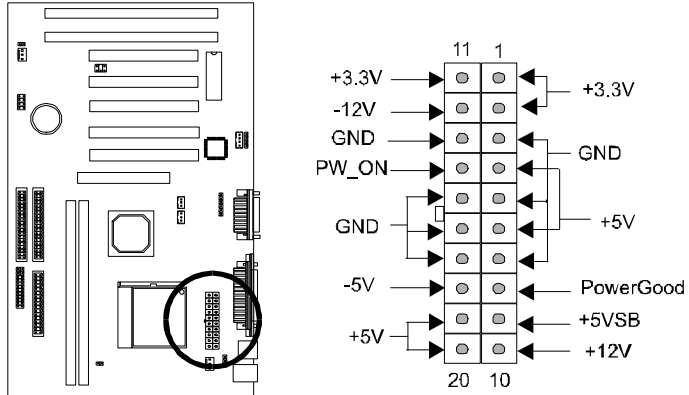

# INSTALLATION

---

## *System Functions Jumper Block (J11)*

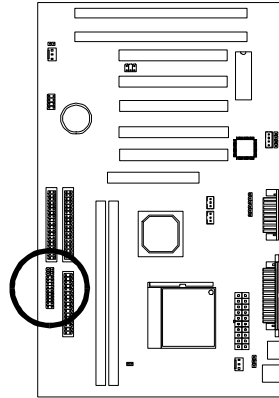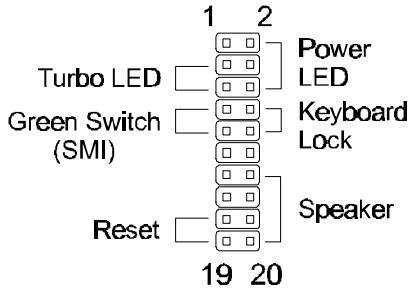

**Pins [3 & 5] Turbo LED switch** - The Turbo function is not supported by this mainboard. Therefore, the Turbo LED will always remain lit as long as the system power is on.

**Pins [7 & 9] SMI Green Switch lead** – If your system’s case has the Green Switch, hook the lead from the switch to pins 7 and 9. A Green Switch is used to save electricity by putting the system into a suspend mode when the computer is not being used. This switch could also be used by the Turbo switch on the front of the system since this mainboard does not support that function. For this switch to be functional, it must first be enabled in the *Power Management Setup* in the BIOS Setup utility.

**Pins [17 & 19] Reset switch lead** - Connects to the Reset Switch lead from the system case. The reset switch is used to “Cold-boot” the system without actually turning off the power, reducing wear and tear on the power supply.

**Pins [2, 6] Power LED lead** - Pins 2 & 6 connect to the Power LED from the system case.

**Pins [8, 10] Keyboard lock switch lead** - Pins 8 & 10 connect to the case-mounted keylock switch.


**Pins [14 & 20] Speaker connector** - Connects to the Speaker lead from the system case.

## ***Wake-on-LAN Connector (J12)***

The Wake-up On LAN function will allow the network to wake up a Soft Power Down (Soft-Off) PC. However, if your system is in the Suspend mode, you can wake-up the system only through an IRQ or DMA interrupt.

To use the Wake-up On LAN function, you must enable the “*Power On By Ring/LAN*” field in the ***Power Management Setup*** of the Award BIOS. Connect the cable that comes with your LAN card to location J12 on the system board. Refer to the add-in card’s manual for details.


**Note:** Your LAN card must support Magic Packet in order to use the Wake-up On LAN function.

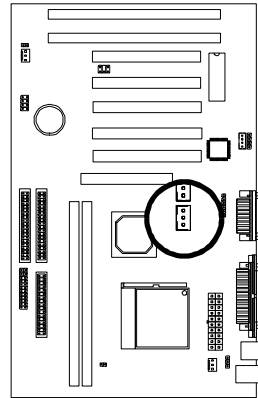

## ***Wake-on-Ring Function (JP11)***

The Wake-on-Ring function allows the modem to remotely power on the system. Install an external modem (normally to COM2) and enable **Power On by Ring/LAN** function from BIOS setup.

For the function to work for an ***internal modem card***, you must also connect the Wake-on-Ring cable on the modem card to the Wake-on-Ring function connector (JP11) on the mainboard.

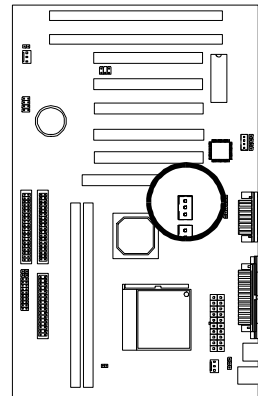


# INSTALLATION

---


## *USB Connector*

This 8-pin connector permits connection of two USB peripheral devices directly to the system without an external hub.

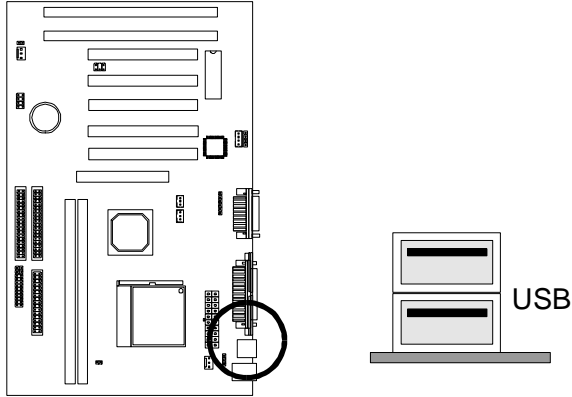

## *PS/2 Keyboard and Mouse Connectors*

These two connectors are located on the back panel of the mainboard.

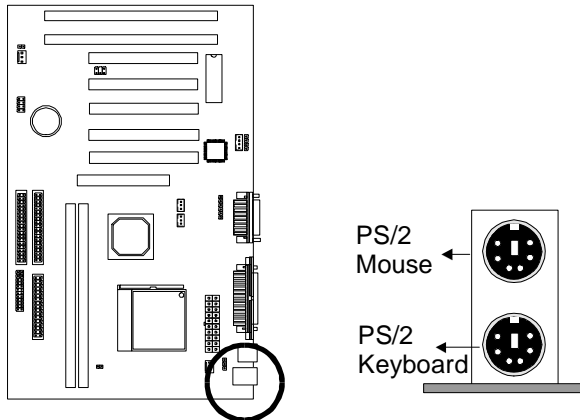

## *Serial and Parallel Ports*


A 25-pin D-Sub header is provided on the back panel for a multi-mode bi-directional parallel port.

Two 9-pin D-Sub headers are also provided on the back panel for Serial ports.

### \* **Modem Ring-In Power On**


Install a modem (normally to COM2) and enable **Power on by Ring/LAN** function from BIOS setup. This allows the modem to remotely power on the system.

For the function to work for an *internal modem card*, you must also connect the Wake-on-Ring cable on the modem card to the Wake-on-Ring function connector (JP11) on the mainboard.

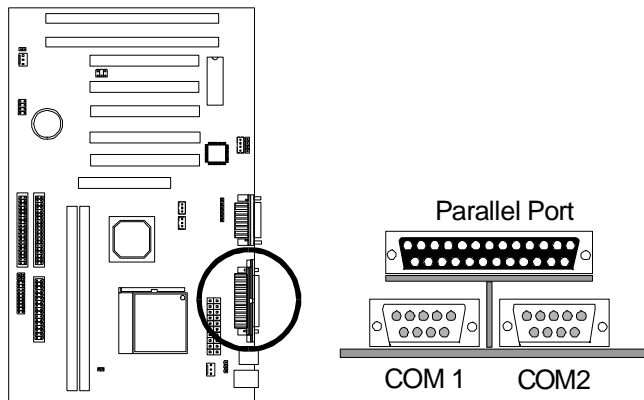


# INSTALLATION

## *IrDA-compliant infrared module connector*

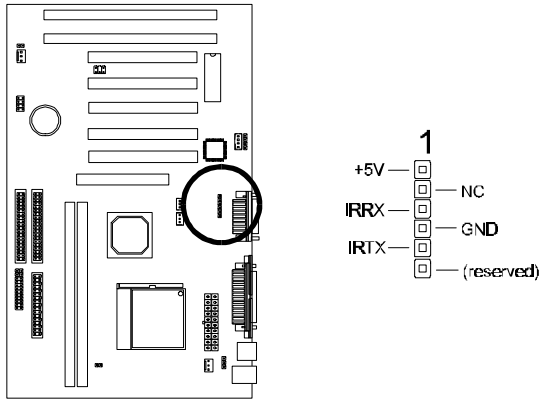


The IrDA connector bracket hooks directly to this connector on the mainboard. This connector provides support for the optional wireless transmitting and receiving infrared module. You must first configure through “UART2 Mode” in ***INTEGRATED PERIPHERALS SETUP*** where UART2 is directed, COM2 or IrDA.

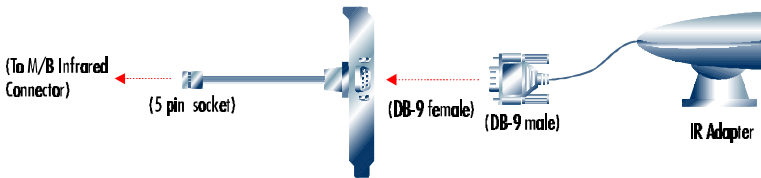

## *Floppy drives*

The on-board floppy controller supports (2) floppy disk drives with the floppy ribbon cable provided. Make sure the RED stripe on the ribbon cable is oriented towards Pin-1. Notice the “twist” between the sets of connectors on the floppy cable. The floppy drive “A” position is at the END of the cable, whereas floppy drive “B” is hooked to one of the connectors on the other side of the twist. The cable provides both “Edge” and “Pin” connectors for both the A and B positions to match the connector on your floppy drives.

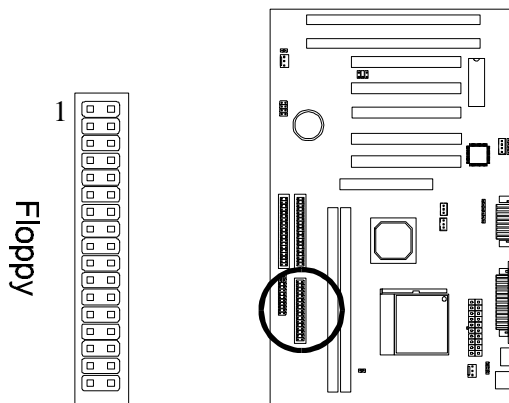

# INSTALLATION

---


## *IDE Hard Drives and CD-ROMs*

The on-board Enhanced IDE controller can support up to (4) IDE hard drives or other ATAPI devices, such as CD-ROMs. This controller, as with all Enhanced IDE controllers, consists of both **Primary** and **Secondary** ports. Each port has an associated connector and cable which can support up to (2) ATAPI devices each.

All IDE devices have jumpers which allow the user to configure the device as either “Master” or “Slave”. A Master device is one that is ALONE on the IDE cable, whereas a Slave device is installed as a SECOND device on the same cable. Keep in mind that the Master device will appear *before* the Slave device in the CMOS Setup, as well as the Operating System software. *\*Refer to the device documentation for jumper settings.*

The Secondary IDE port can be used for up to (2) additional ATAPI devices. Normally it’s recommended that you connect your first hard drive to the Primary port, and the first CD-ROM to the Secondary.

Make sure to align the RED stripe on the ribbon cable with Pin-1 on the mainboard IDE connector. On most hard drives and CD-ROMs, the RED stripe should be oriented towards the power connector of the device.

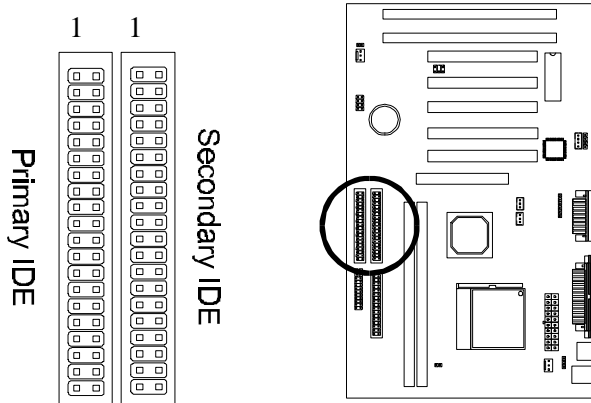




## *MIDI/Game Port*

You may plug a joystick or game pad to this 15-pin female connector for game playing, or connect a MIDI device for playing or editing audio.

## *Audio Port*

You can connect powered speakers or headphones to Line Out jack. Cassette players or other external audio sources can be connected to Line In jack. Plug in your microphones to MIC jack.

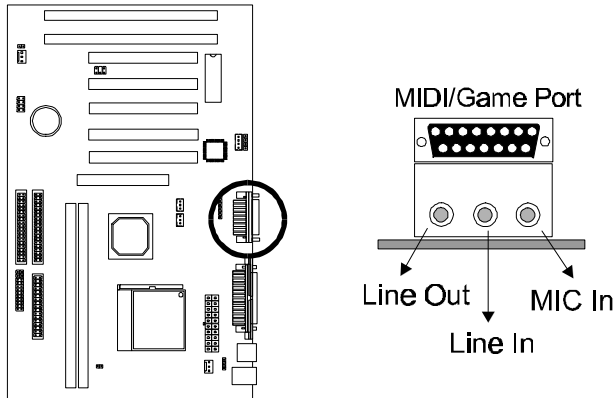


# INSTALLATION

---


## *Audio Connectors (J21 & J22)*

The AUX connector J22 is used to connect an internal audio source, such as a TV Tuner or an MPEG card. A CD Audio connector is available (J21) for connecting the CD-ROM drive using CD audio cables.

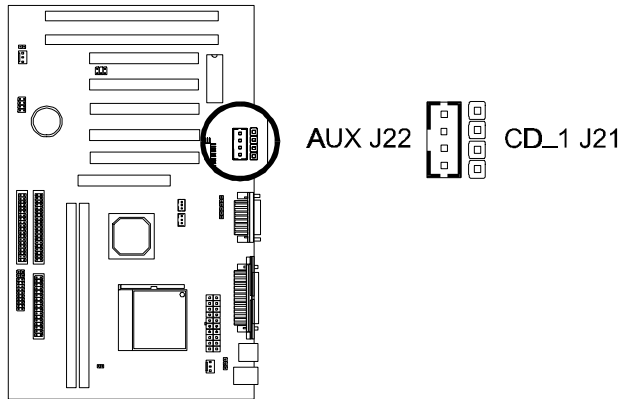

## *SB-Link (JP22)*

Connect SB-Link cable on the Creative Sound Blaster Card to this connector. This PC to PCI bridge provides backward compatibility between PCI and ISA audio chips for earlier DOS games.


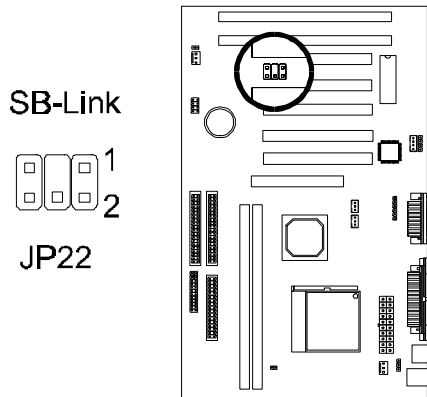


## Installing the Memory (DIMM) Modules

- This mainboard has two sockets available for **168-pin DIMMs**. They must be 3.3 volt Unbuffered Synchronous DRAMs (SDRAM) or 3.3 volt EDO RAM.
- DIMM Sizes supported: **8MB, 16MB, 32MB, 64MB, and 128MB**
- A total of **(2)** DIMMS can be installed for a maximum RAM capacity of **256MB**.

To insert the DIMMs, the modules must be oriented in the correct way. Notice the notches of the DIMM. Align these notches as shown in the diagram below. Gently push the DIMM until the retainers on both sides of the socket lock the module in place.

To remove a DIMM, push the retainers outwards to release the module then pull the module out of the socket.

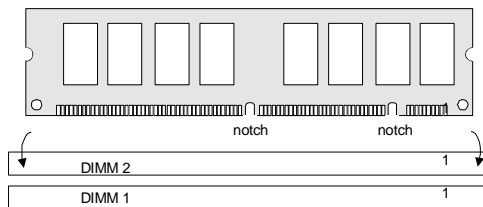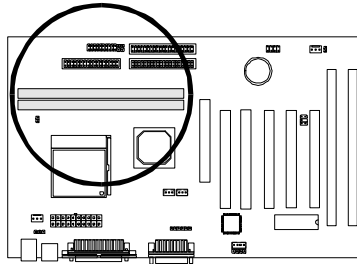


# INSTALLATION

---

## Installing an AGP Card

This mainboard provides an AGP slot to support a new generation of graphics cards with high performance graphics capability.

**Note :** Make sure that the AGP card is firmly seated in the AGP slot. For the card that complies with the *AGP 1.x specifications*, a slightly more force may be required to fully insert the card into the slot. For cards that comply with *AGP 2.0* and later specifications, the installation should be relatively easy.

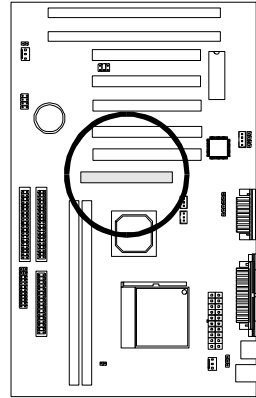

## Installing Support Drivers and Utilities

Included in your mainboard package you can find a CD-ROM containing support drivers and utilities. Just insert the CD-ROM, and from the Autorun screen, click the driver/utility that you want to install. Follow the on-screen instructions to complete the installation.

More utilities can be found under the “Utilities” folder of the CD-ROM.

---

# MAINBOARD BIOS SETUP

## About the BIOS

The Mainboard BIOS (Basic Input/Output System) acts as the bridge between your Hardware (CPU, Disk Drives, Video, etc.) and Operating System Software (Windows 95, OS/2 and so on...) The BIOS Setup (also called CMOS Setup) is where many hardware configuration options are set and stored. This configuration information will remain in the BIOS until it is changed, or cleared by removing the battery for a while then reinstalling it back.

CMOS (Complementary Metal Oxide Semiconductor) refers to the chip in which the BIOS information is stored.

This mainboard features Award BIOS, which provides an easy to use Setup program to aid in hardware configuration. In this section we will look at the various menus and options contained in the Award BIOS Setup Program. This mainboard also features a "Flash" BIOS. A Flash BIOS can be upgraded via software, thereby eliminating the need to actually replace the "BIOS Chip" on the mainboard. Procedures for updating the BIOS follow this section.

The Award BIOS installed in your computer system's ROM (Read Only Memory) is a custom version of an industry standard BIOS. This means that it supports Intel processor in a standard IBM-AT compatible input/output system.

### *Using Setup*

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit.

### *Getting Help*

Pressing F1 will display a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.

### *A Final Note about Setup*

Not all systems have the same Setup. While the basic look and function of the Setup program remains the same for all systems, individual motherboard and

## MAINBOARD BIOS SETUP

---

chipset combinations require custom configurations. For example, you may find that your Setup main menu has a different number of entries from the main menu displayed in this manual. These are simply features not supported (or not user configurable) on your system.

The final appearance of the Setup program also depends on the Original Equipment Manufacturer (OEM) who built your system. If your OEM has decided that certain items should only be available to their technicians, those items may very well be removed from the Setup program.

# MAINBOARD BIOS SETUP

## Main Menu

Shortly after the system is powered on, provided a CPU and sufficient RAM are installed, you will see the message:

Press DEL to enter SETUP

- Press the **DEL** key to enter the Award BIOS Setup program.

Once you enter the Award BIOS CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and two exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

ROM PCI/ISA BIOS (xxxxxxx)  
CMOS SETUP UTILITY  
AWARD SOFTWARE, INC.

STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT SETUP	IDE HDD AUTO DETECTION
PNP / PCI CONFIGURATION	SAVE & EXIT SETUP
LOAD BIOS DEFAULTS	EXIT WITHOUT SAVING
LOAD SETUP DEFAULTS	
Esc : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift) F2 : Change Color
Time, Date, Hard Disk Type...	

Note that a brief description of each highlighted selection appears at the bottom of the screen.

# MAINBOARD BIOS SETUP

## Standard CMOS Setup

This first menu is where the most basic hardware options are set. Information regarding the system clock, IDE hard disks and floppy drives is stored and configured in this section. To enter the Standard CMOS Setup, press the [ENTER] key with this menu highlighted.

Upon entering the Standard CMOS Setup screen, you will see a screen like that below:

Date (mm:dd:yy) : Fri, Dec 18 1998								
Time (hh:mm:ss) : 00:00:00								
HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE
Primary Master	: Auto	0	0	0	0	0	0	Auto
Primary Slave	: Auto	0	0	0	0	0	0	Auto
Secondary Master	: Auto	0	0	0	0	0	0	Auto
Secondary Slave	: Auto	0	0	0	0	0	0	Auto
Drive A : 1.44M , 3.5in.								
Drive B : None								
Floppy 3 Mode Support: Disabled								
Video : EGA / VGA								
Halt On : All Errors								
						Base Memory	:	640K
						Extended Memory	:	15360K
						Other Memory	:	384K
						Total Memory	:	16384K
ESC : Quit			↑ ↓ → ← : Select Item			PU / PD / + / - : Modify		
F1 : Help			(Shift) F2 : Change Color					

First, let's set the system **Date**. Use the arrow keys to move to and highlight the "Date" option. Select the Month by using the PgDn and PgUp keys. This is how most settings will be configured. Then, move to the day, year and time via the arrow keys to finish setting the system date and time.

Keep in mind that the system time is set in 24-hour time. With this method, 1PM is represented as 13:00, 2PM as 14:00 and so on, with 00:00 corresponding to Midnight.

**Pri Master, Pri Slave, Sec Master, Sec Slave** - These four options relate to the (4) IDE hard drives, CD-ROMs or other ATAPI devices that can be controlled via the on-board IDE controller (review IDE Hard Drives and CD-ROMs in the Installation Guide). The "Pri Master" setting specifies the first device on the



## MAINBOARD BIOS SETUP

---

primary IDE channel, “Pri Slave” - the second. Sec Master and Sec Slave specify the devices on the secondary channel.

The first option available is the most important: **Type**. This is where you will specify the type of device and how it is represented in the BIOS Setup. If the device is a hard disk or CD-ROM, generally the Auto option is the best choice for fast and easy setup of the hard disk parameters. Let’s take a look at the difference between the Auto, User and Types (1-45) options:

- **Auto** - This option instructs the BIOS to automatically configure the hard disk by reading the parameters (cylinders, sectors, etc.) directly from the hard disk’s firmware. Use this option if you are configuring a new hard drive, or one that has already been formatted using the *Auto* option. Keep in mind that a hard drive is configured using a certain set of parameters, those same parameters must be used for the life of the drive, unless the drive is re-FDISKed using a different parameter set. (This procedure deletes the old partition(s) on the drive and creates a new one, using the new parameters).

- **User** - This option allows you to manually enter in the parameters of the hard drive. Generally, this option would be used only if the hard drive has already been formatted with a certain set of parameters, and assured consistency between the old and new parameters is desired.

TYPE	drive type
CYLS.	number of cylinders
HEADS	number of heads
PRECOMP	write precom
LANDZONE	landing zone
SECTORS	number of sectors
MODE	mode type

- **Types 1-45** - Similar to the *User* option, these types should only be used if the exact parameters for the hard drive are already entered as a specific type stored in the Setup Program. Again, this would only be needed to assure that the parameters the drive was formatted with and those it is using now, are identical. For new hard drives, the *Auto* option is the preferred choice.

**Mode** - One of Enhanced IDE’s most important features is LBA (Logical Block Addressing) Mode. This feature allows the use of larger hard drives by providing a way to bypass the cylinder limitations imposed by many Operating Systems. LBA Mode is used to extend a hard drive’s useable capacity by “remapping” the cylinders in a way that is acceptable to these operating systems. For instance, a hard drive with the parameters of 2100 Cylinders, 16 Heads and 63 Sectors would be represented by LBA Mode as 525 Cylinders, 64 Heads and 63 Sectors. (Notice

## MAINBOARD BIOS SETUP

---

that the Cylinders have been divided, and the Heads have been multiplied, by a factor of 4)

On hard drives smaller in capacity than 528MB, LBA support is not needed. The option on these devices is ignored, even if enabled. For hard drives greater than 528MB, LBA mode should be enabled. The following rules apply:

- Operating Systems that do not use the FAT file system do not need LBA Mode, and can use the Normal or Large Modes. Examples would be Netware and Unix.
- When configuring a new hard drive greater than 528MB in capacity, always make sure LBA mode is enabled.
- If you are using a hard drive that is over 528MB in capacity, but was already formatted without using LBA mode, LBA support will be ignored even if it is enabled. This assures correct access to the drive's data.
- **SCSI Hard Drives** are NOT entered into the Mainboard BIOS Setup in any way. The hard drive settings in the Standard CMOS Setup are only for drives connected to the IDE Controller. So, if only SCSI drives were installed, all these settings would be set to **Type: None**. SCSI Devices are configured via the SCSI controller's BIOS.

**Floppy Drives A: and B:** - Select the Type for the A: and/or B: floppy drives. Remember, floppy drive A: is the first drive, hooked to the END of the floppy ribbon cable. Floppy drive B: is hooked up after the twist. Available settings are listed below:

None	No floppy drive installed
360K, 5.25 in	5-1/4 inch PC-type standard drive; 360 kilobyte capacity
1.2M, 5.25 in	5-1/4 inch AT-type high-density drive; 1.2 megabyte capacity
720K, 3.5 in	3-1/2 inch double-sided drive; 720 kilobyte capacity
1.44M, 3.5 in	3-1/2 inch double-sided drive; 1.44 megabyte capacity
2.88M, 3.5 in	3-1/2 inch double-sided drive; 2.88 megabyte capacity

**Floppy 3 Mode Support:** - Enable this option ONLY for floppy drive(s) that support the Japanese standard (1.2MB on 3.5" Diskette). Options: Disabled, Both, Drive A / B.

**Video** - This category selects the type of video adapter used for the primary system monitor. Although secondary monitors are supported, you do not have to select their type in Setup.

## MAINBOARD BIOS SETUP

---

EGA/VGA	Enhanced Graphics Adapter/Video Graphics Array. For EGA, VGA, SEGA, SVGA or PGA monitor adapters.
CGA 40	Color Graphics Adapter, power up in 40 column mode
CGA 80	Color Graphics Adapter, power up in 80 column mode
MONO	Monochrome adapter, includes high resolution monochrome adapters

**Halt On** - Determines whether or not the system will prompt you if an error is detected during POST.

No Errors	The system boot will not be stopped for any error that may be detected.
All Errors	Whenever the BIOS detects a non-fatal error the system will be stopped and you will be prompted.
All, But Keyboard	The system boot will not stop for a keyboard error; it will stop for all other errors.
All, But Diskette	The system boot will not stop for a disk error; it will stop for all other errors.
All, But Disk/Key	The system boot will not stop for a keyboard or disk error; it will stop for all other errors.

**Memory** - This category is display-only. All memory detected by the POST (Power On Self Test) of the BIOS is shown as the following types:

**Base Memory** is the amount of conventional memory installed in the system. This value is typically 640K for systems with 640K or more memory installed on the motherboard. The **Extended Memory** is the amount of memory located above 1MB in the CPU's memory address map. **Other Memory** refers to the memory located in the region between 640K and 1MB. This region can be used for *shadowing* as well as *expanded memory* in DOS.

# MAINBOARD BIOS SETUP

## BIOS Features Setup

This menu provides access to more advanced BIOS configuration settings that deal with overall performance of the system and peripheral setup. This section allows you to configure your system for basic operation. You have the opportunity to select the system's default speed, boot-up sequence, keyboard operation, shadowing and security.

Anti-Virus Protection	: Enabled	OS Select For DRAM > 64MB	: Non-OS2
CPU Internal Cache	: Enabled	HDD S.M.A.R.T. Capability	: Disabled
External Cache	: Enabled	Report No FDD For WIN 95	: No
CPU L2 Cache ECC Checking	: Enabled	Video BIOS Shadow	: Enabled
Quick Power On Self Test	: Disabled	C8000-CBFFF Shadow	: Disabled
Hard Disk Boot From	: Pri-IDE-M	CC000-CFFFF Shadow	: Disabled
Boot Sequence	: C, A	D0000-D3FFF Shadow	: Disabled
Swap Floppy Drive	: Disabled	D4000-D7FFF Shadow	: Disabled
Boot Up Floppy Seek	: Enabled	D8000-DBFFF Shadow	: Disabled
Boot Up NumLock Status	: On	DC000-DFFFF Shadow	: Disabled
Gate A20 Option	: Fast		
Typematic Rate Setting	: Disabled		
Typematic Rate (Chars/Sec)	: 6		
Typematic Delay (Msec)	: 250		
Security Option	: System		
PCI / VGA Palette Snoop	: Disabled		
		ESC : Quit	↑ ↓ → ← : Select Item
		F1 : Help	PU/PD/+/- : Modify
		F5 : Old Values	(Shift) F2 : Color
		F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

**Anti-Virus Protection** – Enables/Disables the built-in anti-virus for protection against **boot virus** infection. Unlike traditional BIOS protection which generally consists of simply write protecting the hard disk partition table, this Anti-Virus protection provides more complete virus protection by taking control early in the boot process, detecting boot viruses before they have a chance to load.

**CPU Internal Cache** - Enables or Disables the Level-1 Internal Cache memory. Generally, this would only be *Disabled* for troubleshooting purposes.

**External Cache** - Enables or Disables the Level-2 External Cache memory. Generally, this would only be Disabled for troubleshooting purposes.

**CPU L2 Cache ECC Checking** - Enables or Disables ECC (Error Checking and Correcting) for the CPU's Level 2 built-in cache.

## MAINBOARD BIOS SETUP

---

**Quick Power on Self Test** - Speeds up Power On Self Test (POST) after the computer is powered on. When set to Enabled, the BIOS will shorten or skip some checks during POST.

**Hard Disk Boot From** - This option lets you choose to boot from Primary IDE Master (Pri-IDE-M), Primary IDE Slave (Pri-IDE-S), Secondary IDE Master (Sec-IDE-M), Secondary IDE Slave (Sec-IDE-S), or SCSI hard disk. Same as IDE options, the Boot Sequence in the next field is set to C, A when the SCSI is chosen.

**Boot Sequence** - When your system is powered on, the BIOS performs a variety of operations, then attempts to boot an Operating System from either a hard drive, floppy drive, CD-ROM or LS-120/ZIP. This setting determines the sequence that the BIOS will follow when searching devices for a bootable disk. Most users find the C, A setting to be most beneficial, since it takes the least amount of time to boot the system. If however, you want the ability to boot from a Floppy or CD-ROM drive, you would need to choose either the A, C or CDROM, C, A setting. For instance, if your boot sequence was set to C, A and for some reason you wanted to boot to your Floppy A: Drive, it would not be possible, since the BIOS would always boot from the C: drive first. In this case, this setting would need to be changed to A, C so that the system would first check the floppy drive for a bootable disk. This would slow bootup speed, however, since the floppy would be checked on every boot.

A,C	System will first search for boot sector on floppy disk, then hard disk.
C, A	System will first search hard disk drive then floppy disk drive for boot sector.
C, CDROM, A	System will first search for boot sector on hard disk drive , then CDROM drive, and then floppy disk drive.
CDROM, C, A	System will first search the CDROM drive, then hard disk drive and then floppy disk drive for boot sector.
C only	System will search for boot sector on hard disk drive only.
LS/ZIP, C	System will first search for boot sector on LS-120 IDE floppy drive or ZIP ATAPI drive, then hard disk.

**Swap Floppy Drive** - The hardware connections determine which floppy is configured as drive A: and drive B: “Swapping” the floppy drives can be useful if your system has two floppy drives, and you want the ability to boot from both. For example: Since a PC cannot boot from the B: Floppy, you would need to “Swap” floppy drives A: and B: in order to set the second floppy drive to drive A:, thereby making it bootable.

## MAINBOARD BIOS SETUP

---

**Boot Up Floppy Seek** - When enabled, BIOS will attempt to move the head of the floppy disk drive forth and back once during POST to see if the drive is working properly.

**Boot Up NumLock Status** - When On, the NumLock key will be automatically enabled when the system boots.

**Gate A20 Option** - This entry allows you to select how the gate A20 is handled. The gate A20 is a device used to address memory above 1 Mbytes. Initially, the gate A20 was handled via a pin on the keyboard (Normal). Today, while keyboards still provide this support, it is more common, and much faster, for the system chipset (Fast; default) to provide support for gate A20.

**Typematic Rate Setting** - Determines if the typematic rate is to be used. When disabled, continually holding down a key on your keyboard will generate only one instance. In other words, the BIOS will only report that the key is down. When the typematic rate is enabled, the BIOS will report as before, but it will then wait a moment, and, if the key is still down, it will begin to report that the key has been depressed repeatedly. This feature is used to accelerate cursor movements with the arrow keys.

**Typematic Rate (Chars/Sec)** - When the typematic rate is enabled, this selection allows you to select the rate at which the keys are accelerated: Options are 6 (default), 8, 10, 12, 15, 20, 24 and 30.

**Typematic Delay (Msec)** - When the typematic rate is enabled, this selection allows you to select the delay (in msec) between when the key was first depressed and when the acceleration begins. Options are 250 (default), 500, 750 and 1000.

**Security Option** - This option enables password checking every time the computer is powered on or every time BIOS Setup is executed. If System is chosen, a user password prompt appears every time the computer is turned on. If Setup is chosen, the password prompt appears only when the BIOS Setup program is executed. Refer to the section Supervisor Password for more information.

**PCI / VGA Palette Snoop** - This option must be set to Enabled if any ISA MPEG card installed requires VGA palette snooping. The settings are Disabled or Enabled.

**OS Select For DRAM > 64MB** - This should be set to OS2 if you are running IBM OS/2 with more than 64MB of RAM in the system. Otherwise, the setting should be Non-OS2.

## MAINBOARD BIOS SETUP

---

**HDD S.M.A.R.T. Capability** - If you are using hard drives that support S.M.A.R.T., set this field to Enabled. SMART (Self-Monitoring, Analysis and Reporting Technology) is a reliability prediction technology for ATA/IDE and SCSI drives. The drive will provide sufficient notice to the system or user to backup data prior to the drive's failure. SMART is supported in ATA-3 or later hard drives.

**Report No FDD For WIN95** - While the FDD in "STANDARD CMOS SETUP" is set to NONE, set this option to No to release IRQ6 for passing Win95 logo. This option is irrelevant under normal operation.

**Video BIOS Shadow** - This option controls the location of the contents of the 32KB of Video ROM beginning at the C0000h memory location. The settings are:

Enabled	The contents of C0000h-C7FFFh are written to the same address in system memory (RAM) for faster execution.
Disabled	The video ROM is not copied to RAM. The contents of the video ROM cannot be read from or written to cache memory.

**C8000-DFFFF Shadow** - These options control the location of the contents of the 16KB expansion card ROMs beginning at the specified memory location. If no adapter ROM is using the named ROM area, this area is made available to the local bus. Shadowing a ROM reduces the memory available between 640KB and 1024KB by the amount used for this purpose. The settings are Enabled or Disabled.

# MAINBOARD BIOS SETUP

## Chipset Features Setup

This setup menu contains advanced configuration options relating to the mainboard chipset. These options are rarely changed by the user.

SDRAM RAS-to-CAS Delay	: 3	Auto Detect DIMM/PCI Clk	: Enabled
SDRAM RAS Precharge Time	: 3	Spread Spectrum	: Enabled
SDRAM CAS latency Time	: 3	CPU Host Clock (CPU/PCI)	: Default
SDRAM Precharge Control	: Disabled	Current CPU Temperature	: 47°C/116°F
System BIOS Cacheable	: Enabled	Current CPU FAN Speed	: 5400 RPM
Video BIOS Cacheable	: Enabled	Current System FAN speed	: 0 RPM
Video RAM Cacheable	: Enabled	Vcore	: 2.81V + 3.3V : 3.36V
8 Bit I/O Recovery Time	: 1	+ 5V	: 5.14V + 12V : 12.16V
16 Bit I/O Recovery Time	: 1	- 12V	: -12.35V - 5V : - 5.04V
Memory Hole At 15M-16M	: Disabled	CPU Warning Temperature	: Disabled
Passive Release	: Enabled	CPU FAN Warning Speed	: Disabled
Delayed Transaction	: Disabled	System 5V Alarm	: Disabled
AGP Aperture Size (MB)	: 64		
		ESC : Quit           ↑ ↓ → ← : Select Item	
		F1 : Help            PU/PD/+/- : Modify	
		F5 : Old Values   (Shift) F2 : Color	
		F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

**SDRAM RAS-to-CAS Delay** – This option allows you to determine the number of clocks allocated between the assertion of RAS to CAS. Do not change the value in this field unless you change to different DRAM or CPU with different specifications.

**SDRAM RAS Precharge Time** – Defines the length of time that Row Address Strobe is allowed to precharge. If insufficient time is allowed, refresh may be incomplete and data will be lost.

**SDRAM CAS Latency Time** - This item allows you to select the CAS# latency for all SDRAM cycles. Options are 3 or 2 Clocks.

**SDRAM Precharge Control** - Determines the SDRAM precharge control action taken when a page miss occurs. *Enabling* this option allows precharge only the bank targeted by the page miss cycle.

**System BIOS Cacheable** - When Enabled, the contents of the F0000h system memory segment can be cached to the Level-2 cache memory. The contents of the F0000h memory segment are always copied from the BIOS ROM to system RAM for faster execution and PCI compliance.



**Video BIOS Cacheable** - When Enabled, C0000h to C7FFH become cacheable memory.

**Video RAM Cacheable** - Enabled will cause access to the video RAM addressed at B0000H to BFFFFH to be cacheable and also let the A0000H to AFFFFH to be a UC memory type.

**8 Bit I/O Recovery Time** - The recovery time is the length of time, measured in ISA BUS clocks, that the system will delay after the completion of an input/output request. This delay takes place because the CPU is operating faster than the input/output bus. Therefore the CPU must be delayed to allow for the completion of I/O transfers. This item allows you to determine the recovery time allowed for 8 bit I/O. Choices are from NA, 1 to 8 ISA BUS clocks.

**16 Bit I/O Recovery Time** - This item allows you to determine the recovery time allowed for 16 bit I/O. Choices are from NA, 1 to 4 ISA BUS clocks.

**Memory Hole At 15M-16M** - In order to improve compatibility, certain space in memory can be reserved for old style ISA cards that map memory between 15M-16M. Do not enable this feature unless you use the old style ISA card, otherwise the memory size may be reduced to 15 MB for some O.S.

**Passive Release** - The PIIX4 provides a programmable Passive Release mechanism to meet the required master latencies. When enabled, ISA masters may see long delays in access to any PCI memory, including the main DRAM array.

**Delayed Transaction** - When enabled, the delay transaction mechanism will be in effect when PIIX4 is the target of a PCI transaction.

**AGP Aperture Size (MB)** - Select the size of the Accelerated Graphics Port (AGP) aperture. The aperture is a portion of the PCI memory address range dedicated for graphics memory address space. Host cycles that hit the aperture range are forwarded to the AGP without any translation. See [www.agpforum.org](http://www.agpforum.org) for AGP information. Options are 4, 8, 16, 32, 64, 128 and 256 MB.

**Auto Detect DIMM/PCI Clk** – When *enabled*, any DIMM/PCI clock not in use will be disabled to reduce EMI radiation.

**Spread Spectrum** – Enable this option to reduce EMI radiation peak.

**CPU Host Clock (CPU/PCI)** – This option lets you select the CPU/PCI clock. The chipset supports only the 66 and 100 MHz CPU bus clock. With this option, the

## MAINBOARD BIOS SETUP

---

bus clock can be extended from 66 MHz to 75 or 83 MHz, or from 100 MHz to 103 up to 150 MHz for internal test. *Over-clocking may cause serious system damage.*

**System Hardware Monitor** - The onboard hardware monitor allows you to observe the current temperature of the CPU, current speeds (in RPM, rotation per minute) of the system and CPU fans, as well as the various operating voltages. (If the fan is not installed, 0 RPM will be shown.)

**CPU Warning Temperature** - Once the CPU temperature exceeds the temperature specified, a warning will be issued via the speaker and the operating CPU speed will be slowed down to ease the situation. Options are Disabled, 50°C/122°F - 80°C/176°F (in every 5°C interval).

**CPU FAN Warning Speed** - Once the speed of the CPU cooling fan falls below the speed specified (in RPM, rotation per minute), a warning will be issued via the speaker. Options are Disabled, 3000, 3500, 4000 RPM.

**System 5V Alarm** – When <4.75V or >5.25V is selected, a warning beep will be issued via the speaker once the system board operating voltage falls below 4.75V or rises above 5.25V.

## Power Management Setup

This menu contains configuration options that reduce power consumption when the system is not in use. Other “Green-PC” compliant peripherals are also supported. Power Management allows you to configure you system to use energy most efficiently, and yet still in a manner consistent with your own style of computer use.

<table style="width: 100%; border-collapse: collapse;"> <tr><td>ACPI function</td><td>: Enabled</td></tr> <tr><td>Power Management</td><td>: User Define</td></tr> <tr><td>PM Control by APM</td><td>: Yes</td></tr> <tr><td>Video Off Method</td><td>: DPMS</td></tr> <tr><td>Video Off After</td><td>: Suspend</td></tr> <tr><td>MODEM Use IRQ</td><td>: 3</td></tr> <tr><td>Doze Mode</td><td>: Disabled</td></tr> <tr><td>Standby Mode</td><td>: Disabled</td></tr> <tr><td>Suspend Mode</td><td>: Disabled</td></tr> <tr><td>HDD Power Down</td><td>: Disabled</td></tr> <tr><td>Throttle Duty Cycle</td><td>: 62.5%</td></tr> <tr><td>PCI/VGA Act-Monitor</td><td>: Disabled</td></tr> <tr><td>Soft-Off by PWR-BTTN</td><td>: Instant-Off</td></tr> <tr><td>Power On by Ring/LAN</td><td>: Disabled</td></tr> <tr><td>Power On by RTC Alarm</td><td>: Disabled</td></tr> </table>	ACPI function	: Enabled	Power Management	: User Define	PM Control by APM	: Yes	Video Off Method	: DPMS	Video Off After	: Suspend	MODEM Use IRQ	: 3	Doze Mode	: Disabled	Standby Mode	: Disabled	Suspend Mode	: Disabled	HDD Power Down	: Disabled	Throttle Duty Cycle	: 62.5%	PCI/VGA Act-Monitor	: Disabled	Soft-Off by PWR-BTTN	: Instant-Off	Power On by Ring/LAN	: Disabled	Power On by RTC Alarm	: Disabled	<p><b>** Reload Global Timer Events **</b></p> <table style="width: 100%; border-collapse: collapse;"> <tr><td>IRQ[3-7, 9-15], NMI</td><td>: Disabled</td></tr> <tr><td>Primary IDE 0</td><td>: Disabled</td></tr> <tr><td>Primary IDE 1</td><td>: Disabled</td></tr> <tr><td>Secondary IDE 0</td><td>: Disabled</td></tr> <tr><td>Secondary IDE 1</td><td>: Disabled</td></tr> <tr><td>Floppy Disk</td><td>: Disabled</td></tr> <tr><td>Serial Port</td><td>: Enabled</td></tr> <tr><td>Parallel Port</td><td>: Disabled</td></tr> </table> <hr/> <p>ESC : Quit            ↑ ↓ → ← : Select Item  F1 : Help            PU/PD/+/- : Modify  F5 : Old Values (Shift) F2 : Color  F6 : Load BIOS Defaults  F7 : Load Setup Defaults</p>	IRQ[3-7, 9-15], NMI	: Disabled	Primary IDE 0	: Disabled	Primary IDE 1	: Disabled	Secondary IDE 0	: Disabled	Secondary IDE 1	: Disabled	Floppy Disk	: Disabled	Serial Port	: Enabled	Parallel Port	: Disabled
ACPI function	: Enabled																																														
Power Management	: User Define																																														
PM Control by APM	: Yes																																														
Video Off Method	: DPMS																																														
Video Off After	: Suspend																																														
MODEM Use IRQ	: 3																																														
Doze Mode	: Disabled																																														
Standby Mode	: Disabled																																														
Suspend Mode	: Disabled																																														
HDD Power Down	: Disabled																																														
Throttle Duty Cycle	: 62.5%																																														
PCI/VGA Act-Monitor	: Disabled																																														
Soft-Off by PWR-BTTN	: Instant-Off																																														
Power On by Ring/LAN	: Disabled																																														
Power On by RTC Alarm	: Disabled																																														
IRQ[3-7, 9-15], NMI	: Disabled																																														
Primary IDE 0	: Disabled																																														
Primary IDE 1	: Disabled																																														
Secondary IDE 0	: Disabled																																														
Secondary IDE 1	: Disabled																																														
Floppy Disk	: Disabled																																														
Serial Port	: Enabled																																														
Parallel Port	: Disabled																																														
<table style="width: 100%; border-collapse: collapse;"> <tr><td>IRQ 8 Break Suspend</td><td>: Disabled</td></tr> </table>	IRQ 8 Break Suspend	: Disabled																																													
IRQ 8 Break Suspend	: Disabled																																														

**ACPI function** – This option allows you to enable/disable the **Advanced Configuration and Power Interface** which offers improved power management.

**Power Management** - This category allows you to select the type (or degree) of power saving and is directly related to the following modes: **Doze Mode**, **Standby Mode**, **Suspend Mode** and **HDD Power Down**. There are four selections for Power Management, three of which have fixed mode settings:

Disabled	No power management. Disables all four modes
Min Saving	Minimum power management. Doze Mode = 1 hr. Standby Mode = 1 hr., Suspend Mode = 1 hr., and HDD Power Down = 15 min.
Max Saving	Maximum power management -- <b>ONLY AVAILABLE FOR SL CPUs.</b> Doze Mode = 1 min., Standby Mode = 1 min., Suspend Mode = 1 min., and HDD Power Down = 1 min.

## MAINBOARD BIOS SETUP

---

User Defined	Set each mode individually. When Enabled, each range is from 1 min. to 1 hr., except for HDD Power Down which ranges from 1 min. to 15 min.
--------------	---

**PM Control by APM** - When set to Yes, an Advanced Power Management device will be activated to enhance the Max. Power Saving mode and stop the CPU internal clock. If the Max. Power Saving is not enabled, this will be preset to No.

**Video Off Method** - This determines the manner in which the monitor is blanked.

V/H SYNC+Blank	This selection will cause the system to turn off the vertical and horizontal synchronization ports, writing blanks to the video buffer.
Blank Screen	This option only writes blanks to the video buffer.
DPMS	Initial display power management signaling.

**Video Off After** - This is to determine when to activate the video off function. Options are: "Standby", "Doze", "Suspend" and "N/A".

**MODEM Use IRQ** - This item tells the Power Management BIOS which IRQ is assigned to the installed MODEM. Options are NA, 3, 4, 5, 7, 9, 10, and 11.

The following four modes are Green PC power saving functions which are only user configurable when *User Defined* Power Management has been selected. See below for available selections.

<b>Doze Mode</b>	When enabled and after the set time of system inactivity, the CPU clock will run at slower speed while all other devices still operate at full speed.
<b>Standby Mode</b>	When enabled and after the set time of system inactivity, the fixed disk drive and the video will be shut off while all other devices still operate at full speed.
<b>Suspend Mode</b>	When enabled and after the set time of system inactivity, all devices except the CPU will be shut off.
<b>HDD Power Down</b>	When enabled and after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

**Throttle Duty Cycle** - This item determines the duty cycle for the clock control thermal throttling mode. The duty cycle indicates the percentage of time the STPCLK# signal is asserted.

## MAINBOARD BIOS SETUP

---

**PCI/VGA Act- Monitor** - When enabled, the video detect logic will generate a timer reload event for device monitor 11.

**Soft-Off by PWR-BTTN** - With *Instant-Off* selected, the ATX switch functions like a normal system power off button. With *Delay 4 Sec.* selected, you must hold down the ATX switch for more than 4 seconds to power off the system.

**Power On by Ring/LAN** – An input signal on the serial Ring Indicator (RI) line (in other words, an incoming call on the modem power on the system or return it to full power out of suspend / standby mode. With a LAN card installed, the Wake-up On LAN function allows the network to wake up a Soft Power Down (Soft-Off) PC.

**Power On by RTC Alarm** - When enabled, the system will automatically power on or returns to full power out of suspend/standby mode at the time and date of the month (0 for daily) specified.

**IRQ 8 Break Suspend** - When *IRQ 8 Clock Event* is enabled, the unmasked IRQ8 will generate a Fast Burst Timer reload or stop break event.

### \*\* Reload Global Timer Events \*\*

IRQ[3-7, 9-15], NMI: Enable an unmasked IRQ [3-7, 9-15], NMI, when asserted, reload the Global Standby Timer.

Primary/Secondary IDE 0/1, Floppy Disk, Serial Port, Parallel Port: Enable reload events from the respective device monitor to reload the Global Standby Timer.

# MAINBOARD BIOS SETUP

## PNP/PCI Configuration Setup

The PCI **P**ersonal **C**omponent **I**nterconnect **B**us was developed primarily to address two important issues: a) How to allow peripheral devices to take the fullest advantage of the power of Pentium and Pentium Pro chip technology, and b) Provide a simpler installation process for peripheral devices, such as Network cards, EIDE or SCSI controllers.

PCI accomplishes these goals with its 32-bit Data path Local Bus design, and support for Plug & Play. Unlike older expansion bus architectures, PCI provides peripherals with a direct connection to the CPU and memory. The PCI bus runs at 33Mhz and has a maximum transfer capability of 132MBps. With Plug & Play, the system BIOS automatically determines hardware resources for new peripherals, simplifying installation of multiple interface cards.

This Setup Menu provides configuration options for the PCI Bus and its assigned resources.

PNP OS Installed	: No	Use MEM base addr	: N/A
Resources Controlled by	: Manual	SYMBIOS SCSI BIOS	: Auto
Reset Configuration Data	: Enabled	Onboard Sound Chip	: Enabled
IRQ-3 assigned to	: PCI/ISA PnP	Assign IRQ For VGA	: Enabled
IRQ-4 assigned to	: PCI/ISA PnP	Assign IRQ for USB	: Enabled
IRQ-5 assigned to	: PCI/ISA PnP	PCI Latency Timer	: 80 PCI Clocks
IRQ-7 assigned to	: PCI/ISA PnP		
IRQ-9 assigned to	: PCI/ISA PnP		
IRQ-10 assigned to	: PCI/ISA PnP		
IRQ-11 assigned to	: PCI/ISA PnP		
IRQ-12 assigned to	: PCI/ISA PnP		
IRQ-14 assigned to	: PCI/ISA PnP		
IRQ-15 assigned to	: PCI/ISA PnP		
DMA-0 assigned to	: PCI/ISA PnP		
DMA-1 assigned to	: PCI/ISA PnP	ESC : Quit	↑ ↓ → ← : Select Item
DMA-3 assigned to	: PCI/ISA PnP	F1 : Help	PU/PD/+/- : Modify
DMA-5 assigned to	: PCI/ISA PnP	F5 : Old Values (Shift)	F2 : Color
DMA-6 assigned to	: PCI/ISA PnP	F6 : Load BIOS Defaults	
DMA-7 assigned to	: PCI/ISA PnP	F7 : Load Setup Defaults	

**PNP OS Installed** - Set to Yes if your operating system supports Plug & Play, such as Windows<sup>®</sup> 95.

**Resources Controlled By** - The Award Plug and Play BIOS has the capacity to automatically configure all of the boot and Plug and Play compatible devices. This

## MAINBOARD BIOS SETUP

---

capability is specifically designed for a Plug and Play operating system such as Windows® 95. Choices are *Auto* and *Manual*.

**Reset Configuration Data** - Reset Configuration Data: When set to Enabled, ESCD (Extended System Configuration Data) is cleared. This setting will automatically be set back to Disabled when the system reboots. *Enabled* and *Disabled*.

**IRQ3/4/5/7/9/10/11/12/14/15, DMA0/1/3/5/6/7 assigned to** – These options are available when the above **Resources Controlled by** option is set to *Manual*. By default, all resources are assigned to the PCI Bus. If an ISA card requires a particular IRQ or DMA channel, those resources should be set to Legacy ISA so that the PCI Bus will not try to use them. Choices are *Legacy ISA* and *PCI/ISA PnP*.

**Used MEM base address** - This item allows you to determine which basic addresses are not to be occupied by PCI Card and leave these addresses for some special ISA Card used only. This option is available when the **Resources Controlled by** option is set to *Manual*.

Choices are C800, CC00, D000, D400, D800, DC00.

**Used MEM length** - Select a length for the memory area specified in the previous field. This field does not appear if no base address is specified. Options are 8K, 16K, 32K, 64K.

**SYMBIOS SCSI BIOS** - When set to *Auto* (Default), the system will automatically sense the presence of any SCSI adapter that uses a Symbios SYM53C8XX SCSI chip:

If the SCSI adapter installed <b>has</b> its own BIOS on board:	The on-board SCSI BIOS will not be loaded. The adapter's own SCSI BIOS will be used.
If the SCSI adapter installed <b>doesn't have</b> its own BIOS and the card uses or is compatible with the SYM53C8XX chip:	The on-board SCSI BIOS will load and control the SCSI adapter.

\**Disabling* the onboard SCSI BIOS prevents it from being active in any way.

**Onboard Sound Chip** – Enabling this option allows the system to use the onboard ESS Solo-1 PCI sound chip. If you want to use an add-on audio card instead, set this option to disabled to avoid possible conflict.

## MAINBOARD BIOS SETUP

---

**Assign IRQ For VGA** - The Enabled option allows the BIOS to auto-route an IRQ for use by a VGA card. While most of the VGA cards do not need an IRQ assignment, certain VGA cards may need it.

**Assign IRQ For USB** - When Enabled, the system automatically assigns an IRQ for the USB device connected to your system. However, if you are not using USB devices and an ISA slot requires an IRQ address, set this function to Disabled. The IRQ address previously occupied by the USB device will be available for the ISA slot.

**PCI Latency Timer** - This option sets latency of all PCI devices on the PCI bus. The settings are in units equal to PCI clocks. Available settings are 0 ~ 248.

### Load BIOS Defaults

Loads “Fail Safe” settings into the BIOS Setup program. These options are designed to slow the system down for troubleshooting purposes. To load the default values, highlight this option and press [ENTER]. Enter “Y” in the confirmation screen and press [ENTER] again. User-defined options in the **Standard CMOS Setup** are not affected.

### Load Setup Defaults

Loads the default values for best system performance into the BIOS Setup program. To load the default values, highlight this option and press [ENTER]. Enter “Y” in the confirmation screen and press [ENTER] again. User-defined options in the **Standard CMOS Setup** are not affected.



## Integrated Peripherals Setup

This menu is used to configure the integrated IDE subsystem and other peripherals.

IDE HDD Block Mode : Enabled IDE Primary Master PIO : Auto IDE Primary Slave PIO : Auto IDE Secondary Master PIO : Auto IDE Secondary Slave PIO : Auto IDE Primary Master UDMA : Auto IDE Primary Slave UDMA : Auto IDE Secondary Master UDMA : Auto IDE Secondary Slave UDMA : Auto On-Chip Primary PCI IDE : Enabled On-Chip Secondary PCI IDE : Enabled USB Keyboard Support : Disabled Init Display First : PCI Slot  POWER ON Function : BUTTON ONLY	Onboard Serial Port 2 : 2F8/IRQ3 IR/COM2 Mode Select : UART COM2  Onboard Parallel Port : 378/IRQ7 Parallel Port Mode : ECP+EPP ECP Mode Use DMA : 3 EPP Mode Select : EPP 1.9 PWRON After PWR-Fail : Off
KBC input clock : 8 MHz Onboard FDC Controller : Enabled Onboard Serial Port 1 : 3F8/IRQ4	ESC: Quit      ↑ ↓ → ←: Select Item F1 : Help      PU/PD/+/- : Modify F5 : Old Values (Shift) F2: Color F6 : Load BIOS Defaults F7 : Load Setup Defaults

**IDE HDD Block Mode** - This allows your hard disk controller to use fast block mode to transfer data to and from your hard disk drive (HDD).

- **IDE PIO Mode** - IDE Programmed I/O Mode -

This setting relates to the speed at which the hard drive is able to transfer data, up to 16.6MB/second for Mode 4 drives. Available settings are *Auto*, 0, 1, 2, 3, or 4. As with the **Type** setting, *Auto* is the preferred choice, in that the supported PIO Mode is read directly from the hard drive. Be sure not to use a PIO Mode higher than what the drive actually supports. This could result in loss of data.

PIO Mode	Timing
0	600 ns
1	383 ns
2	240 ns
3	180 ns
4	120 ns

- **IDE UDMA (Ultra DMA) Mode** - The chipset used for this mainboard improves the IDE performance by implementing UltraDMA/33 Bus Mastering IDE which can handle data transfer up to 33 Mbyte/sec. This UDMA technology is downward compatible with existing ATA-2 IDE. So there is no upgrade required for current hard drives and cabling.

## MAINBOARD BIOS SETUP

---

**On-Chip Primary PCI IDE** - Enables or Disables the primary controller. Situations where this controller would be disabled are: *a) You are not using any IDE Drives or b) You are using an add-on IDE controller in a PCI Slot.*

**On-Chip Secondary PCI IDE** - Enables or Disables the secondary controller. Situations where this controller would be disabled are: *a) You are not using any IDE Drives or b) You are using IDE Drives ONLY on the primary controller or c) You are using an add-on IDE controller in a PCI Slot.*

**USB Keyboard Support** - This item allows you to enable or disable the USB keyboard driver within the onboard BIOS. The keyboard driver simulates legacy keyboard command and let you use USB keyboard during POST or after boot if you don't have USB driver in the operating system.

**Init Display First** - When your system has an AGP card coexisting with other PCI display cards, this option allows you to select which card your system will use initially.

**POWER ON Function** - This option allows you select one of the various methods to power on your system:

Option	How to Power on your System
Button Only	By your conventional power button
Keyboard 98	By pressing the <i>Wakeup</i> button on your PC98 keyboard
Password	By typing the password on your keyboard (See below)
Hot Key	By pressing the hot key combination on your keyboard (See below)
Mouse Left	By left-clicking the mouse (for PS/2 mouse only)
Mouse Right	By right-clicking the mouse (for PS/2 mouse only)

**KB Power On Password** – Available when the **Power ON Function** above is set to **Password**. Press [Enter] at this option then a dialog box will appear to prompt you to enter a password. Once a password is stored in the system, you can power on the system by typing the password, provided that JP1 is set to *Enabled* (Refer to page 14). **Note:** If you forget the password, clear the CMOS by removing the mainboard's battery AND disconnecting the mainboard's power supply. Wait a couple of seconds before re-installing them back. This is the only way you can power on your system again.

**Hot Key Power On**– Available when the **Power ON Function** above is set to **Hot Key**. You can power on the system by pressing the hot key specified here, provided that JP1 is set to *Enabled* (Refer to page 14).

# MAINBOARD BIOS SETUP

---

**KBC input Clock** - This option allows you to determine the clock of the Keyboard Controller. Options are 6, 8, 12, 16 MHz.

**Onboard FDC Controller** - Set to Enabled if you have a floppy disk drive installed on the system board and you wish to use it. Even when so equipped, if you add a higher performance controller, you will need to disable this feature.

**Onboard Serial Port 1** - With this option, the on-board Serial Port 1 can be Disabled, or set to Auto, 3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4 or 2E8/IRQ3.

**Onboard Serial Port 2** - With this option, the on-board Serial Port 2 can be Disabled, or set to Auto, 3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4 or 2E8/IRQ3.

**IR/COM2 Mode Select** - By default, this field is set to UART COM2, which directs the second serial port UART to support the COM2 serial port. Choosing SHARP IR (ASKIR), IrDA SIR (HPSIR), CIR or FIR will activate the on-board infrared feature and redirect the second serial port UART to support the infrared module connector on the mainboard.

**IR Transmission Delay** - Available when the above option is set to *IrDA*. Enabling this option to allow transmission delay when SIR is changed from receiving mode to transmission mode, ensuring data integrity.

**Onboard Parallel Port** - With this option, the on-board Parallel Port can be Disabled, or set to 378/IRQ7, 3BC/IRQ7 or 278/IRQ5.

**Parallel Port Mode** - Sets the operating mode of the parallel port. Options are: *SPP* (Standard Parallel Port), *EPP* (Enhanced Parallel Port)+*SPP*, *ECP* (Extended Capability Port) and *ECP+EPP*.

**ECP Mode Use DMA** - Options are 1 and 3. This field is available only when one of the two following options in **Parallel Port Mode** is selected: *ECP* or *ECP/EPP*.

**EPP Mode Select** - Options are 1.7 and 1.9 (default ; IEEE 1284 compliant).

**PWRON After PWR-Fail** - This feature will power-on the PC when power returns after a power failure. The table on the next page lists the options available and the corresponding "System State" when power returns.

Options Available	System State When Power Failure Occurred	System State When Power Returns
Former-State	On	On
	Off	Off
Off	On	Off

## MAINBOARD BIOS SETUP

---

	Off	Off
On	On	On
	Off	On

### Supervisor Password and User Password Setting

Passwords can be set to provide protection for the BIOS configuration options, or to restrict access to the computer itself.

When enabled, User Password will require all users to enter a password in order to use the system, and/or enter the BIOS setup (but can't change its contents). A Supervisor Password is used to protect the stored CMOS options from being changed by unauthorized users.

Keep in mind that when set, a password is required only when booting the system. It will not provide protection to a system that is already booted.

The password check option is set in **BIOS FEATURES SETUP** by choosing either System (the password prompt appears every time the system is powered on) or Setup (the password prompt appears only when the user enters the BIOS Setup). The password is stored in CMOS RAM, and can be cleared by removing the battery for a while and then re-installing it back.

#### To set a password:

1. You must first set the *Supervisor* password by choosing *Supervisor Password* and pressing [ENTER]. Setup prompts for a password.
2. Enter a 1-8 character password using letters, numbers, or a combination of both. The specific characters are not shown as you enter them. Press [ENTER].
3. A confirmation box appears asking you to re-enter the password. Enter the password again. Press [ENTER]. Follow the same procedure to set the *User Password*.

#### Changing a Password:

Select the appropriate password option (Supervisor or User) from the main menu and press [ENTER]. Enter the current password and press [Enter]. The screen does

not display the characters entered. Enter in the new password, then the confirmation. You cannot change the current password unless you know it.

### **Erasing a Password:**

1. If you know the current password, but want to disable password checking, follow the procedure for changing the password. When Setup prompts for the new password, simply press [ENTER]. You will see a message indicating that the password is disabled.
2. If you do not know the current password, the CMOS must be cleared by removing the battery for a while and then re-installing it back. \*This will clear all user-defined BIOS Setup options.

### **IDE HDD Auto Detection**

Automatically detect and configure hard disk parameters. The Award BIOS includes this ability in the event you are uncertain of your hard disk's parameters. See also "Standard CMOS Setup".

### **Save & Exit Setup / Exit Without Saving**

Select *Save & Exit Setup* to save into the CMOS memory all modifications specified during the current session. To save the configuration changes, highlight this option in the main menu and press [ENTER]. The system displays a confirmation message on the screen. Press the "Y" key and then [Enter]. Press the "N" key and then the [Enter] key to abort. The *Exit Without Saving* option allows the user to exit the BIOS Setup without updating any changes made during the current session.

## PCI Device Listing

This list of installed PCI devices appears after the **System Configuration** screen:

PCI device listing .....						
Bus No.	Device No.	Func No.	Vendor ID	Device ID	Device Class	IRQ
0	7	1	8086	7010	IDE Controller	14/15
0	7	2	8086	8829	Serial bus controller	11
0	9	0	1013	7333	Display controller	NA

- Bus No.** Encoded value indicating 1 of 256 possible buses in a system.
- Device No.** Encoded value indicating 1 of 32 possible devices on a given bus.
- Func No.** Encoded value indicating 1 of 8 possible functions on a multifunction device.
- Vendor ID** Identifies the manufacturer of the device. Valid vendor identifiers are allocated by the PCI SIG (Special Interest Group) to ensure uniqueness.
- Device ID** Identifies the particular device. This identifier is allocated by the vendor.
- Device Class** Specifies one of the following device classes: Mass storage controller, Network controller, Display controller, Multimedia device, Bridge device, Simple communication controller, Base system peripherals, Input device, Docking station, Processor and Serial bus controller.

The PCI device listing is useful for troubleshooting purposes. More detailed information for each field may be obtained through the PCI specification documentation.

---

## BUILT-IN SYMBIOS SCSI BIOS

To provide easy to use and cost effective support for adapters using or compatible with the Symbios Logic 53C8XX SCSI chips, this mainboard features built-in Symbios SCSI BIOS.

In most cases you should not need to change the default configuration of your host adapter. You may decide to alter these default values if there is a conflict between device settings, or if you need to optimize system performance. A message appears on your computer monitor (for about 5 seconds) during boot that looks like this:

**Press Ctrl-C to start Symbios Configuration Utility**

If you decide to press Ctrl-C during boot, the following message appears:

**Please wait, invoking Symbios Configuration Utility ...**

After a brief pause, your computer will display the Main Menu of the utility.

### *The Symbios SCSI Configuration Utility*

This menu driven utility allows you to view and change the default configuration settings for host adapters using Symbios 53C8XX chips.

**Note:** Pressing **Ctrl-A** after memory count during re-boot allows you to recover the default settings and reconfigure.

The following tables list the configuration settings you can change:

- Global: Affects both the adapter and all SCSI devices
- Device: Affects only the individual SCSI devices

# BUILT-IN SYMBIOS SCSI BIOS

Global Default Settings	
Settings	Default
SCAM Support	On
Parity	On
Host SCSI ID	7
Scan Order	Low to High (0-Max)

Device Default Settings	
Settings	Default
Synchronous Transfer Rate (MB/sec)	20
Data Width	8
Disconnect	On
Read Write I/O Timeout (secs)	10
Scan for Devices at Boot Time	Yes
Scan for SCSI LUNs	Yes
Queue Tags	On

## Main Menu

MAIN MENU					
	Port	Irq	-----Status-----		NvRAM
	Num	Level	Current	Next-Boot	Found
SYM53C860	FC00	9	On	On	Yes
SYM53C820	0	0	Off	Off	?
SYM53C825	FD00	9	On	On	Yes
SYM53C815	FE00	10	On	On	No
Change Adapter Status					
Adapter Boot Order					
Additional Adapter Configuration					
Display Mode = Verbose					
Mono/Color					
Language					
Help					
Quit					

You can select an adapter only if the current status is “On”. **Changes are only possible with SCSI adapters that support NVRAM (non-volatile memory)**. Check the “NvRAM Found” column to see if NVRAM is present on your adapter. If you choose to alter any of these settings, exit via the **Quit** option and the system will reboot.

**Change Adapter Status** - Allows you to activate or deactivate a host adapter and all SCSI devices attached to it. The change takes place after a reboot, which is automatic upon exit from the utility when this option is changed.



## BUILT-IN SYMBIOS SCSI BIOS

**Adapter Boot Order** - Allows you to set the order in which host adapters will boot when more than one Symbios host adapter is present in the system. To change an adapter's boot order, select it and press <Enter>. You are then prompted to enter the new boot sequence number. When the adapters are ordered properly, press the <Esc> key to exit this menu.

	Port Num	Irq Level	-----Status-----		NvRAM Found
			Current	Next-Boot	
SYM53C860	FC00	9	On	On	Yes
SYM53C820	0	0	Off	Off	?
SYM53C825	FD00	9	On	On	Yes
SYM53C815	FE00	10	On	On	No

**Display Mode** - Determines how much information about your host adapters and SCSI devices is displayed on your computer monitor during boot:

- *verbose*: for more complete information
- *terse*: for a faster boot

**Mono/Color** - Allows you to choose between a black and white or color display for the SCSI Configuration utility.

**Language** - English mode only.

**Help** - Brings up a help screen with information about the Main menu.

**Quit** - Exits the SCSI Configuration utility.

### *Adapter Utilities Menu*

When you select a host adapter from the main menu, the following screen is displayed:

SYM53C860
Adapter Setup
Device Selections
Help
Exit this menu

# BUILT-IN SYMBIOS SCSI BIOS

---

- **Adapter Setup:** Adapter settings are viewed and changed.

SYM53C860 Adapter Setup	
SCAM Support	On
Parity	On
Host SCSI ID	7
Scan Order	Low to High (0..Max)
Removable Media Support	None
CHS Mapping	SCSI Plug and Play Mapping
Spinup Delay (Secs)	2
Help	
Restore Default Setup	
Exit this menu	

**SCAM Support** - SCAM (SCSI Configured AutoMatically) is the SCSI Plug and Play protocol supported by Symbios BIOS version 4.X.

**Parity** - The Symbios host adapters always generate parity, but some SCSI devices do not. Therefore, you are offered the option of disabling parity checking.

**Note:** When disabling parity checking, it is also necessary to disable disconnect for all devices, as parity checking for the reselection phase will not be disabled. If a device does not supporting parity disconnects, the I/O will never complete because the reselection phase will halt.

**Host SCSI ID** - The host adapter SCSI ID should remain on 7 (default), as this setting gives the adapter the highest priority on the SCSI bus. However, if you have two adapters on the same SCSI bus, you should give one of them an unassigned ID to avoid duplication of SCSI IDs.

**Scan Order** - This option allows you to tell the host adapter BIOS and your device drivers to scan the SCSI bus from low to high (0 to max) SCSI IDs, or from high to low (max to 0) SCSI IDs. If you have more than one device on the SCSI bus, changing the scan order changes the order in which drive letters are assigned by the system.

**Removable Media Support** - Determine if the removable media will be used as BIOS device. A BIOS device here is a device that can be controlled via BIOS INT 13H, i.e. it does not need a device driver and can be bootable. However, when used as a BIOS device, the full removability of removable media devices is not preserved. The following constraints apply:

- a) The device can only work as a fixed disk, i.e. media change is not allowed.

## BUILT-IN SYMBIOS SCSI BIOS

- b) The media must be inserted before the system boot-up.
- c) Only media with 512Bytes/sector is supported.

None	The removable media devices will not be used as BIOS devices.
Boot Drive Only	Allows only the removable media installed as Drive C: to work as a BIOS device.
With Media Installed	Enables all removable disk drives to work as BIOS devices.

**CHS Mapping** – Cylinder, Head, Sector mapping. Options are “SCSI Plug and Play Mapping” (default) and “Alternate CHS Mapping”.

**Spinup Delay** – 1-10 seconds. The default is a 2-second delay before the BIOS starts to scan for SCSI devices during initialization. This amount of time is enough for most devices to get ready for proper operation. Since some older hard drives may need more time to spin up, you may need to extend the delay for those devices.

- **Device Selections:** Settings for the devices attached to the selected adapter are viewed and changed.

<b>SYM53C860</b>									
<b>Devices 0 to 7</b>									
	Sync Rate	Data Width	Disc	Time Out	Scan Bus	Scan LUNS	Queue Tags	Init	Boot
Dev0 N/A	20	8	On	10	Yes	Yes	On	No	
Dev1 N/A	20	8	On	10	Yes	Yes	On	No	
Dev2 N/A	20	8	On	10	Yes	Yes	On	No	
Dev3 N/A	20	8	On	10	Yes	Yes	On	No	
Dev4 N/A	20	8	On	10	Yes	Yes	On	No	
Dev5 N/A	20	8	On	10	Yes	Yes	On	No	
Dev6 N/A	20	8	On	10	Yes	Yes	On	No	
SYM53C860	20	8	On	10	Yes	Yes	On	No	
Devices 8 to15									
Help									
Exit this menu									

The above menu provides information about individual SCSI devices attached to the selected host adapter, as well as the adapter itself. To make changes to these settings select a device from this display and press <Enter> to bring up the individual **Device Setup** menu.

# BUILT-IN SYMBIOS SCSI BIOS

---

## *Device Setup Menu*

When you select a specific device from the Device Selection menu, your computer displays the following Device Setup menu. The settings in this menu effect individual SCSI devices attached to the selected host adapter. Changes made from this menu will require a system reboot upon exit from the SCSI Configuration utility.

SYM53C860 Setup for All devices on this adapter	
Sync Rate (MBytes/sec)	20
Width (bits)	8
Disconnect	On
Read Write I/O Timeout (secs)	10
Scan for Device at Boot Time	Yes
Scan for SCSI LUNS	Yes
Queue Tags	On
Initial Boot Device	No
Format	
Verify	
Help	
Restore Default Setup	
Exit this menu	

**Sync Rate (Mega Bytes/sec)** - Defines the maximum transfer rate the host adapter attempts to negotiate. The host adapter and a SCSI device must agree to a rate they can both handle.

**Width (bits)** - Sets the maximum data width the host adapter will attempt to negotiate. The host adapter and a SCSI device must agree to a width they can both handle. Only those host adapters that support 16 bit data transfers will show this option as enabled.

**Disconnect** - SCSI devices have the ability to disconnect from the bus during an I/O transfer. This option tells the host adapter whether or not to allow a device to disconnect. Some devices run faster with disconnect enabled (mostly newer devices), while some run faster with disconnect disabled (mostly older devices).

**Read Write I/O Timeout (secs)** - This option sets the time the host adapter waits for a read, write, verify, or seek command to complete before trying the I/O transfer again. Since this provides a safeguard allowing the system to recover if an I/O operation fails, it is recommended that you always set the time-out to a value greater than zero (no time-out).

**Scan for Device at Boot Time** - When there is a device you do not wish to make available to the system, set this option to No for that device. Also, on a bus with only a few devices attached, you can speed up boot time by changing this setting to No for unused SCSI IDs.

**Scan for SCSI LUNs** - You can set this option to No if you have problems with a device that responds to all LUNs whether they are occupied or not.

**Queue Tags** - If your device driver can issue queue tags, this option allows you to enable or disable the issuing of queue tags during I/O requests.

**Format** - Low level format the selected device. All information on the drive will be erased.

**Verify** - This command is used to detect bad blocks on the chosen disk. With your confirmation, the bad blocks detected can be reassigned for future operations. This command is non-destructive, and therefore won't destroy the data on the drive.

Since some changes only take effect after your system reboots, it is important that you quit this Configuration utility properly. You should return to the Main Menu and exit via the **Quit** option. If you reboot the system without properly exiting the utility, some changes may not be saved.

### *Device Drivers*


To function properly with different SCSI devices under different operating systems you'll need to install **device drivers**. The device driver information should be available in your SCSI adapter's package.

---

# FLASH BIOS PROGRAMMING UTILITY

Updating the Award BIOS Code is made easy with the AWDFLASH Utility. Since this mainboard features FLASH BIOS, it is not necessary to change the actual BIOS chip in order to upgrade the System BIOS. The user can simply re-program the old BIOS using the AWDFLASH Utility as follows:

1. First, boot the system with DOS or to “Safe Mode” under Windows 95. If you are booting DOS from a hard drive or floppy disk, press [F5] when the message “Starting MS-DOS...” appears on the screen. If you are booting Windows 95, press the [F8] key, and select the “Safe mode command prompt” option. This will assure that the system is running in “*real mode*” with **no device drivers loaded**. *This is the only correct way to run the AWDFLASH Utility program.*
2. There are (2) important files needed to re-program the BIOS. The first is “AWDFLASH.EXE” which is the FLASH BIOS Programming Utility. The second file needed is the updated “BIN” file which contains the actual BIOS code. This file will have the extension [.bin], such as “P598GH.BIN”. Make sure these files are on the diskette or hard drive in the same directory.
3. Start the AWDFLASH Utility by changing to the directory where the two required files exist and typing: AWDFLASH and pressing [ENTER].

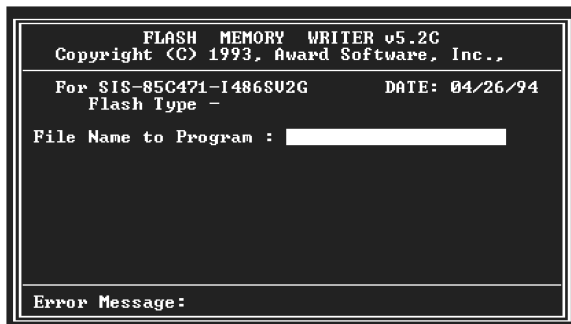

4. The AWDFLASH Utility Screen appears. You will be asked for the file name to program. Type in the name of the new BIOS (.bin) file and hit [ENTER].

## FLASH BIOS PROGRAMMING UTILITY

---


5. The program will then ask if you want to backup the old BIOS. This is recommended in case there are any problems with the new “.bin” file. Enter the name of the new backup file (such as “backup.bin”) and press [ENTER].
6. At this time the system will prompt you for final confirmation before beginning programming. The Utility can be aborted at this time by hitting “n”. To begin programming, hit “y”...
7. When the Flash programming starts, a bar indicator will show the progress of the programming operation. After successful completion, hit the reset button or power off the computer.

---

# DMI UTILITY

This mainboard supports the **Desktop Management Interface (DMI)**, which is a new method of providing enterprise management for personal computers. The main component of DMI is the Management Information Format Database (MIF), which contains information about the computer system and its components, such as BIOS version/vendor, CPU speed/type, memory size/type, L1/L2 cache, port connectors (IDE, floppy, 2S/1P, USB, keyboard, mouse, ), slots ... etc. Using DMI, remote PC management software is able to obtain various information about the system, including hardware profiles, capabilities, operational status, installation dates, and other information about the system and its components.

This DMI utility, DMICFG.EXE, allows you to add additional information, such as serial numbers, vendor information, and enclosure/chassis configurations, into the MIF.

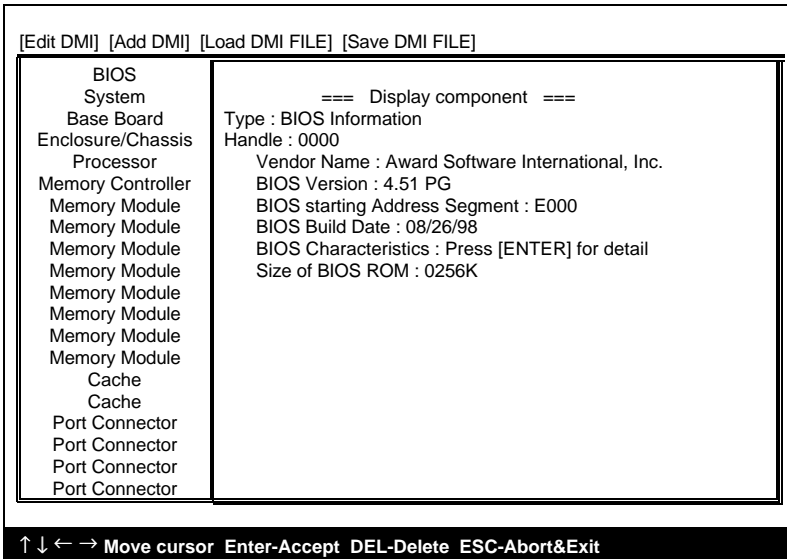

**Note:** The DMI utility must be run in real mode without the EMM386 memory manager loaded.



---

27-0M0370-05