

3. Driver Installation

Introduction

There are motherboard drivers and utilities included in ACORP Bonus CD disc. You don't need to install all of them in order to boot your system. But after you finish the hardware installation, you have to install your operating system first (such as windows 98) before you can install any drivers or utilities. Please refer to your operating system installation guide.

Note: Please follow recommended procedure to install Windows ME and Windows 98.

3.1 Auto-run Menu

You can use the auto-run menu of Bonus CD disc.
Choose the utility or driver and select model name.



3.2 Installing ALI_driver

(For Win 9X_ME, 2000 system)


This integrated driver integrates AGP driver, IDE Cache Utility, Mini-IDE driver, FIR driver and Audio driver.

You can find the ALI driver from the Bonus Pack CD disc




(1)

Click "Driver" Item.

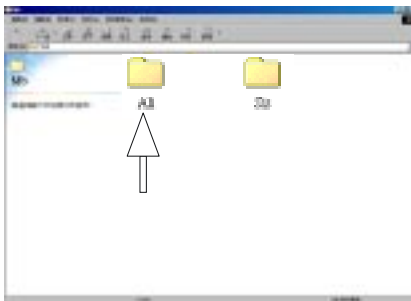


(2)

Click "Ali" Item.

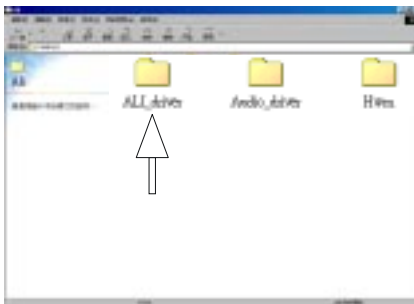

(3)

Click "ALI_driver" Item.

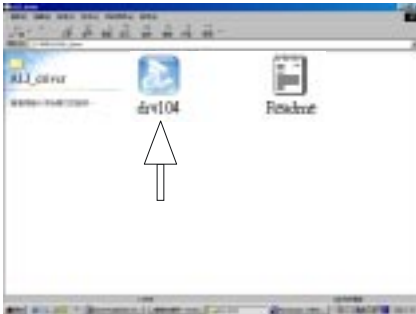


(4)
Click "drv104".

3.3 Installing Audio Driver (For Win NT system)


This driver supports ALi M5451 PCI audio accelerator under Windows NT 4.0. You can find the audio driver from the Bonus Pack CD disc auto-run menu.




(1)
Click "Driver" Item.

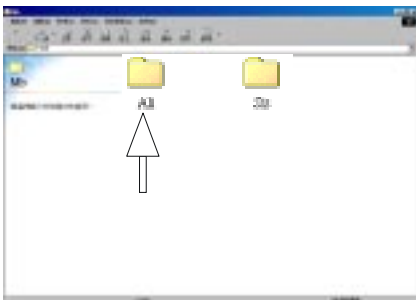

(2)
Click "Ali" Item.

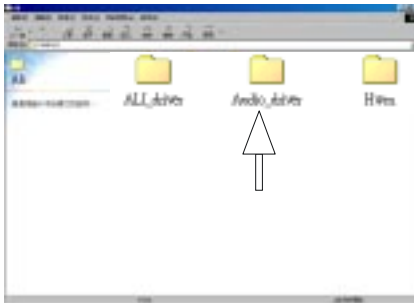

(3)
Click
"Audio_driver" Item.

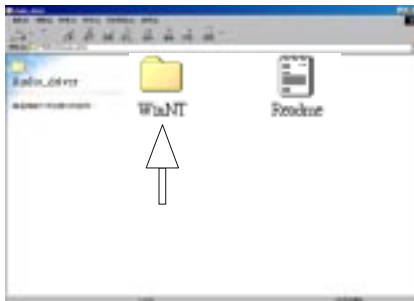

(4)
(For Win NT System)
Click "WinNT" Item.



(5)
Click "Setup".

Note:

Only support for
Windows NT system.


3.4 Installing Hardware Monitoring Utility

You can install Hardware Monitoring Utility to monitor CPU temperature, fans and system voltage. The hardware monitoring function is automatically implemented by the BIOS and utility software. No hardware installation is needed.




(1)

Click "Driver" Item.

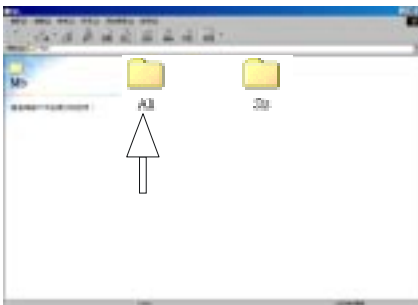


(2)

Click "Ali" Item.

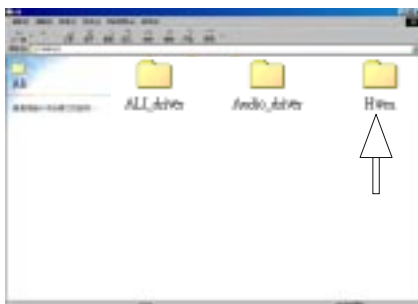

(3)

Click "Hwn" Item.

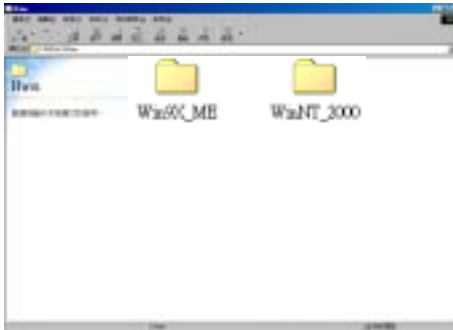

(4)
Select your system.



(5)
**(For Win98,
Win ME System)**
Click "Setup".



(6)
**(For Win 2K,
Win NT System)**
Click "Setup".