


Intel Pentium Pro CPUs

CPU Speed	External (CPU/CLK)	CLK1	CLK2	Internal	CPU Clock Rate		
					FREQ1	FREQ2	FREQ3
200 MHz	66 MHz			3 x Ext.			
180 MHz	60 MHz			3 x Ext.			
166 MHz	66 MHz			2.5 x Ext.			
150 MHz	60 MHz			2.5 x Ext.			

Power Supply Type Select: VR1

This jumper allows you to select the type of the power supply.

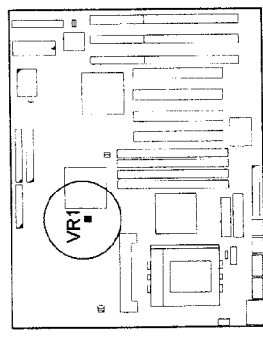


	ATX Power Supply (Default)	Standard Power
VR1	 3 4	 1 2

PN-6010

4). Install Expansion Cards

Your PN-6010 features three 16-bit ISA Bus and four 32-bit PCI Bus expansion slots. (See figure below.) This section describes how to connect an expansion card to one of your system's expansion slots. Expansion cards are printed circuit boards that, when connected to the motherboard, increase the capabilities of your system. For example, expansion cards can provide video and sound capabilities.

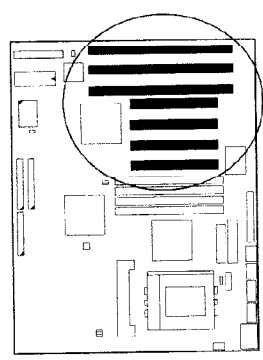

→

CAUTION :
 1. Always turn the system power off before installing or removing any device.
 2. Always observe static electricity precautions.
 See "Handling Precautions" at the start of this manual.

To install an expansion card, do the following:

1. Remove the chassis cover and select an empty expansion slot.
2. Remove the corresponding slot cover from the chassis. Unscrew the mounting screw that secures the slot cover and pull the slot cover out from the chassis, as shown in the following figure. Keep the slot cover mounting screw nearby.

PN-6010