



M4Li PCI/ISA System Board Manual

Document Number: 06-00249-05, Rev. 2B
November 1995
221 Warren Ave., Fremont, CA 94539-7085

Copyright Notices

Micronics Computers, Inc.

The information contained in the M4Li system board manual has been carefully checked and is believed to be accurate. Micronics assumes no responsibility for any inaccuracies that may be contained in this document. Micronics makes no commitments to update or to keep the information in this manual at a current level when changes are made to the product.

Micronics reserves the right to make improvements to this document and/or product at any time and without notice.

All Rights Reserved. No part of this document may be photocopied, reproduced, translated, or reduced to any medium or machine form without prior, written consent from Micronics.

COPYRIGHT (C) 1995, Micronics Computers, Inc.

Portions of the Manual

Portions of this manual were copied (with permission) from Phoenix Technologies, Ltd.


Trademarks

IBM is a registered trademark of International Business Machines. Microsoft, Microsoft Word, Windows are registered trademarks of Microsoft Corporation. Intel and PCI are registered trademarks of Intel Corporation. UNIX is a registered trademark of AT&T Corporation. Lotus 1-2-3 is a registered trademark of Lotus Development Corp. All other product names mentioned herein are used for identification purposes only and may be the trademarks of their respective companies.

Micronics Quick Installation

We know that many experienced people prefer to read as little of the documentation as possible. If this sounds like you, here's the short form:

1. Ground yourself to prevent damaging static discharge, then remove the M4Li from its packaging.
2. Configure and verify the system board's jumper settings. (See Jumper Settings in Chapter 2)
3. Install the CPU and the system memory (Chapter 3).
4. Install the motherboard into the system case and make all necessary case connections.
5. Install any peripherals (Chapter 3).
6. Turn the computer on and press the <F2> key when you see the screen below:

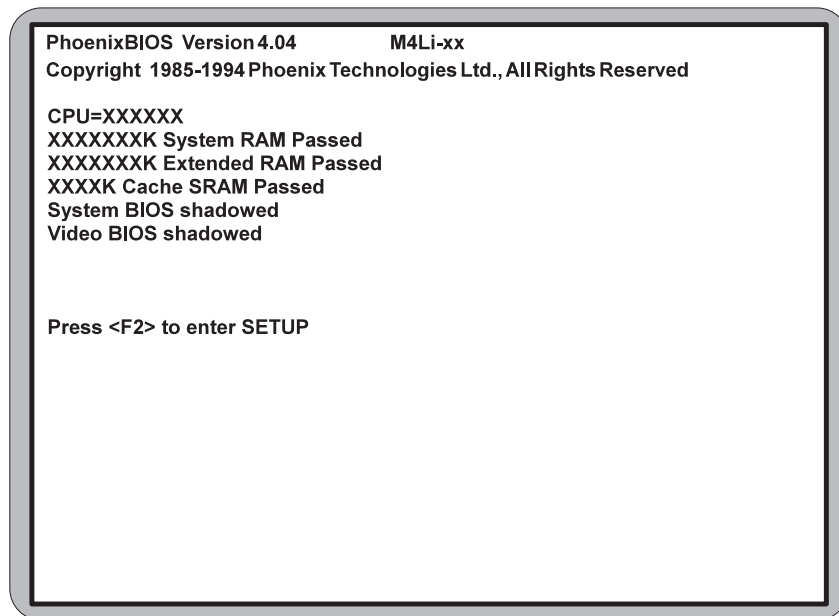

7. Set the time and date. Adjust the BIOS settings to match your configuration. If installing an IDE drive, select the IDE device you wish

to configure. Press <Enter> with Autotype Fixed Disk selected and the BIOS will automatically configure the drive for you. (See Chapter 4)

8. After you have configured the Main Setup menu, make any desired setting configurations in the Advanced and Security menu. When finished, go to the exit screen, select “Save Changes and Exit,” and you are finished with the BIOS configuration (Chapter 4).

Contents

Introduction	1-1
Features	1-2
Software Compatibility	1-2
 Configuring the M4Li	 2-1
Static Electricity	2-1
Office Environment	2-1
M4Li Components	2-2
CPU Voltage	2-3
Jumper Settings	2-4
 Installing the M4Li, System Memory, CPUs, and Peripherals	 3-1
Installation of the M4Li	3-2
Tools Required	3-2
Equipment Required	3-2
System Memory	3-3
SIMMs Supported	3-3
Memory Configurations	3-4
Installing the SIMMs	3-5
Removing SIMMs	3-5
Installing a CPU	3-6
Installing 128K of Cache Memory	3-7
Installing 256K of Cache Memory	3-8
Installing the M4Li IDE Drivers	3-9
Installing a PCI Peripheral Card	3-10
Installing an ISA Peripheral Card	3-11
 The BIOS Setup Utility	 4-1
Configuration	4-1
Initial Boot Up	4-1
Setup	4-2
Running the Setup Procedure	4-3

Setting the Main Screen	4-3
System Time and Date	4-3
Diskette A or B	4-4
IDE Adapters (Hard Disk Setup)	4-4
Video System	4-6
Video BIOS	4-6
System BIOS	4-6
Boot Options Submenu	4-6
Cache	4-7
System Memory	4-7
Extended Memory	4-7
Setting the Advanced Screen	4-8
Integrated Peripherals Submenu	4-9
Plug and Play O/S	4-10
Reset Configuration Data	4-10
Large Disk Access Mode	4-10
Security Screen	4-11
Supervisor Password is	4-11
User Password is	4-11
Set Supervisor Password	4-11
Set User Password	4-12
Password on Boot	4-12
Diskette Access	4-13
Fixed Disk Boot Sector	4-13
Power Screen	4-14
APM	4-14
Power Management Mode	4-14
Standby Timeout	4-14
Suspend Timeout	4-15
Standby CPU Speed	4-15
Fixed Disk Timeout	4-15
CRT Standby	4-15
Exit Screen	4-16
 POST Messages	 A-1
 Beep and POST Codes	 B-1
 Hard Disk Drive Types	 C-1

Specifications	D-1
Environmental Specifications	D-2
Temperature Range	D-2
Relative Humidity	D-2
Battery Disposal	D-3
 Installing a Power Module	 E-1
FCC Warning Statement	F-1
 Glossary	 G-1
Limited Warranty	W-1
Non-Warranty Service	W-2

List of Figures

Figure 2-1: M4Li System Board	2-2
Figure 2-2: CPU Selection	2-4
Figure 3-1: Installing a 72-Pin SIMM	3-5
Figure 3-2: Installing a CPU	3-6
Figure 3-3: Installing 128K External Cache	3-7
Figure 3-4: Installing 256K External Cache	3-8
Figure 3-5: M4Li IDE Drivers Screen	3-9
Figure 3-6: Installing an PCI Card	3-10
Figure 3-7: Installing an ISA Card	3-11
Figure 4-1: Power-Up Screen	4-2
Figure 4-2: CMOS Main Screen	4-3
Figure 4-3: IDE Device Submenu	4-4
Figure 4-4: Boot Options Submenu	4-6
Figure 4-5: Advanced Screen	4-8
Figure 4-6: Integrated Peripherals Submenu	4-9
Figure 4-7: Security Setup Screen	4-11
Figure 4-8: Supervisor Password Screen	4-12
Figure 4-9: Power Screen	4-14
Figure 4-9: Exit Screen	4-16

List of Tables

Table 2-1: CPU Voltage Requirements	2-3
Table 2-2: CPU Speed Selection	2-5
Table 2-3: PCI Clock Selection	2-5
Table 2-4: Cache Size Selection	2-5
Table 2-5: Parallel Port IRQ Selection	2-5
Table 2-6: Parallel Port Configuration	2-6
Table 2-7: Reserved Jumper Settings	2-6
Table 2-8: Case and Peripheral Connections	2-7
Table 3-1: Common Memory Configurations	3-4