

---

## *Hardware Installation*

# 2

This chapter provides you with the information about hardware setup procedures. During installation, be careful when handling the components and follow the installation procedures properly. For some components, installing it in a wrong orientation will cause it to become unstable.

Remember to use a grounded wrist strap before handling computer components. Static electricity may damage the components.

This chapter contains the following topics:

Central Processing Unit (CPU)	2-2
Memory Installation	2-4
Back Panel	2-7
Connectors	2-12
Power Supply	2-21
Jumpers	2-23
Slots	2-25

---




## Central Processing Unit: CPU

---

The mainboard operates with **Intel® Pentium® III (FC-PGA)** processor. The mainboard uses a CPU socket called Socket 370 for easy CPU installation. The CPU should always have a Heat Sink and a cooling fan attached to prevent overheating.

### • CPU Installation Procedures

1. Pull the lever sideways away from the socket. Then, raise the lever up to a 90-degree angle.
2. Locate Pin 1 in the socket and look for the white dot or cut edge in the CPU. Match Pin 1 with the white dot/cut edge. Then, insert the CPU. It should insert easily.
3. Press the lever down to complete the installation.

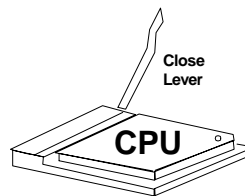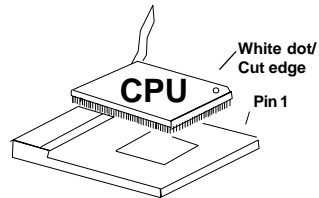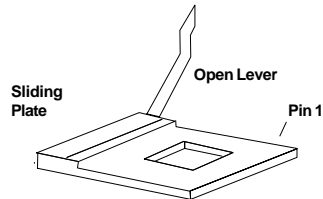

- CPU Core Speed Derivation Procedure

The BIOS can be used to set the CPU Host Bus Frequency Clock.


<b>If</b>	<u>CPU Clock</u>	= 66MHz
	<u>Core/Bus ratio</u>	= 3.5
<b>then</b>	<u>CPU core speed</u>	= <u>Host Clock</u> x <u>Core/Bus ratio</u>
		= 66MHz x 3.5
		= 233MHz

## Memory Installation

---

### • Memory Bank Configuration


The mainboard supports a maximum memory size of 2GB registered DIMM for SDRAM. It provides four 168-pin **unbuffered** DIMMs (Double In-Line Memory Module) sockets. It supports 8 MB to 512 Mbytes DIMM memory module.

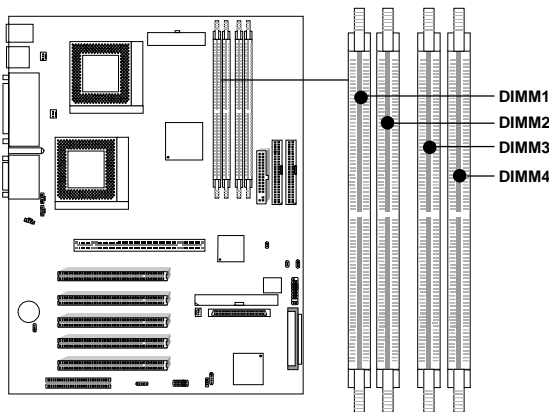


### • Memory Population Rules

1. Supports only SDRAM DIMM.
  2. To operate properly, at least one 168-pin DIMM module must be installed.
  3. This mainboard supports Table Free memory, so memory can be installed on DIMM1, DIMM 2, DIMM 3 or DIMM 4 in any order.
  4. Supports 3.3 volt DIMM.
-

- **Memory Installation Procedures**

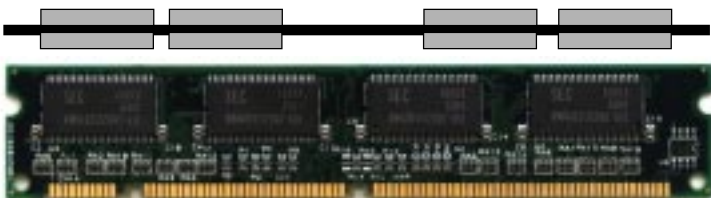**How to install a DIMM Module****Single Sided DIMM****Double Sided DIMM**

1. The DIMM slot has 2 Notch Keys “VOLT and DRAM”, so the DIMM memory module can only fit in one direction.
2. Insert the DIMM memory module vertically into the DIMM slot. Then push it in.

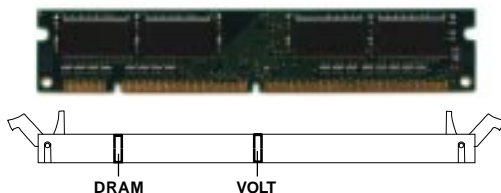


3. The plastic clip at the side of the DIMM slot will automatically close.

**• SDRAM Memory Addressing**

DRAM Tech.	DRAM Density & Width	DRAM Addressing	Address Size		MB/DIMM	
			Row	Column	Single no. Side(S) pcs.	Double no. Side(D) pcs.
16M	1Mx16	ASYM	11	8	8MBx4	16MBx8
	2Mx8	ASYM	11	9	16MBx8	32MBx16
	4Mx4	ASYM	11	10	32MB	64MB
64M	2Mx32	ASYM	11	9	32MBx2	64MBx4
	2Mx32	ASYM	12	8	16MBx2	32MBx4
	4Mx16	ASYM	11	10	32MB	64MB
	4Mx16	ASYM	13	8	32MB	64MB
	8Mx8	ASYM	13	9	64MB	128MB
	16Mx4	ASYM	13	10	128MB	256MB
64M	2Mx32	ASYM	12	8	16MB	32MB
	4Mx16	ASYM	13	8	32MB	64MB
	8Mx8	ASYM	13	9	64MB	128MB
	16Mx4	ASYM	13	10	128MB	256MB


# Back Panel

The mainboard provides the following back panel connectors:

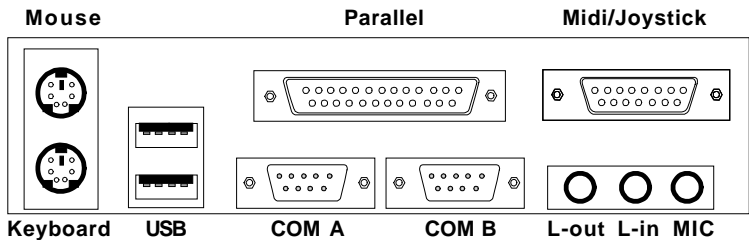

## Mouse Connector: JKBMS1

The mainboard provides a standard PS/2<sup>®</sup> mouse mini DIN connector for attaching a PS/2<sup>®</sup> mouse. You can plug a PS/2<sup>®</sup> mouse directly into this connector.

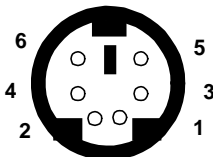


PS/2 Mouse (6-pin Female)

PIN	SIGNAL	DESCRIPTION
1	Mouse DATA	Mouse DATA
2	NC	No connection
3	GND	Ground
4	VCC	+5V
5	Mouse Clock	Mouse clock

Keyboard Connector: JKBMS1

The mainboard provides a standard PS/2® keyboard mini DIN connector for attaching a keyboard. You can plug a keyboard cable directly to this connector.

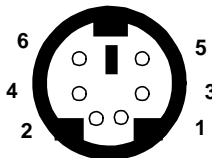


PS/2 Keyboard (6-pin Female)

PIN	SIGNAL	DESCRIPTION
1	Keyboard DATA	Keyboard DATA
2	NC	No connection
3	GND	Ground
4	VCC	+5V
5	Keyboard Clock	Keyboard clock
6	NC	No connection

USB Connectors

The mainboard provides a **UHCI (Universal Host Controller Interface)** **Universal Serial Bus root** for attaching USB devices like: keyboard, mouse and other USB devices. You can plug the USB device directly to this connector.

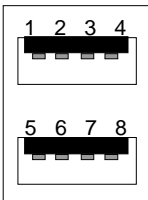


USB Ports

PIN	SIGNAL	DESCRIPTION
1	VCC	+5V
2	-Data 0	Negative Data Channel 0
3	GND	Ground
4	+Data 0	Positive Data Channel 0
5	VCC	+5V
6	+Data 1	Positive Data Channel 1
7	-Data 1	Negative Data Channel 1
8	GND	Ground



**Parallel Port Connector: LPT1**


The mainboard provides a 25 pin female centronic connector for LPT. A parallel port is a standard printer port that also supports Enhanced Parallel Port (EPP) and Extended capabilities Parallel Port (ECP). See connector and pin definition below:

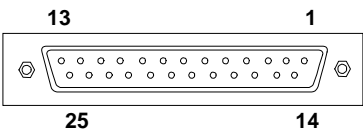

PIN	SIGNAL	DESCRIPTION
1	STROBE	Strobe
2	DATA0	Data0
3	DATA1	Data1
4	DATA2	Data2
5	DATA3	Data3
6	DATA4	Data4
7	DATA5	Data5
8	DATA6	Data6
9	DATA7	Data7
10	ACK#	Acknowledge
11	BUSY	Busy
12	FE	Paper End
13	SELECT	Select
14	AUTO FEED#	Automatic Feed
15	ERR#	Error
16	INIT#	Initialize Printer
17	SLIN#	Select In
18	GND	Ground
19	GND	Ground
20	GND	Ground
21	GND	Ground
22	GND	Ground
23	GND	Ground
24	GND	Ground
25	GND	Ground1

**Serial Port Connectors: COM A and COM B**


The mainboard provides two 9-pin male DIN connectors for serial port COM A & COM B. These port are 16550A high speed communication port that send/receive 16 bytes FIFOs. You can attach a mouse or a modem cable directly into this connector.

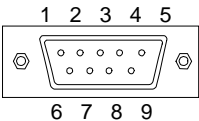

PIN	SIGNAL
1	<b>DCD</b> (Data Carry Detect)
2	<b>SIN</b> (Serial In or Receive Data)
3	<b>SOUT</b> (Serial Out or Transmit Data)
4	<b>DTR</b> (Data Terminal Ready)
5	<b>GND</b>
6	<b>DSR</b> (Data Set Ready)
7	<b>RTS</b> (Request To Send)
8	<b>CTS</b> (Clear To Send)
9	<b>RI</b> (Ring Indicate)


**Joystick/Midi Connectors**

You can connect joystick or game pad to this connector.



## Audio Port Connectors


**Line Out** is a connector for Speakers or Headphones. **Line In** is used for external CD player, Tape player, or other audio devices. **Mic** is a connector for the microphones.

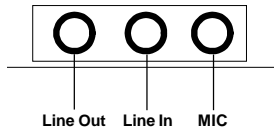

## Connectors

### Fan Power Connectors: CPUFAN1/CPUFAN2/SYSFAN

These connectors support system cooling fan with + 12V. It supports three pin head connector. When connecting the wire to the connector, always take note that the red wire is the positive and should be connected to the +12V, the black wire is Ground and should be connected to GND. If your mainboard has System Hardware Monitor chipset on-board, you must use a specially designed fan with speed sensor to take advantage of this function.

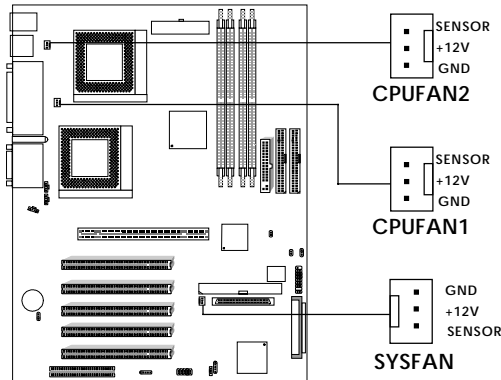

**CUFAN1:** Processor Fan 1

**CUFAN2:** Processor Fan 2


**SYSFAN:** System Fan (Non speed report)

For fans with fan speed sensor, every rotation of the fan will send out 2 pulses. System Hardware Monitor will count and report the fan rotation speed.

**Note:** 1. Always consult your reseller for proper CPU cooling fan.  
2. CPU FAN supports the FAN control. You can install PC Alert utility. This will automatically control the CPU FAN Speed according to the actual CPU temperature.

## Case Connector: JFP1

The Power Switch, Reset Switch, Power LED, Speaker, and HDD LED are all connected to the JFP1 connector block.

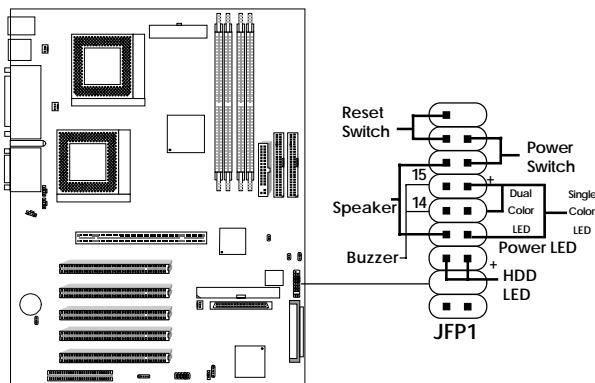

### Power Switch

Connect to a 2-pin push button switch. This switch has the same feature with JRMS1.

### Reset Switch

Reset switch is used to reboot the system rather than turning the power ON/OFF. Avoid rebooting while the HDD LED is lit. You can connect the Reset switch from the system case to this pin.

### Power LED

The Power LED is lit while the system power is on. Connect the Power LED from the system case to this pin.

There are two types of LED that you can use: 3-pin single color LED or 2-pin dual color LED (ACPI request).

- 3 pin single color LED connect to pin 4, 5, & 6. This LED will lit when the system is on.
- 2 pin dual color LED connect to pin 5 & 6.

**GREEN** Color: Indicate the system is in full on mode.

**ORANGE** Color: Indicate the system is in suspend mode.

### Speaker

Speaker from the system case is connected to this pin.

If on-board Buzzer is available:

Short pin 14-15: On-board Buzzer Enabled.


Open pin 14-15: On-board Buzzer Disabled.

### HDD LED

HDD LED shows the activity of a hard disk drive. Avoid turning the power off while the HDD led is lit. You can connect the HDD LED from the system case to this pin.


Floppy Disk Connector: FDD

The mainboard also provides a standard floppy disk connector FDD that supports 360K, 720K, 1.2M, 1.44M and 2.88M floppy disk types. This connector supports the provided floppy drive ribbon cables.

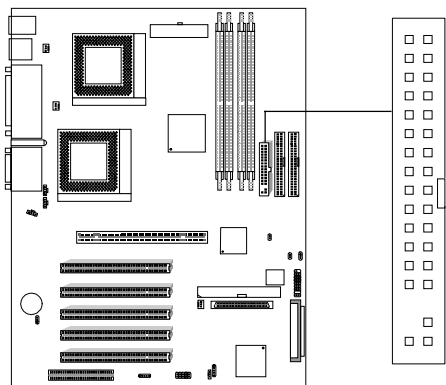


USB Front Connector: USB2

The mainboard provides a **front Universal Serial Bus connector**. This is an optional USB connector for Front Panel.

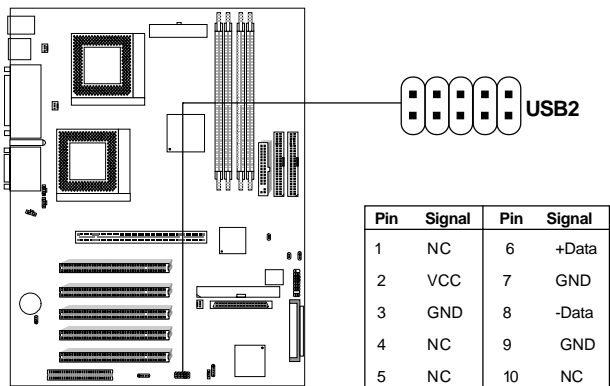

## Hard Disk Connectors: IDE1 & IDE2

The mainboard has a 32-bit Enhanced PCI IDE and Ultra DMA/100 Controller that provides PIO mode 0~4, Bus Master, and Ultra DMA/33/66/100 function. It has two HDD connectors IDE1 (primary) and IDE2 (secondary). You can connect up to four hard disk drives, CD-ROM, 120MB Floppy (reserved for future BIOS) and other devices to IDE1 and IDE2. These connectors support the provided IDE hard disk cable.

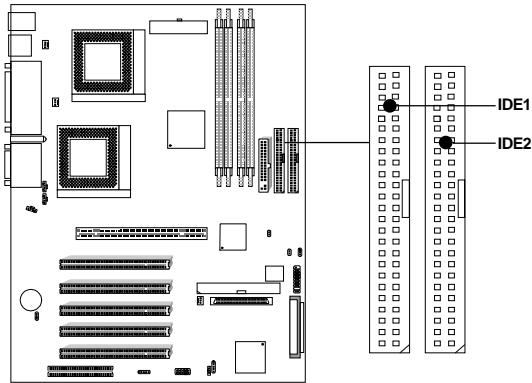

### IDE1 (Primary IDE Connector)


The first hard drive should always be connected to IDE1. IDE1 can connect a Master and a Slave drive. You must configure second hard drive to Slave mode by setting the jumper accordingly.

### IDE2 (Secondary IDE Connector)

IDE2 can also connect a Master and a Slave drive.


Wake-Up on LAN Connector: JWOL1

The JWOL1 connector is for use with LAN add-on cards that supports Wake Up on LAN function. To use this function, you need to set the “Wake-Up on LAN” to enable at the BIOS Power Management Setup.

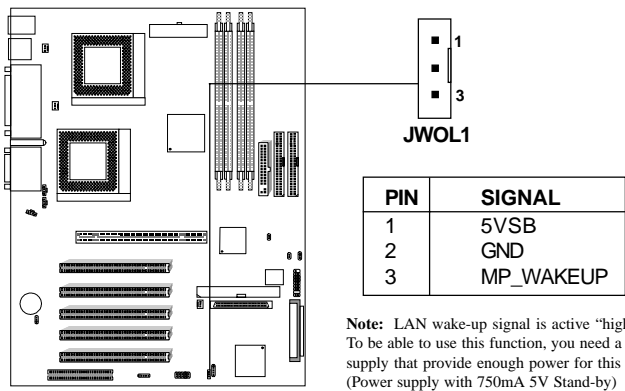

Modem Wake Up Connector: JMDM1


The JMDM1 connector is for use with Modem add-on card that supports the Modem Wake Up function.


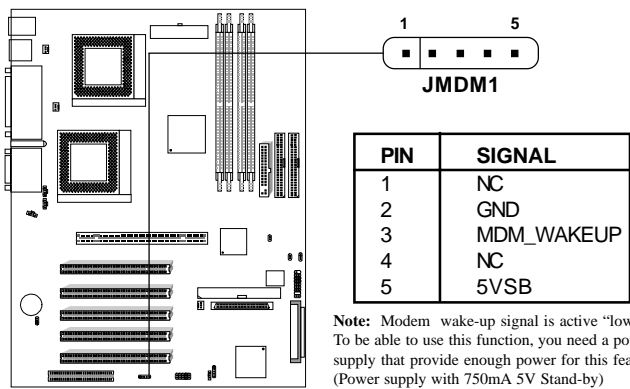




Power Saving LED Connector: JGL1


JGL1 can be connected with dual color LED. There are two types of LED that you can use: 3-pin LED or 2-pin LED (ACPI request). When the 2-pin LED is connected to JGL1, the light will turn green, when system is On. During sleep mode, the 2-pin LED will change color from Green to Orange. For 3-pin LED, when LED is connected to JGL1, this will light when the system is On and blinks when it is in suspend/sleep mode.

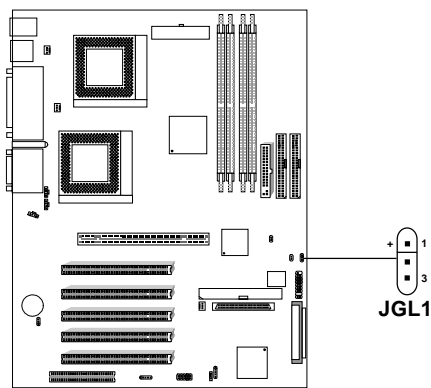

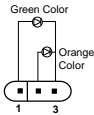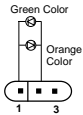3-pin LED	2-pin LED
	
1-2 Single Color 1-3 Blink	1-2 Dual Color


**Power Saving Switch Connector: JGS1**

Attach a power saving switch to **JGS1**. When the switch is pressed, the system immediately goes into suspend mode. Press any key and the system wakes up.

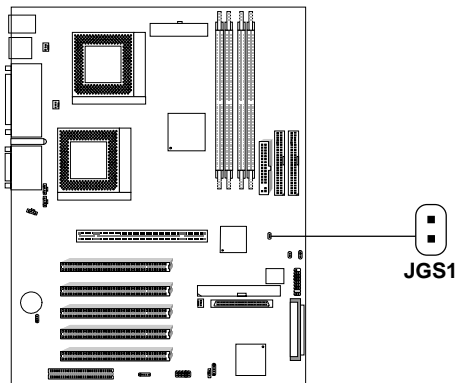


**HP Infrared Module Connector: J3**

The mainboard provides one infrared (J3) connector for IR modules. This connector is for optional wireless transmitting and receiving infrared module. You must configure the setting through the BIOS setup to use the IR function.

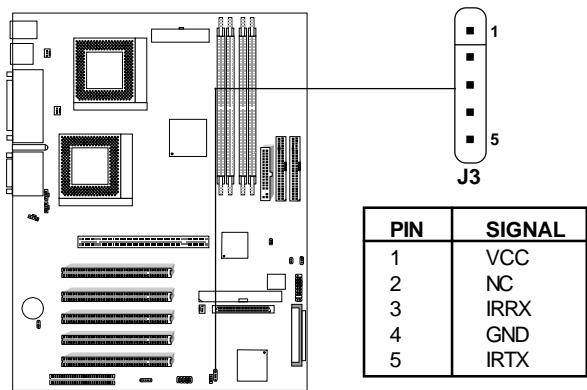


**SCSI Connectors: SCSI1, SCSI2 & SCSI3**

The mainboard provides an on-board SCSI function. This hardware interface allows user to connect up to 15 peripheral devices.

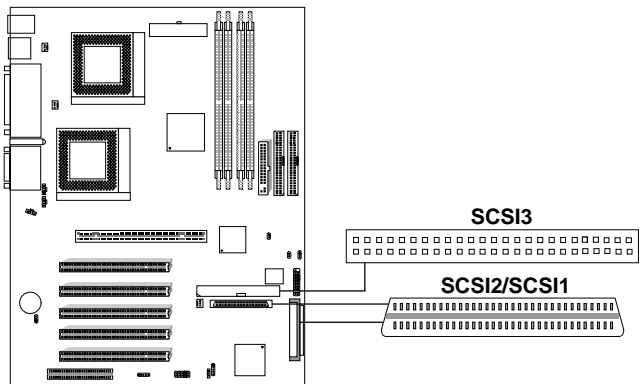


**CD-In Connector: JCD1**

This connector is for CD-ROM audio connector.

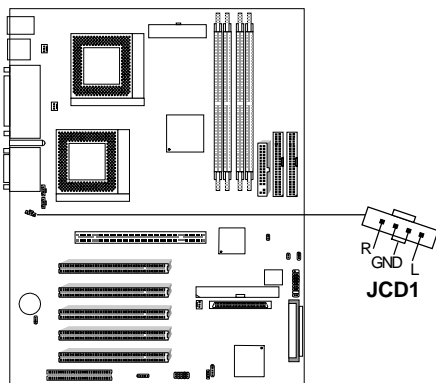


## AUX Line In Connector: JAUX1

This connector is used for DVD Add on Card with Line In connector.

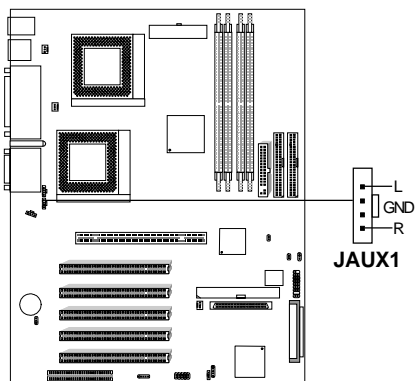

## Modem-In: JPHONE

The connector is for Modem with internal voice connector.

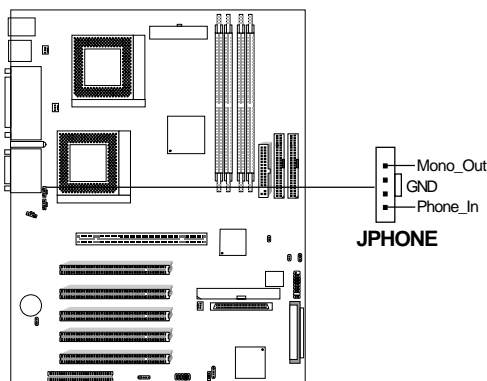


Mono\_Out is connected to the Modem Speaker Out connector.  
Phone\_In is connected to the Modem Microphone In connector.

# Power Supply

## ATX 20-pin Power Connector: JWR1

This connector supports the power button on-board. Using the ATX power supply, functions such as Modem Ring Wake-Up and Soft Power Off are supported by this mainboard. This power connector supports instant power on function which means that system will boot up instantly when the power connector is inserted on the board.

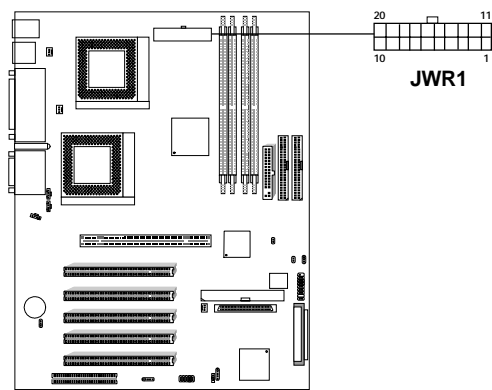


PIN	SIGNAL	PIN	SIGNAL
1	3.3V	11	3.3V
2	3.3V	12	-12V
3	GND	13	GND
4	5V	14	PS_ON
5	GND	15	GND
6	5V	16	GND
7	GND	17	GND
8	PW_OK	18	-5V
9	5V_SB	19	5V
10	12V	20	5V

**Warning:** Since the mainboard has the instant power on function, make sure that all components are installed properly before inserting the power connector to ensure that no damage will be done.

## Remote Power On/Off: JRMS1



Connect to a 2-pin push button switch. During OFF state, press once and the system turns on. **During ON stage, push once and the system goes to sleep mode: pushing it more than 4 seconds will change its status from ON to OFF.** If you want to change the setup, you could go to the BIOS Power Management Setup. This is only used for ATX type power supply.

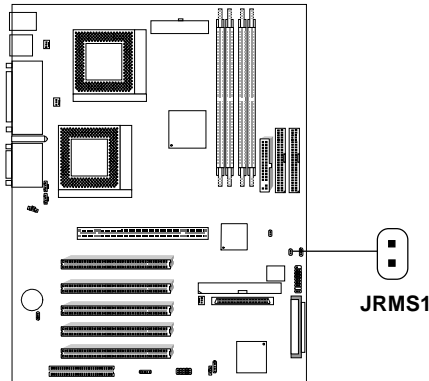


# Jumpers

## Clear CMOS Jumper: JBAT1

A battery must be used to retain the mainboard configuration in CMOS RAM. Short 1-2 pins of JBAT1 to store the CMOS data.

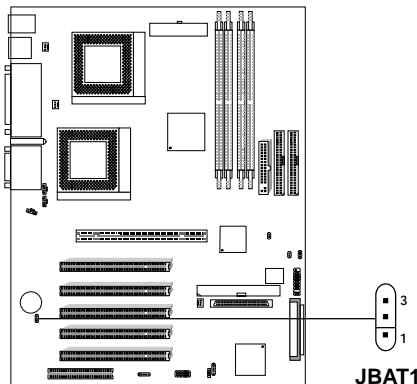

Clear Data



Keep Data



**WARNING!**

*You can clear CMOS by shorting 2-3 pin, while the system is off. Then, return to 1-2 pin position. Avoid clearing the CMOS while the system is on, it will damage the mainboard. Always unplug the power cord from the wall socket.*

## Slots

---

### AGP Slot (Accelerated Graphics Port)


The mainboard provides an AGP slot which you can install the AGP card.

### PCI Slots

The mainboard provides 5 PCI slots which you can insert the expansion cards according to your needs.

### CNR (Communication Network Riser)


The Communication Network Riser specification is an open industry-standard specification that defines a hardware scalable Original Equipment Manufacturer (OEM) mainboard riser board and interface, which supports modem only.

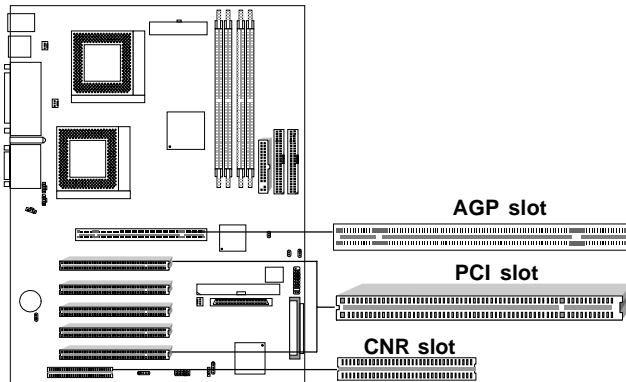



**Diagnostic LED**

The mainboard provides a Special Diagnostic LED for users to be aware of their mainboard conditions. The LED helps user determine the problem of the mainboard. Please refer to chapter 2-26 for the Diagnostic LED table.

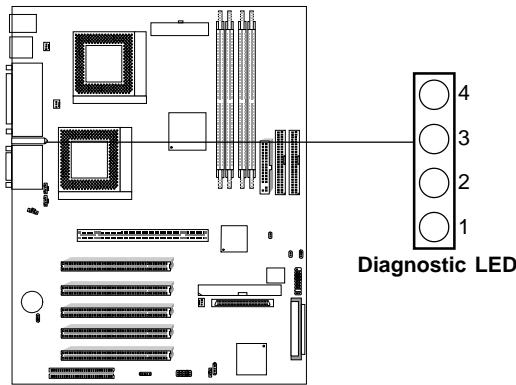

### Diagnostic LED Function

<b>Diagnostic LED 4 3 2 1</b>	<b>Description</b>	<b>Possible Problem/ Solution</b>
0 0 0 0	System Power ON. This will start BIOS Initialization	System D-LED will hang here The Processor might be damage or not installed properly Damage/Discharge Lithium Battery
0 0 0 1	Early Chipset Initialization	***
0 0 1 0	Memory Detection Test Testing Onboard memory size	System D-LED will hang here The Memory module might be damage or not installed properly.
0 0 1 1	Decompressing BIOS image to RAM for fast booting.	***
0 1 0 0	Initializing Keyboard Controller	***
0 1 0 1	Testing VGA BIOS This will start writing VGA sign-on messages to the screen.	System D-LED will produce Beep sound The VGA card might be damage or not inserted properly.
0 1 1 0	Processor Initialization This will show information regarding the processor (like brand name, system bus, etc...)	***
0 1 1 1	Testing RTC (Real Time Clock)	Low Lithium Battery
1 0 0 0	Initializing Video Interface This will start detecting CPU clock, checking type of video onboard. Then, detect and initialize the video adapter	***
1 0 0 1	BIOS Sign On This will start showing information about Logo, processor brand name, etc.....	***
1 0 1 0	Testing Base and Extended Memory Testing base memory from 240K to 640K and extended memory above 1MB using various patterns.	***
1 0 1 1	Assign Resource to all ISA	***
1 1 0 0	Initializing Hard Drive Controller This will initialize IDE drive and controller	Check IDE cable for proper installation
1 1 0 1	Initializing Floppy Drive Controller This will initialize Floppy Drive and controller	System D-LED will hang here The Floppy Drive Cable might not be installed properly
1 1 1 0	Boot Attempt This will set low stack and boot via INT19h.	***
1 1 1 1	Operating System Booting.	***

1 = GREEN 0 = RED

\*\*\* Check local Vendor for possible internal mainboard problem.