

Declaration of conformity



QUANTUM DESIGNS(HK) LTD.
5/F Somerset House, TaiKoo Place 979 Kings Road,
Quarry Bay, Hong Kong

declares that the product

Pentium®II Mainboard
Advance 5

is in conformity with
(reference to the specification under which conformity is declared in
accordance with 89/336 EEC-EMC Directive)

- ☒ EN 55022 Limits and methods of measurements of radio disturbance characteristics of information technology equipment
- ☒ EN 50081-1 Generic emission standard Part 1:
Residential, commercial and light industry
- ☒ EN 50082-1 Generic immunity standard Part 1:
Residential, commercial and light industry

European Representative:

QDI COMPUTER (UK) LTD

QDI SYSTEM HANDEL GMBH

QDI COMPUTER (FRANCE) SARL

QDI COMPUTER (ESPANA) S.A.

QDI COMPUTER (SCANDINAVIA) A/S

QDI COMPUTER (NETHERLANDS) B. V.

QDI COMPUTER HANDELS GMBH

QDI COMPUTER (SWEDEN) AB

Signature :  . Place / Date : HONG KONG/1999

Printed Name : Anders Cheung Position/ Title : President

Declaration of conformity



Trade Name:	QDI Computer (U. S . A.) Inc.
Model Name:	Advance 5
Responsible Party:	QDI Computer (U. S. A.) Inc.
Address:	41456 Christy Street Fremont, CA 94538
Telephone:	(510) 668-4933
Facsimile:	(510) 668-4966
Equipment Classification:	FCC Class B Subassembly
Type of Product:	AGP Pentium®II Mainboard
Manufacturer:	Quantum Designs (HK) Inc.
Address:	5/F, Somerset House, TaiKoo Place 979 Kings Road, Quarry Bay, HONG KONG

Supplementary Information:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Signature : 

Date : 1999



CONTENTS

SpeedEasy Quick Setup(English)	1
SpeedEasy Schnell-Installation(Deutsch)	3
Fácil Y Veloz Rápida Instalación(Español)	5
Facilité de vitesse Initialisation(Francais)	7
Setup Della Scheda SpeedEasy(Italiano)	9
SpeedEasy ĸ È Ù ¨ Ö Å Ĩ Ö Æ Ä Ĩ ħ	11
SpeedEasy ĸ Ë Ù ¨ x° Ö Ä Ĩ (Ö Å Ĩ Æ Ĩ)	13
1. Introduction	15
Overview	15
Key Features	15
2. Installation Instructions	19
External Connectors	19
PS/2 Keyboard & PS/2 Mouse Connector	19
USB1 & USB2	19
Parallel Port Connector and Serial Port Connector	19
ATX Power Supply Connector & Power Switch(POWER)	20
Hard Disk LED Connector (HD_LED)	20
Reset Switch (RESET)	20
Speaker Connector (SPEAKER)	20
Power LED Connector(PWR_LED)	20
Key_Lock Connector (KEY_L)	20
ACPI LED Connector (GREEN_LED)	21
Hardware Green Connector (SLEEP)	21
Infrared Header (IrDA)	21
Fan Connector (CPUFAN & CHSFAN)	22
Wake-Up On LAN (WOL)	22
Wake-Up On Internal Modem (WOM)	22
Chassis Security Switch (CHSSEC)	23
Sound Connector (PC-PCI)	23
Expansion Slots & I/O Ports description	23
Jumper Settings	24
Clear CMOS	24
Selection of Front-Side Bus (JFSB1, JFSB2)	24



CONTENTS

Enable keyboard password power-on function(JKB)	25
Memory Configuration	25
3. BIOS Description	27
Utility Support	27
FLASH.EXE	27
AWARD BIOS Description	29
Entering Setup	29
Load Setup Defaults	29
Standard CMOS Setup	29
SpeedEasy CPU Setup	32
BIOS Features Setup	33
Chipset Features Setup	35
Power Management Setup	37
PNP/PCI Configuration Setup	39
Integrated Peripherals	41
System Monitor	43
Supervisor/User Password Setting	44
IDE HDD Auto Detection	45
Boot with BIOS defaults	46
 Appendix A QDI Mainboard Utility CD-ROM	 47
Appendix B Processor Installation Procedures	48
Appendix C Boot Logo	51



SpeedEasy Quick Setup

Procedures :

1. Correctly insert the Intel Pentium®II/ Pentium®III/ Celeron™ processor.
2. Plug in other configurations and restore the system.
3. Switch on power to the system and press the key to enter BIOS Setup.
4. Enter "SpeedEasy CPU SETUP" menu to set up the CPU speed.

Note: If you do not set the CPU speed, your system will run at the default setting (200MHz for processor with 100MHz host bus speed, 133MHz for processor with 66MHz host bus speed, for bus ratio locked processor, run its real speed.

5. Save and exit BIOS Setup, your system will now boot successfully.



SpeedEasy CPU Setup Menu

Select <SpeedEasy CPU SETUP> item from the main menu and enter the sub-menu:

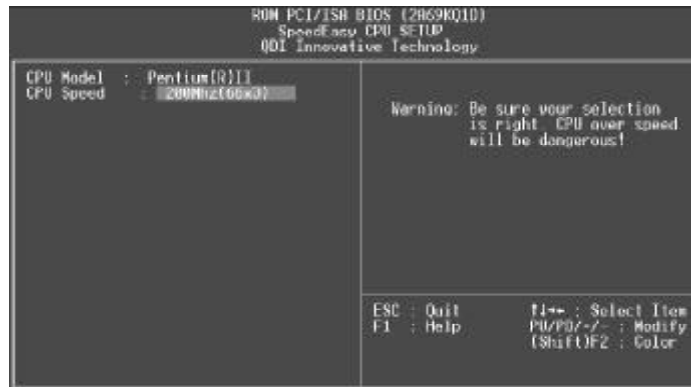


Figure - 1 SpeedEasy CPU Setup Menu

BIOS provides you with a set of basic values for your processor selection instead of the jumper settings. The processor speed can be manually selected on the "SpeedEasy CPU SETUP" menu screen.



Warning:

Do not set CPU frequency higher than its working frequency. If you do, we will not be responsible for any damages caused.



Schnell-Installation durch SpeedEasy

Vorgehensweise der Installation:

1. Legen sie die Pentium®II/ Pentium®III/ Intel® Celeron™ im Slot 1 mit Hilfe der mitgelieferten Halterung.
2. Vervollständigen Sie das System mit den weiteren erforderlichen Computerkomponenten
3. Drücken Sie die Taste < Entf > und schalten Sie das System an um das BIOS-setup zu gelangen.
4. Steigen Sie in das Menü "SpeedEasy CPU SETUP" ein, um die Geschwindigkeit einzustellen.

ACHTUNG:Falls Sie die Taktfrequenz der CPU nicht setzen, arbeitet Ihr System mit den Standardwerten für die CPU. (200MHz für den CPU mit 100MHz Host Bus Speed, 133MHz für den CPU mit 66MHz Host Bus Speed).

5. Speichern Sie die Einstellungen und verlassen Sie das BIOS, um die zuvor eingestellte Taktfrequenz zu aktivieren.



SpeedEasy CPU Installationsmenü

Wählen Sie < SpeedEasy CPU SETUP> aus dem Hauptmenü und öffnen Sie das untergeordnete Menü



Abb. 1 SpeedEasy CPU Installationsmenü

Das BIOS stellt Ihnen eine Reihe von Grundeinstellungen für Ihren CPU zur Verfügung, anstelle von "jumper setting". Sie können manuell die Geschwindigkeit des CPU innerhalb des "SpeedEasy CPU SETUP" einstellen



warnung:

Bitte Setzen Sie die Taktfrequenz der CPU nicht höher als die tatsächliche freigegebene Taktfrequenz, ansonsten Kann QDI für rechtliche Ansprüche nicht herangezogen werden.



SpeedEasy Instalación rápida

Procedimiento:

1. Introduzca correctamente el Pentium®II/ Pentium®III/ Intel® Celeron™
2. Finalize el proceso de ensamblaje de su equipo.
3. Presione la tecla <Supr> y encienda el sistema, para entrar en BIOS.
4. Entre al menu "SpeedEasy CPU SETUP" para establecer la velocidad de su CPU.

Nota: Si no establece la velocidad del CPU, su sistema funcionará a la velocidad minima por defecto (200MHz para CPU con velocidad de bus de 100MHz, 133MHz para CPU con velocidad de bus de 66MHz)

5. Salve y salga de BIOS, luego su sistema arrancará a la velocidad por Ud. seleccionada.



Menu del SpeedEasy CPU

Seleccione el ítem <SpeedEasy CPU SETUP> desde el menú principal, y entre en el submenú:

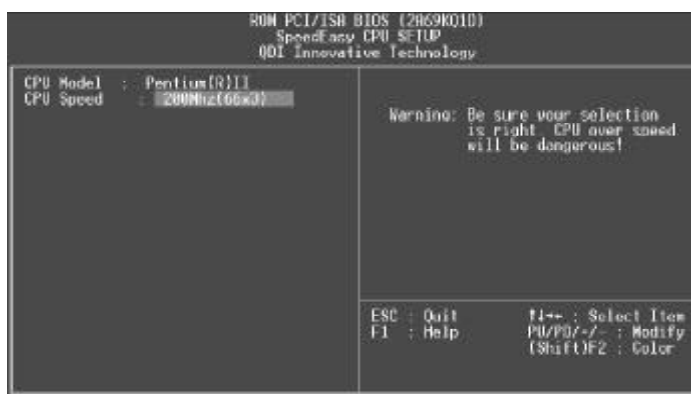


Figura-1 Menu del CPU SpeedEasy

BIOS le proporcionará unos valores básicos para la elección de su CPU, en vez de tener que configurar jumpers. Ud. puede seleccionar manualmente la velocidad de CPU en el menú "SpeedEasy CPU SETUP".



Aviso

No es recomendable seleccionar una frecuencia de trabajo superior a la a la cual esta diseñada su CPU. De otra manera, no seremos responsables de los daños que esto pudiera ocasionar.