

### **Item Checklist**

Completely check your package. If you discover damaged or missing items, contact your retailer.

- ☒ WinneX 5 mainboard
- ☒ QDI Mainboard Utility CD-ROM
- ☒ I/O shield
- ☒ 1 IDE ribbon cable
- ☒ 1 floppy ribbon cable
- ☒ 1 9-pin ribbon cable with bracket for serial port 2 (manufacturing option)
- ☒ QDI Serial Product R.M.A. Warranty Card
- ☒ User' s manual

### **Notice**

The information in this document is subject to change in order to improve reliability, design, or function without prior notice and does not represent a commitment on the part of this company. In no event will we be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or the possibility of such damages.

All trademarks are the property of their respective owners.

If you require further information, please visit our web-site: "[www.qdigrp.com](http://www.qdigrp.com)".

# Declaration of conformity



**QUANTUM DESIGNS(HK) LTD.**

**5/F Somerset House, TaiKoo Place 979 Kings Road,  
Quarry Bay, Hong Kong**

declares that the product

**Mainboard  
WinneX 5**

is in conformity with

(reference to the specification under which conformity is declared in  
accordance with 89/336 EEC-EMC Directive)

- ☒ EN 55022 Limits and methods of measurements of radio disturbance characteristics of information technology equipment
- ☒ EN 50081-1 Generic emission standard Part 1:  
Residential, commercial and light industry
- ☒ EN 50082-1 Generic immunity standard Part 1:  
Residential, commercial and light industry

European Representative:

QDI COMPUTER ( UK ) LTD

QDI COMPUTER ( SCANDINAVIA ) A/S

QDI SYSTEM HANDEL GMBH


QDI COMPUTER ( NETHERLANDS ) B. V.

QDI COMPUTER (FRANCE) SARL

QDI COMPUTER HANDELS GMBH

QDI COMPUTER (ESPANA) S.A.

QDI COMPUTER (SWEDEN) AB

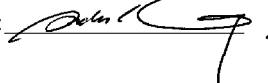Signature : 

Place / Date : HONG KONG/1999

Printed Name : Anders Cheung

Position/ Title : President

## Declaration of conformity



Trade Name: QDI Computer ( U. S . A. ) Inc.  
Model Name: WinneX 5  
Responsible Party: QDI Computer ( U. S. A.) Inc.  
Address: 41456 Christy Street  
Fremont, CA 94538  
Telephone: (510) 668-4933  
Facsimile: (510) 668-4966

Equipment Classification: FCC Class B Subassembly  
Type of Product: Mainboard  
**Manufacturer: Quantum Designs (HK) Inc.**  
Address: 5/F, Somerset House, TaiKoo Place  
979 Kings Road, Quarry Bay, HONG  
KONG

### Supplementary Information:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Signature : .

Date : 1999



## CONTENTS

SpeedEasy Quick Setup(English) .....	S.1
SpeedEasy Schnell-Installation(Deutsch) .....	S.3
Fácil Y Veloz Rápida Instalación(Español) .....	S.5
Facilité de vitesse Initialisation(Francais) .....	S.7
Setup Della Scheda SpeedEasy(Italiano) .....	S.9
SpeedEasy ຈຶ່ງ ຄື ບໍ່ ກໍ ອາດ ໃຫ້ ດີ ຂ້າ ຈຶ່ງ ຄື ບໍ່ ກໍ ອາດ ໃຫ້ ດີ ຂ້າ .....	S.11
SpeedEasy ຈຶ່ງ ຄື ບໍ່ ກໍ ອາດ ໃຫ້ ດີ ຂ້າ ຈຶ່ງ ຄື ບໍ່ ກໍ ອາດ ໃຫ້ ດີ ຂ້າ .....	S.13
<b>1. Introduction .....</b>	<b>1</b>
Overview .....	1
Flexibility in Designing Cost-effective System .....	1
Key Features .....	2
Introduction to New Features .....	4
<b>2. Installation Instructions .....</b>	<b>7</b>
<b>External Connectors .....</b>	<b>7</b>
PS/2 Keyboard & PS/2 Mouse Connector .....	7
USB1 & USB2 .....	7
Parallel Port Connector and Serial Port Connector .....	7
Line-in jack, Microphone-in jack, Speaker-out jack and MIDI/Joystick connector .....	8
ATX Power Supply Connector & Power Switch .....	8
Hard Disk LED Connector (HD_LED) .....	9
Reset Switch (RESET) .....	9
Speaker Connector (SPEAKER) .....	9
Power LED Connector (PWR_LED) .....	9
Key-Lock Connector (KEY_L) .....	9
ACPI LED Connector (GREEN_LED) .....	9
Hardware Green Connector (SLEEP) .....	9
Infrared Header (IrDA) .....	10
Fan Connector (CPUFAN & CHSFAN & POWFAN) .....	10
Wake-Up On LAN (WOL) .....	11
Wake-Up On Internal Modem (WOM) .....	11
Digital Audio Connector (CDLIN1) .....	11



## CONTENTS

4 pin SMBus Connector(SMBUS) .....	12
Sound Connector (PC-PCI) .....	12
Chassis Security Switch (CHSSEC) .....	12
Audio/Modem Riser Interface Connector (AMR) .....	13
Expansion Slots & I/O Ports description .....	13
<b>Jumper Settings</b> .....	13
Clear CMOS (JCC) .....	14
Enable/Disable on-board audio CODEC(JSD) .....	14
Enable keyboard password power-on function(JKB) .....	14
Overclocking Jumper Setting (JFS0, JFS1) .....	15
FWH Protection Jumper (JAV) .....	16
Installation of All Drivers .....	17
PC-cillin 98 .....	18
QDI ManageEasy .....	18
 <b>3. BIOS Description</b> .....	<b>19</b>
<b>Utility Support</b> .....	<b>19</b>
AWDFLASH.EXE .....	19
<b>AWARD BIOS Description</b> .....	<b>20</b>
Entering Setup .....	20
Load Optimized Defaults .....	20
Standard CMOS Features Setup .....	20
CPU SpeedEasy Setup .....	24
Advanced BIOS Features Setup .....	25
Advanced Chipset Features Setup .....	27
Power Management Setup .....	28
PNP/PCI Configuration Setup .....	30
Integrated Peripherals .....	31
PC Health Status .....	33
Password Setting .....	35
Boot with BIOS defaults .....	35
 <b>Appendix</b> QDI Mainboard Utility CD-ROM .....	<b>37</b>



### Caution

**Be sure to unplug the AC power supply before adding or removing expansion cards or other system peripherals, especially the SDRAM memory, otherwise your mainboard or the system memory might be seriously damaged.**

The AC power status (ON/OFF) of the system is indicated by the red LED under the two DIMM sockets. If the LED is on, adding or removing devices like SDRAM memory is prohibited.



## SpeedEasy Quick Setup

### Procedures :

1. Correctly insert the Intel®Celeron PPGA 370 Processor.
2. Plug in other configurations and restore the system.
3. Switch on power to the system and press the <Del> key to enter BIOS Setup.
4. Enter "CPU SpeedEasy Setup" menu to set up the CPU speed.

**Note: If the CPU speed is not set, your system will run at the default setting ( 200MHz for processor with 100MHz host bus speed, 133MHz for processor with 66MHz host bus speed, for bus ratio locked processor, run its real speed.**

5. Choose "Save & Exit Setup" option to save and exit BIOS Setup, your system will now boot successfully.



## CPU SpeedEasy Setup Menu

Select <CPU SpeedEasy Setup> item from the main menu and enter the sub-menu:



Figure - 1 CPU SpeedEasy Setup Menu

BIOS provides you with a set of basic values for your processor selection instead of the jumper settings. The processor speed can be manually selected on the “CPU SpeedEasy Setup” menu screen.



### Warning:

Do not set CPU frequency higher than its working frequency. If you do, we will not be responsible for any damages caused.





## Schnell-Installation durch SpeedEasy

### Vorgehensweise der Installation:

1. Legen sie die the Intel®Celeron PPGA 370 mit Hilfe der mitgelieferten halterung.
2. Vervollständigen Sie das System mit den weiteren erforderlichen Coputerkomponenten.
3. Drücken Sie die Taste < Entf > und schalten Sie das System an um das BIOS-setup zu gelangen.
4. Steigen Sie in das Menü "CPU SpeedEasy Setup" ein, um die Geschwindigkeit einzustellen.

**ACHTUNG:**Falls Sie die Taktfrequenz der CPU nicht setzen, arbeitet Ihr System mit den Standardwerten für die CPU. (200MHz für den CPU mit 100MHz Host Bus Speed, 133MHz für den CPU mit 66MHz Host Bus Speed).

5. Speichern Sie die Einstellungen und verlassen Sie das BIOS, um die auvor eingestellte Taktfrequenz zu aktivieren.



## CPU SpeedEasy Installationsmenü

Wählen Sie < CPU SpeedEasy Setup> aus dem Hauptmenü und öffnen Sie das untergeordnete Menü

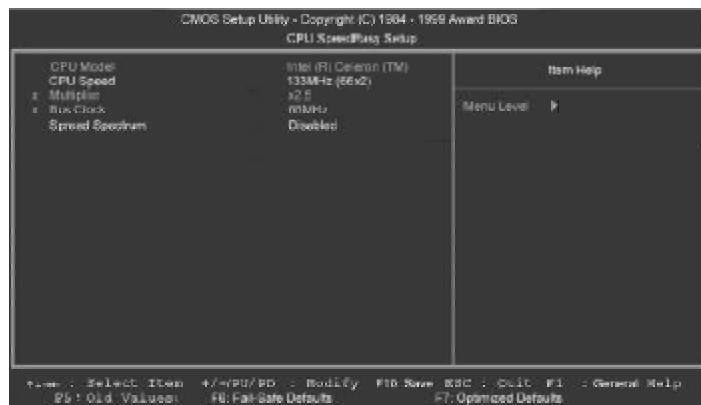


Abb. 1 CPU SpeedEasy Setup menü

Das BIOS stellt Ihnen eine Reihe von Grundeinstellungen für Ihren CPU zur Verfügung, anstelle von "jumper setting". Sie können manuell die Geschwindigkeit des CPU innerhalb des "CPU SpeedEasy Setup" einstellen.



### warnung:

Bitte Setzen Sie die Taktfrequenz der CPU nicht höher als die tatsächliche freigegebene Taktfrequenz, ansonsten Kann QDI für rechtliche Ansprüche nicht herangezogen werden.



## SpeedEasy Instalación rápida

### Procedimiento:

1. Introduzca correctamente el the Intel®Celeron PPGA 370.
2. Finalize el proceso de ensamblaje de su equipo.
3. Presione la tecla <Supr> y encienda el sistema, para entrar en BIOS.
4. Entre al menu “CPU SpeedEasy Setup” para establecer la velocidad de su CPU.

**Nota: Si no establece la velocidad del CPU, su sistema funcionará a la velocidad minima por defecto (200MHz para CPU con velocidad de bus de 100MHz, 133MHz para CPU con velocidad de bus de 66MHz )**

5. Salve y salga de BIOS, luego su sistema arrancará a la velocidad por Ud. seleccionada.



## Menu del CPU SpeedEasy

Seleccione el ítem <CPU SpeedEasy Setup> desde el menú principal, y entre en el submenú:



Figura-1 Menu del CPU SpeedEasy Setup

BIOS le proporcionará unos valores básicos para la elección de su CPU, en vez de tener que configurar jumpers. Ud. puede seleccionar manualmente la velocidad de CPU en el menú "CPU SpeedEasy Setup".



### Aviso

No es recomendable seleccionar una frecuencia de trabajo superior a la a la cual esta diseñada su CPU. De otra manera, no seremos responsables de los daños que esto pudiera ocasionar.



## Facilité de vitesse Initialisation

### Procédure:

1. Ins, rez le the Intel®Celeron PPGA 370 correctement.
2. Connectez les autres configurations et restaurez le systšme.
3. Appuyez sur la touche <Del> et mettez le systšme sous tension pour entrer dans l' initialisation BIOS.
4. Entrez le menu "CPU SpeedEasy Setup" (=initialisation de la facilit, de vitesse dans l' unit, centrale) pour d, terminer la vitesse de l' unite centrale.

**Note: Si vous ne déterminez pas la vitesse de votre unité centrale, votre système fonctionnera par défaut (200MHz pour le CPU avec vitesse bus d' hôte de 100MHz, 133MHz pour le CPU avec vitesse bus d' hôte de 66MHz).**

5. Sauvegardez et sortez de la position BIOS. Le système pourra alors démarrer avec le succès auquel vous vous attendez.



## Menu d'initialisation de "SpeedEasy" dans l'unité centrale.

Sélectionnez la rubrique <CPU SpeedEasy Setup> dans le menu principal et entrez le sous-menu:

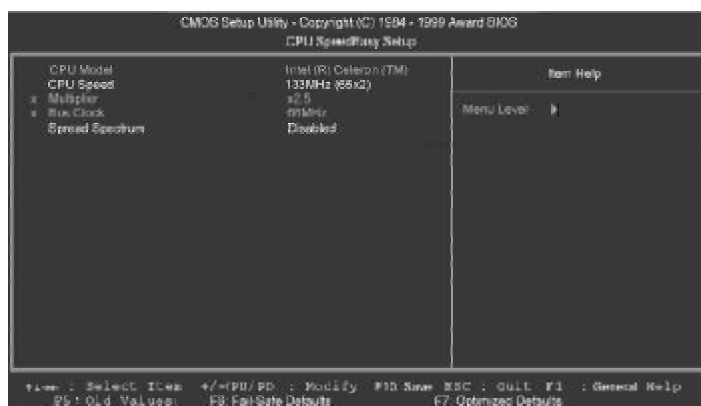


Figure-1 Menu d'initialisation de "SpeedEasy" dans l'unité centrale

BIOS fournira un jeu de valeurs de base pour votre sélection de CPU au lieu de positions cavaliers. Vous pouvez sélectionner manuellement la vitesse de CPU dans l'affichage du menu "CPU SpeedEasy Setup".



### Avertissement:

Ne vous laissez pas aller à installer une fréquence à l'unité centrale supérieure à sa fréquence de travail. Sinon nous délinquons toutes responsabilités en ce qui concerne les dommages qui en résulteraient.



## SETUP DELLA SCHEDA SPEEDEASY

### Procedura di installazione:

1. Inserite il microprocessore the Intel®Celeron PPGA 370 come da istruzioni.
2. Modificate la configurazione del computer e ripristinate il sistema.
3. Premete il tasto <Del> e accendete il computer per entrare nel setup BIOS.
4. Entrate nel menu "CPU SpeedEasy Setup" per regolare la velocit...del microprocessore. <sup>1</sup>

**Nota: se non regolate la velocità del microprocessore, il sistema funzionerà con le regolazioni standard (Microprocessore da 200MHz con velocità di "host bus" da 100MHz e microprocessore da 133MHz con velocità di "host bus" da 66MHz).**

5. Salvate e uscite dal Setup BIOS, e fate ripartire il computer.

\*CPU= microprocessore



## Menu del Setup del Microprocessore SpeedEasy

Selezionare <CPU SpeedEasy Setup> dal menu principale ed entrare nel seguente sottomenu:

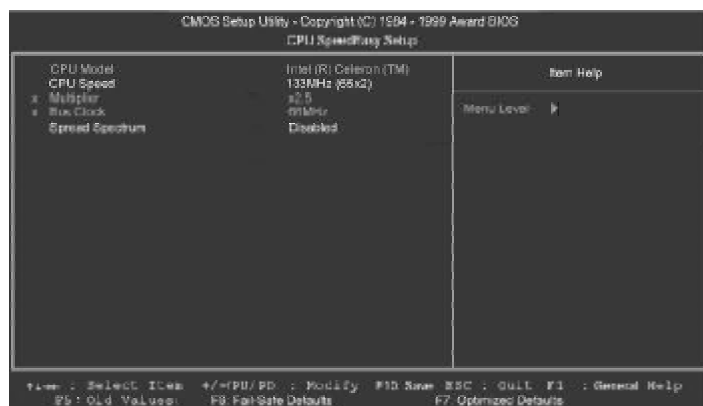


Figure -1 Menu del Setup del Microprocessore SpeedEasy

Il sistema BIOS Vi fornirà una serie di valori base per la selezione del microprocessore al posto della regolazione jumper (dell'accoppiamento). Potete selezionare manualmente la velocità del microprocessore sulla schermata "CPU SpeedEasy Setup".



Avvertenza:

non dovete regolare la frequenza del microprocessore più alta di quella predisposta, altrimenti la casa produttrice non si farà carico di eventuali danni al microprocessore.




**SpeedEasy** ¿ Ë Ù ¤ Ö Ä Ì

### 3. Dò

- [illegible]


× ò àÈ ø µ ½ CPUµ Å Ø È Ĩ ĩ ¾ ð Ò É ¶ µ Å Ø Æ Æ Ø Ó Ú Ů Æ Å È 900MHz  
µ ÅCPU, Ĩ 200MHz ; ¶ Ó Ú Ů Æ Å È 66MHz µ ÅCPU, Ĩ 933MHz, ¶ Ó Ú Ů Æ Å È Æ Å  
CPU, Ò Æ Æ Å µ È Ø È

5. **Ñ Ò ñ "Save & Exit Setup"** **Ñ İ ĩ æ É Ğ Ö µ Í Ě BIOS, İ µ % ĺ Ĥ Ô Ä Ħ è**  
**¶ µ Ķ Ū Ū Ħ Ħ Ē**



· Õ É Æ Æ Æ Æ Æ Æ Æ Æ Æ CPU Speed Easy Setup > Ì î È á Æ Æ Æ Æ Æ Æ Æ Æ



  $\frac{3}{4}$  æ

S.12

**SpeedEasy** ¿ Ë Ù ¤ Ö Ä Ì

### 3. ĐỒ

1. 0 5 μ 0 5 Intel®Celeron PPGA 370 CPU。

× 0 a È o p ½ CPU μ Ā Ψ È Ĩ ĩ ¾ 0 0 É μ Ā Ψ ð ð 100 0 x 0 Ū β Ā  
CPU » 0 0 200 0 x 0 ð ð 66 0 x 0 Ū β Ā CPU » 0 0 33 0 x 0 ð ð 1 0 é 1  
Æ ũ Ě Ā Ā CPU, 0 ð ð Ē Ē Ē Ē Ψ È.


5. N Q nSave & Exit Setup" N j i x E O u I E BIOS, i j % j N O A E O A E U O H H A E



SpeedEasy - ½ ½ Ü

## CPU SpeedEasy É º þ ¥

ˆ Ö É Ø Å þ Ü Ñ Ô Æ CPU SpeedEasy Setup>Í î È á Æ Æ è Ó þ ¥

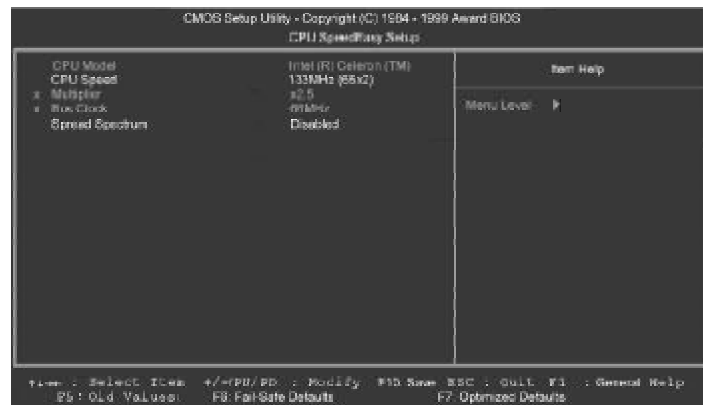

Í ¼ 1 CPU SpeedEasyÉ º Ì Å þ ¥

BIOSÎ Å þ ÅCPUÌ á Ø × é ñ Æ Ì î Ò Ô ñ æ Í þ Å Æ (jumper). È ½ È Å Æ É  
Ò Ô Ü” CPU SpeedEasy Setup” º þ È Ì Î CPUÑ Ô Ñ Æ µ Å × Å þ È



¾ ¯ æ

Ç È Æ CPUµ Å þ þ ½ Ü Å Æ Æ Ø ÿ £ × Å þ È. Ñ ñ ¾ È ¾ º » á Ø Ó È Æ ø  
º Æ µ Å þ È Æ Æ Ü