Removing and Replacing Parts

Preparing to Work Inside the Computer Recommended Tools Screw Identification System Components Hard Drive **Fixed Optical Drive** Media Bay Devices **Memory Modules** Mini PCI Card Assembly **Keyboard Assembly Display and Bezel Assembly Display Assembly Bezel and Panel Display Latch Assembly** Microprocessor Thermal Cooling Assembly Microprocessor Module Video Memory Cache Card (Optional) Palm Rest Assembly LED Board System Board Assembly Battery and Media Bay Latch Assemblies Fan Assembly RJ-11/RJ-45 Board

HINT: Unless otherwise noted, each procedure in this document assumes that a part can be replaced by performing the removal procedure in reverse order.

HINT: Make sure the computer is turned off and not in standby or hibernate mode. If you cannot shut down the computer using the computer's operating system, press and hold the power button for 4 seconds.

Preparing to Work Inside the Computer


- NOTICE: Only a certified service technician should perform repairs on your computer. Damage or inoperability due to servicing not authorized by Dell is not covered by your warranty.
- NOTICE: To dissipate any static electricity while you work, periodically touch an unpainted metal surface on the surface of the computer, such as the I/O panel on the back of the computer chassis.
- NOTICE: Handle components and cards with care. Do not touch the components or contacts on a card. Hold a card by it edges or by its metal mounting bracket. Hold a component such as a microprocessor by its edges, not by its pins.
- 1 To avoid damaging the computer, perform the following steps before you begin working inside the computer.
- 2 Make sure that the work surface is clean to prevent scratching the computer cover.
- 3 Save any work in progress and close all open programs.
- 4 Turn off the computer and all attached devices.
- 5 Make sure the computer is not connected to a port replicator.
- 6 Disconnect the computer from the electrical outlet.
- NOTICE: To avoid possible damage to the system board, wait 10 to 20 seconds before you disconnect any attached devices.
- 7 Disconnect all external cables and attached devices from the computer.
- 8 Remove any installed PC Cards or plastic blanks from the PC Card slot.
- 9 Close the display and turn the computer upside down on a flat work surface.
- 10 Remove the battery from the battery bay.
- NOTICE: To avoid damaging the system board, you must remove the battery before you service the computer.
- 11 Remove any installed device in the media bay.

Recommended Tools

- #1 magnetized Phillips-head screwdriver
- Small flat-blade screwdriver
- Pry stick
- Small plastic scribe
- Microprocessor extractor
- Flash BIOS update program floppy disk or CD (required only when upgrading the microprocessor or replacing the system board)

Screw Identification

Before removing and replacing components, photocopy the screw placemat as a tool to help keep track of the screws. The placemat provides the number of screws and the sizes.

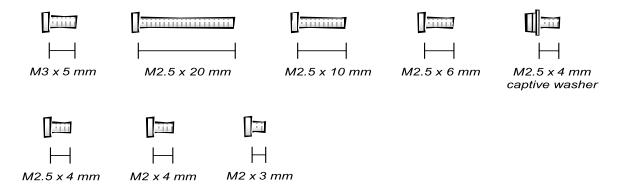


NOTICE: When reinstalling a screw, you must use a screw of the correct diameter and length. Make sure that the screw is properly aligned with its corresponding hole, and avoid over tightening.

Screw Placemat


Hard Drive Door Security: M3.0 x 5 mm (1 each)Keyboard to Bottom Case Assembly: M2.5 x 20 mm (4 each; one in memory door and one in Mini) PCI card door)Display to Base: M2.5 x 6 mm (3 each; 2 at back of system; 1 at flex-cable strain relief)Display Bezel: Rubber screw covers (4 each) Plastic screw covers (2 each)Display Panel to Display Mounting Bracket: 15-inches M2.0 x 3 mm (6 each)Display Panel to Display M0.0 x 3 mm (4 each)M2.5 x 4 mm (6 each)Image: Comp Cover: M2.5 x 4 mm (1 each)Image: Comp Cover: M2.5 x 4 mm (1 each)M2.5 x 4 mm (1 each)Image: Comp Cover: M2.5 x 4 mm (1 each)Image: Comp Cover: M2.5 x 4 mm (1 each)	Ŭ		
M13.0 X 3 mm (Teach) M2.5 x 20 mm (4 each; one in memory door and one in Mini PCI card door) M12.5 x 0 mm (5 each, 2 at back of system; 1 at flex-cable strain relief) Display Bezel: Display Panel to Display Image: Comparison of the system; 1 at flex-cable strain relief) Nubber screw covers (4 each) Display Panel to Display Mounting Bracket: 15-inches M2.5 x 4 mm (6 each) M2.0 x 3 mm (6 each) M2.0 x 3 mm (4 each) M2.5 x 4 mm (6 each) M2.0 x 3 mm (6 each) Image: Comparison of the system; 1 at flex-cable Mounting Bracket to Top Cover:	$M_{2}0 \times 5 mm (1 \text{ orch})$		Display to Base:
memory door and one in Mini PCI card door)relief)Image: PCI card door)Image: PCI card do	wisto x 5 mm (1 each)	Assembly:	M2.5 x 6 mm (3 each; 2 at back
PCI card door)Image: PC			5
LineLineLineDisplay Bezel: Rubber screw covers (4 each) Plastic screw covers (2 each) M2.5 x 4 mm (6 each)Display Panel to Display Mounting Bracket: 15-inches M2.0 x 3 mm (6 each)Display Panel to Display Mounting Bracket: 14.1-inches M2.0 x 3 mm (4 each)M2.5 x 4 mm (6 each)Image: Cable Mounting Bracket Top Cover:Image: Cable Mounting Bracket Top Cover:	[]		relief)
Display Bezel: Rubber screw covers (4 each) Plastic screw covers (2 each)Display Panel to Display Mounting Bracket: 15-inches M2.0 x 3 mm (6 each)Display Panel to Display Mounting Bracket: 14.1-inches M2.0 x 3 mm (4 each)M2.5 x 4 mm (6 each)Image: Cable Mounting Bracket Top Cover:Image: Cable Mounting Bracket Top Cover:Flex-Cable Mounting Bracket Top Cover:		PCI card door)	
Display Bezel: Rubber screw covers (4 each) Plastic screw covers (2 each)Display Panel to Display Mounting Bracket: 15-inches M2.0 x 3 mm (6 each)Display Panel to Display Mounting Bracket: 14.1-inches M2.0 x 3 mm (4 each)M2.5 x 4 mm (6 each)Image: Cable Mounting Bracket Top Cover:Image: Cable Mounting Bracket Top Cover:Flex-Cable Mounting Bracket Top Cover:			Π
Rubber screw covers (4 each) Plastic screw covers (2 each)Mounting Bracket: 15-inches M2.0 x 3 mm (6 each)Mounting Bracket: 14.1-inches M2.0 x 3 mm (4 each)M2.5 x 4 mm (6 each)Image: Cable And Image: Cable			<u>L</u>
Mabbel Strew Covers (4 each) M2.0 x 3 mm (6 each) M2.0 x 3 mm (4 each) M2.5 x 4 mm (6 each) Image: Cable Mounting Bracket to Top Cover: Flex-Cable Mounting Bracket to Top Cover:	Display Bezel:		
M2.5 x 4 mm (6 each) Flex-Cable Mounting Bracket to Top Cover: Flex-Cable Mounting Bracket to Top Cover:	Rubber screw covers (4 each)	Mounting Bracket: 15-inches	Mounting Bracket: 14.1-inches
M2.5 x 4 mm (6 each) M2.5 x 4 mm (6 each) Image: Cable Mounting Bracket Image: Cable Mounting Bracket Flex-Cable Mounting Bracket to Top Cover: Flex-Cable Mounting Bracket	Plastic screw covers (2 each)	M2.0 x 3 mm (6 each)	M2.0 x 3 mm (4 each)
Image: Second			
to Top Cover: to Top Cover:	Wi2.5 X 4 mm (0 cach)		I
to Top Cover: to Top Cover:	[]	Flay Cable Mounting Product	Elex Cable Mounting Product
M2.5 x 4 mm (1 each) M2.5 x 4 mm (1 each)	Lan	0	0
		M2.5 x 4 mm (1 each)	M2.5 x 4 mm (1 each)
		_	
Video Memory Cache Card: Palm Rest to LED Board:			[===
M2.5 x 4 mm (2 each) Bottom Case Assembly: M2.0 x 4 mm (2 each)	Video Memory Cache Card:	Palm Rest to	LED Board:
M2.5 x 20 mm (9 each)	ů l		
	Video Memory Cache Card: M2.5 x 4 mm (2 each)	Bottom Case Assembly:	LED Board: M2.0 x 4 mm (2 each)
	ů l	Bottom Case Assembly:	
	ů l	Bottom Case Assembly: M2.5 x 20 mm (9 each)	
	ů l	Bottom Case Assembly:	

System Board:	Fan Assembly:	RJ-11/RJ-45 Board Assembly:
M2.5 x 4 mm captive washer (3 each)	M2.0 x 4 mm (3 each)	M2.5 x 4 mm (1 each)
M2.5 x 20 mm (1 each)		

System Components

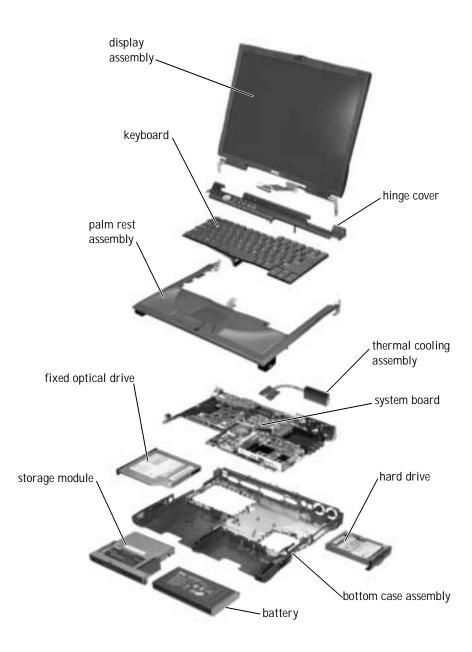

Hard Drive

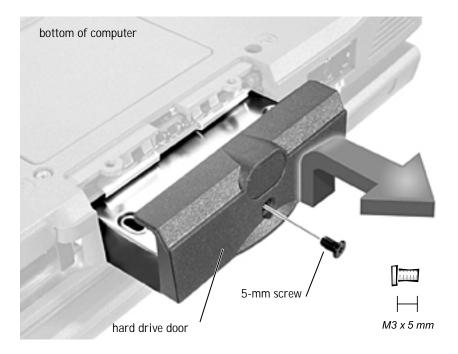




NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.

NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.

Removing the Hard Drive



• NOTICE: Make sure that the work surface is clean to prevent scratching the computer cover.

NOTICE: The disk drive is very sensitive to shock. Handle the assembly by its edges (do not squeeze the top of the hard drive case), and avoid dropping it.

1 Follow the instructions in "Preparing to Work Inside the Computer."

- 2 Close the display, turn the computer upside down on a flat work surface, and remove the battery.
- 3 Remove the 5-mm screw from the center of the hard drive door.
- 4 Slide the drive door up until the drive assembly tab disengages from the door slots in the bottom case assembly.
- 5 Carefully pull the drive assembly straight out of the bottom case assembly.

Replacing the Hard Drive

- 1 Push the drive assembly into the hard drive opening on the left side of the computer.
- 2 Align the drive assembly tabs with the bottom case assembly slots and push down until it clicks into place.
- 3 Replace the 5-mm screw in the drive door.

Fixed Optical Drive





O NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.


NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.

Removing the Fixed Optical Drive

- Follow the instructions in "Preparing to Work Inside the Computer." 1
- 2 Loosen the captive screw on the bottom of the computer.
- 3 Turn the computer over, loosen the captive screw marked "C," and pull out the pull tab to remove the fixed optical drive.

Media Bay Devices

NOTICE: Disconnect the computer and any attached devices from electrical outlets, and remove any installed battery.




NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or

Removing Media Bay Devices

- 1 Follow the instructions in "Preparing to Work Inside the Computer."
- Close the display, turn the computer upside down on a flat work 2 surface, and remove the battery.
- 3 Remove the device from the media bay.
- 4 Push the module latch toward the right side of the computer. Keep holding the latch open while pulling the device out of the media bay with the other hand.


Memory Modules

D NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.




Removing the Memory Module Cover

- NOTICE: To avoid damaging the system board, you must remove the battery before you service the computer.
- NOTICE: Handle memory modules with care. Don't touch the components on a module. Hold a module by its edges.
 - 1 Follow the instructions in "Preparing to Work Inside the Computer."
 - 2 Remove the screw.
 - 3 Disengage the metal tabs at the opposite end of the cover.

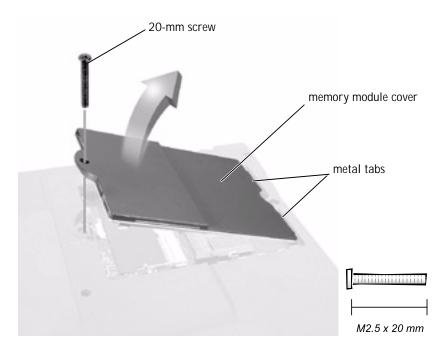

Removing Memory Modules

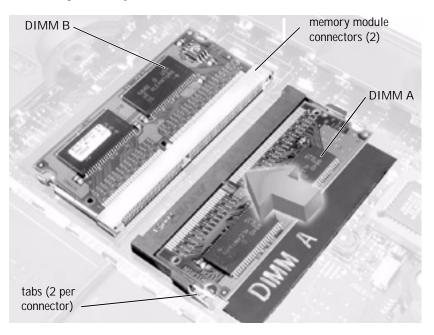

- 1 Remove the memory module cover.
- 2 To release a memory module from its connector, spread apart the tabs at each side of the module until the module pops up slightly.
- 3 Lift the memory module out of its connector.

Replacing Memory Modules

- 1 If you only have one memory module, install it in the connector labeled "DIMM A." If you have two memory modules, install the second module in the connector labeled "DIMM B."
- 2 Insert the memory module's edge connector with the slot at a 45degree angle, and press the memory module firmly into the slot.
- ³ Pivot the memory module down until it clicks into place. If you do not hear a click, remove the module and reinstall it.
- 4 Insert the metal tabs on the memory module cover into the bottom case assembly. Rotate the cover down and replace the screw.

HINT: Memory modules are keyed, or designed to fit into their connectors, in only one direction.


Mini PCI Card Assembly

- NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.
- NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.

You must remove the optional Mini PCI card assembly before the system board assembly can be removed. A Mini PCI card assembly may consist of a modem or a modem and network adapter combination. A modem or modem and network adapter combination must be connected to the wiring harness as appropriate.

Removing the Mini PCI Card Assembly

- 1 Follow the instructions in "Preparing to Work Inside the Computer."
- 2 Remove the 20-mm screw and lift out the Mini PCI card cover.

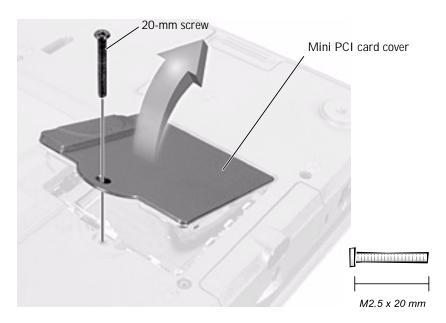


- ³ To release the Mini PCI card assembly, spread the metal securing tabs until the assembly pops up slightly.
- 4 Disconnect the assembly from the wiring harness.

5 Lift out the assembly and disconnect any attached cables.

Replacing the Mini PCI Card Assembly

- Align the Mini PCI card assembly with the socket at a 45-degree angle, 1 and press the Mini PCI card into the socket.
- 2 Connect the wiring harness to the Mini PCI card assembly.
- **O**NOTICE: The connectors are keyed for correct insertion; do not force the connections.

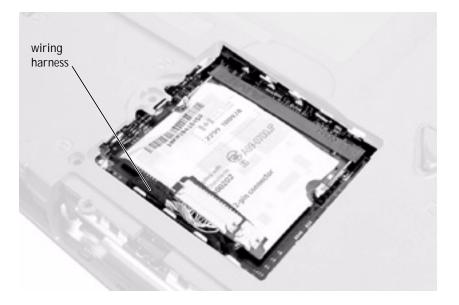



NOTICE: If you are installing a modem card, fold and tuck the unused wiring harness under the card so that it does not interfere with the cover.

- 3 Pivot the Mini PCI card assembly down until it clicks into place.
- Replace the Mini PCI card assembly cover. 4


Keyboard Assembly

NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.

NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.

Removing the Keyboard Assembly


- 1 Follow the instructions in "Preparing to Work Inside the Computer."
- 2 Turn the computer over and remove the four screws labeled with a "circle K."

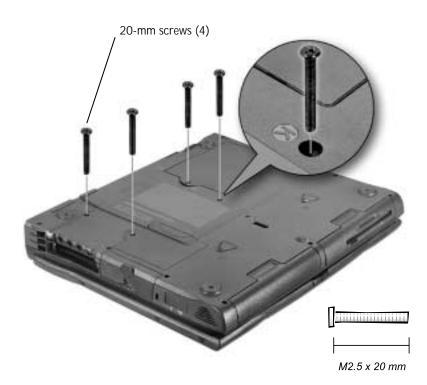

- 3 Turn the computer over and open the display.
- NOTICE: Be careful when handling the keyboard. The keycaps are fragile, easily dislodged, and time-consuming to replace.
- 4 Insert a pry stick under the blank key to pry up the keyboard.



- 5 Lift the right end of the keyboard, and slide it slightly to the right to disengage the tabs at the left end.
- 6 Pivot the keyboard and balance it upright on the left side of the computer.

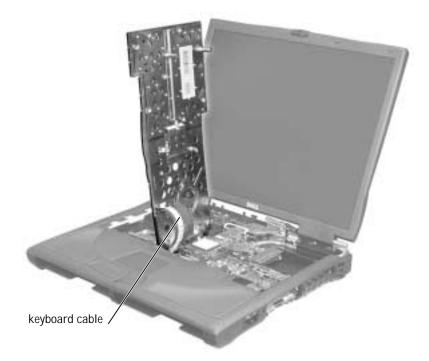

7 Disconnect the keyboard cable and lay the keyboard assembly aside.


Replacing the Keyboard Assembly

- 1 While bracing the keyboard assembly upright on its left end, connect the keyboard cable to the interface connector on the system board.
- NOTICE: Position the keyboard flex cable so that it is not pinched when you replace the keyboard in the bottom case assembly.
- 2 Insert the metal tabs at the left end of the keyboard under the edge of the bottom case assembly, and fit the keyboard into place.
- 3 Check that the keyboard is correctly installed. The keys should be flush with the left and right surfaces of the palm rest.
- 4 Reinstall the four screws in the holes labeled "K."

И

HINT: The cable connector the cable connector on the system board is outlined in white to help you orient.

Display and Bezel Assembly

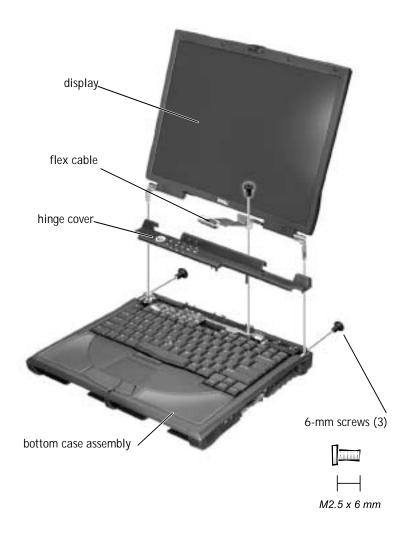



NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.


NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.

Removing the Hinge Cover




- 1 Follow the instructions in "Preparing to Work Inside the Computer."
- 2 Use a nonmarring tool to loosen the hinge cover at the back and at each side of the computer.
- 3 Open the display and lift off the hinge cover.

Removing the Display Assembly

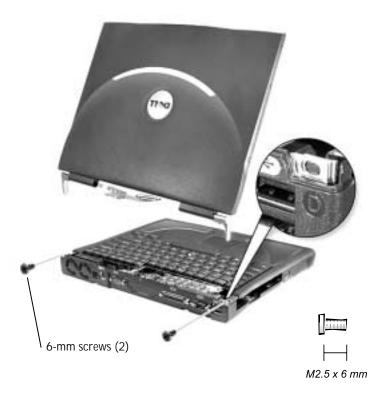


- 1 Remove the hinge cover.
- 2 Remove the 6-mm screw that secures the flex cable to the strain relief, and then use the pull loop to remove the flex cable from the system board.

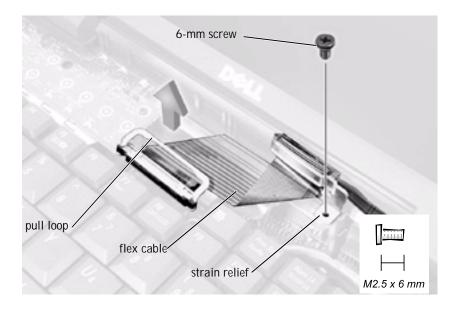


- NOTICE: When reconnecting the flex cable, press down on both ends of the connector, not in the middle. Pressing the middle of the connector can damage fragile components.
- 3 Open the display and remove the two screws (marked with a "circle D") that secure the display assembly to the bottom case assembly.
- 4 With the display in an upright position, lift the display assembly from the bottom case assembly.

Display Assembly Bezel and Panel

12.1-Inch Display Bezel

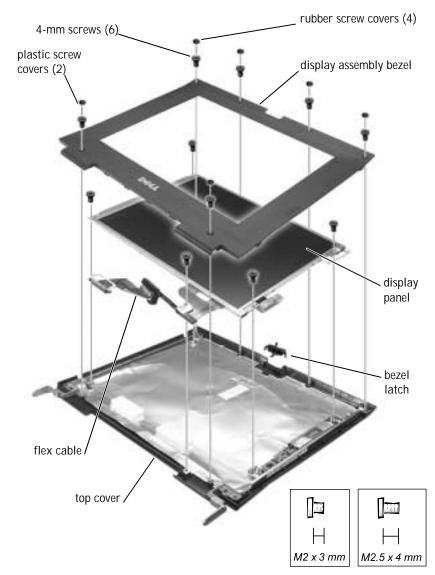

14.1-Inch Display Bezel

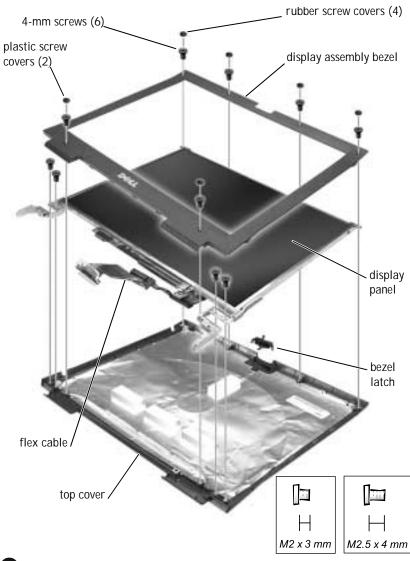

• NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.

NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.


Removing the Display Assembly Bezel

- 1 Follow the instructions in "Preparing to Work Inside the Computer."
- 2 Use a scribe to pry loose the four rubber screw covers located across the top of the bezel.
- 3 Remove the two 4-mm screws located across the top of the bezel.
- 4 Use a scribe at the indentations to pry loose the plastic screw covers located at the bottom of the bezel.
- 5 Remove the six 4-mm screws located at the bottom of the bezel.
- 6 Separate the bezel from the display-assembly top cover.

The bezel is secured to the display assembly top cover with plastic tabs around the sides. Use a plastic scribe to help separate the bezel from the top cover.

Removing the Display Panel


- 1 Remove the hinge cover.
- 2 Remove the screw securing the flex cable to its strain relief, and then use the pull loop to remove the flex cable from the system board.

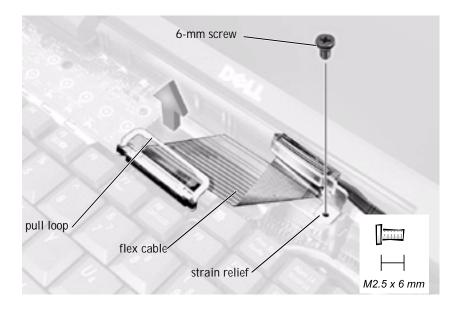


NOTICE: When reconnecting the flex cable, press down on both ends of the connector, not in the middle. Pressing the middle of the connector can damage fragile components.

- 3 Remove the display assembly bezel.
- 4 Remove the 4-mm screw securing the plastic flex-cable mounting bracket to the top cover assembly.
- 5 Remove the four 3-mm screws (two on each side) from the right and left sides of the panel.
- 6 Lift the display panel and flex cable out of the top cover assembly.
- 7 Disconnect the flex cable from the two connectors (a ZIF and a standard connector) on the display panel assembly.

HINT: If you find a kaption tape on the standard connector, remove it.

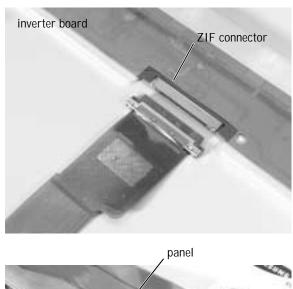

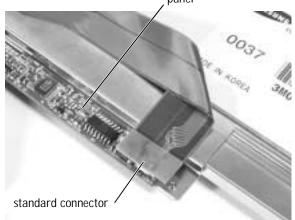


Replacing the Display Panel

- Connect the flex cable to the two connectors (ensure that the ZIF 1 connector is locked into place) on the back of the display panel.
- Place the display panel assembly in the top cover, taking care that the 2 flex cable is in place and is not crushed or crimped.
- 3 Reinstall the 4-mm screw that secures the flex-cable mounting bracket to the top cover.



HINT: Use a magnetic screwdriver to reassemble the display panel in the display.

- 4 Starting on the left side, use a magnetic screwdriver to reinstall the four 3-mm screws that secure the display panel in the top cover.
- 5 Reinstall the display assembly bezel.

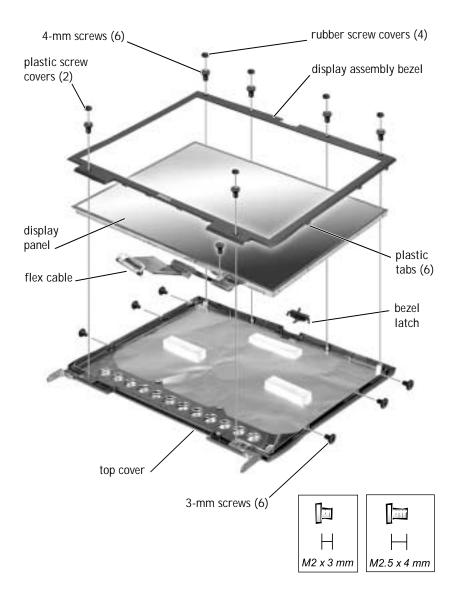

15-Inch Display Assembly

NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.

NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.


Removing the Display Assembly Bezel

- Follow the instructions in "Preparing to Work Inside the Computer." 1
- Use a scribe to pry loose the four rubber screw covers located across the 2 top of the bezel.
- 3 Remove the four 4-mm screws located across the top of the bezel.
- Use a scribe at the indentations to pry loose the plastic screw covers 4 located at the bottom of the bezel.
- 5 Remove the two 4-mm screws located at the bottom of the bezel.
- Separate the bezel from the display-assembly top cover. 6

The bezel is secured to the display assembly top cover with plastic tabs around the sides. Use a plastic scribe to help separate the bezel from the top cover.

Removing the Display Panel


- Remove the hinge cover. 1
- Remove the screw securing the flex cable to its strain relief, and then 2 use the pull loop to remove the flex cable from the system board.

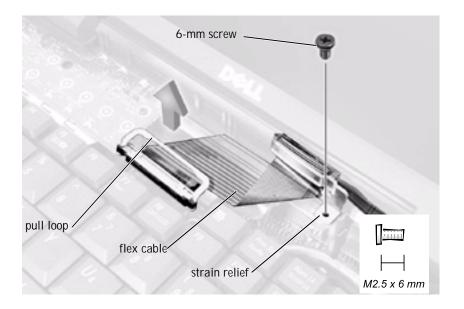

NOTICE: When reconnecting the flex cable, press down on both ends of the connector, not in the middle. Pressing the middle of the connector can damage fragile components.

- 3 Remove the display assembly bezel.
- 4 Remove the 4-mm screw securing the plastic flex-cable mounting bracket to the top cover assembly.
- 5 Remove the six 3-mm screws (three on each side) from the right and left sides of the panel.
- 6 Lift the display panel and flex cable out of the top cover assembly.
- 7 Disconnect the flex cable from the two connectors (a ZIF and a standard connector) on the display panel assembly.

HINT: If you find a kaption tape on the standard connector, remove it.

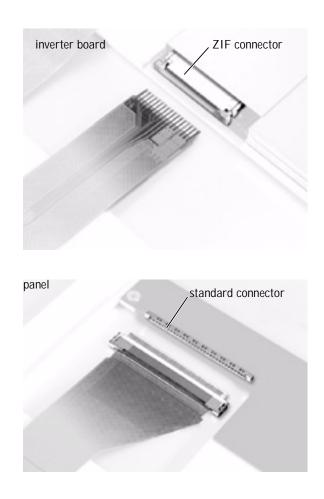

Replacing the Display Panel


- Connect the flex cable to the two connectors (ensure that the ZIF 1 connector is locked into place) on the back of the display panel.
- Place the display panel assembly in the top cover, taking care that the 2 flex cable is in place and is not crushed or crimped.
- Reinstall the 4-mm screw that secures the flex-cable mounting bracket 3 to the top cover.



HINT: Use a magnetic screwdriver to reassemble the display panel in the display.

- 4 Starting on the left side, use a magnetic screwdriver to reinstall the six 3-mm screws that secure the display panel in the top cover.
- 5 Reinstall the display assembly bezel.

Display Latch Assembly

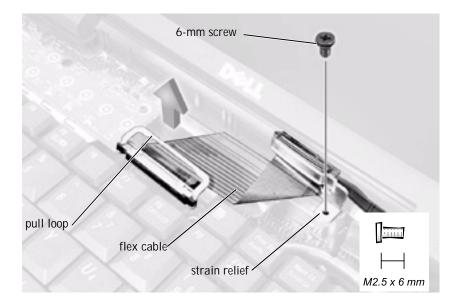


- 1 Remove the hinge cover.
- 2 Remove the screw securing the flex cable to its strain relief, and then use the pull loop to remove the flex cable from the system board memory cache card.
- NOTICE: When reconnecting the flex cable, press down on both ends of the connector, not in the middle. Pressing the middle of the connector can damage fragile components.



- 3 Remove the display assembly bezel.
- 4 Remove the display panel from the top cover.
- 5 Remove the display latch by unsnapping the latch and captive spring.
- NOTICE: When replacing the display assembly latch, it may help to flex the cover slightly to allow more space while seating the latch.

Microprocessor Thermal Cooling Assembly

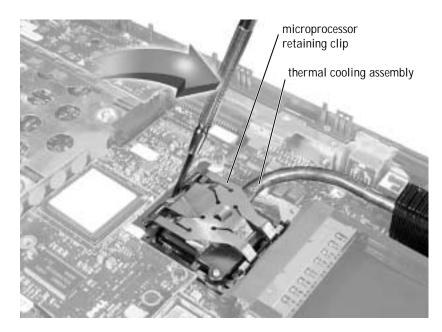

- NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.
- NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.

microprocessor thermal cooling assembly


Removing the Microprocessor Thermal Cooling Assembly

- 1 Follow the instructions in "Preparing to Work Inside the Computer."
- 2 Remove the keyboard assembly.
- 3 Remove the hinge cover.

NOTICE: To ensure maximum cooling for the microprocessor, do not touch the heat transfer areas on the thermal cooling assembly. The oils in your skin reduce the heat transfer capability of the thermal pads.

- 4 Insert a pry stick into the latch mechanism at the left side of the microprocessor retaining clip, and pry open the clip.
- 5 Lift out the thermal cooling assembly.

Microprocessor Module

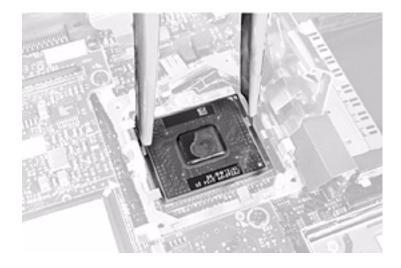


NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.

NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.

Removing the Microprocessor Module

- 1 Follow the instructions in "Preparing to Work Inside the Computer."
- 2 Remove the keyboard assembly.
- 3 Remove the hinge cover.
- 4 Remove the microprocessor thermal cooling assembly.
- NOTICE: To ensure maximum cooling for the microprocessor, do not touch the heat transfer areas on the thermal cooling assembly. The oils in your skin reduce the heat transfer capability of the thermal pads.
- 5 Remove the microprocessor module.
- NOTICE: When removing the microprocessor module, pull the module straight up. Do not bend the pins.

a Loosen the microprocessor socket cam lock screw. The location of the screw and the rotation direction may vary with the socket manufacturer; look for small icons indicating open and locked positions.

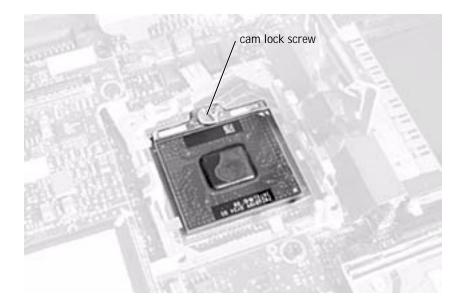

- b Use the microprocessor extraction tool to remove the microprocessor module.
- c To remove the microprocessor module, *pull the module straight up. Do not bend the pins.*

Replacing the Microprocessor Module

NOTICE: After replacing the microprocessor module, update the BIOS using a flash BIOS update program floppy disk or CD that came with the replacement microprocessor.



WOTICE: Proper seating of the microprocessor module does not require force.

NOTICE: A microprocessor module that is not properly seated can result in an intermittent connection and subsequent failures.

1 Align the pin-1 triangle on the microprocessor toward the pin-1 triangle in the socket, insert the microprocessor into the socket, and move it around slightly until you feel it settle into the socket.

When the microprocessor module is correctly seated, all four corners are aligned to the same height. If one or more corners of the module are higher than the others, the module is not seated correctly.

2 Tighten the cam lock screw.

NOTICE: Do not over or under tighten the screw. Tighten it until the screw indicator points to the "closed" or "locked" indicator on the socket.

- 3 Replace the microprocessor thermal cooling assembly.
- 4 While pressing lightly down on the center of the retaining clip, insert a pry stick into the latch mechanism and pivot the top of the pry stick away from the clip to close the latch.



Video Memory Cache Card (Optional)

NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.




O NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.

Removing the Video Memory Cache Card

- Follow the instructions in "Preparing to Work Inside the Computer." 1
- Remove the keyboard assembly. 2
- Remove the hinge cover. 3
- 4 Remove the two 4-mm screws that secure the video memory cache card.
- Lift the video memory cache card out of the system board connector. 5


Replacing the Video Memory Cache Card

- Align the two screw holes and press down firmly to seat the card in its 1 connector.
- 2 Replace the two screws

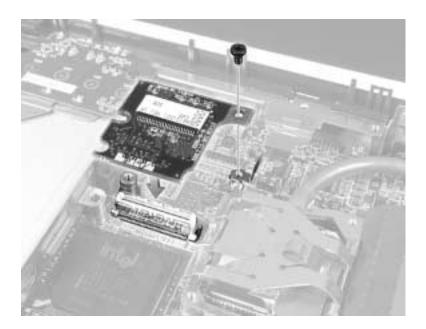

Palm Rest Assembly

Removing and Replacing the Palm Rest Inserts

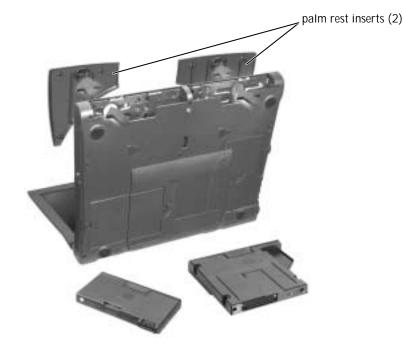


- 1 Keep the display open, and tilt the computer back so that you can access the bottom of the computer.
- 2 Slide and hold the latch release on the left side, and remove any device installed in the media bay.
- 3 Slide and hold the latch release on the right side, and remove any battery installed in the battery bay.
- 4 Locate the indentation under each palm rest insert, place your thumbs on the indentation, and gently push to release the palm rest inserts.




- 5 Remove the palm rest inserts.
- ⁶ To replace a palm rest insert, align it with the slots on the computer. Then press along the outside edges of the palm rest insert until it snaps into place.

Repeat the process on each side.

Removing the Palm Rest Assembly

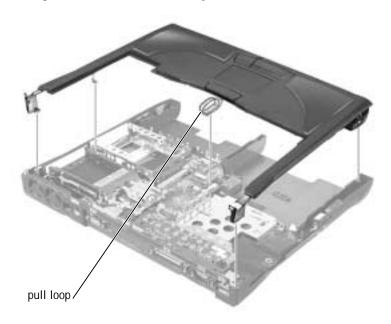


- NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.
- NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.
- 1 Follow the instructions in "Preparing to Work Inside the Computer."
- 2 Remove the hard drive and the fixed optical drive.
- 3 Remove the keyboard assembly.
- 4 Remove the hinge cover.
- 5 Remove the display.
- NOTICE: To avoid damaging the palm rest assembly, you must first remove the display assembly.
- 6 Turn the computer over.
- 7 Remove the nine 20-mm screws (labeled with a "circle P") that secure the palm rest assembly to the computer.

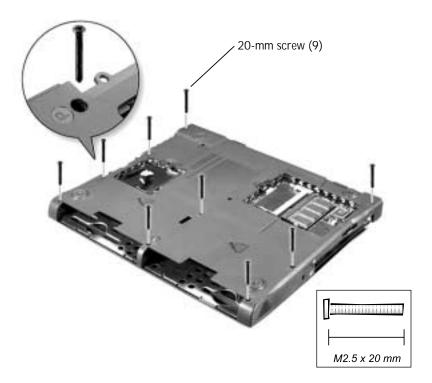

- 8 Turn the computer over.
- 9 Use the pull loop to disconnect the palm rest flex cable from the touch-pad connector on the system board.
- 10 Carefully lift out the palm rest assembly.

LED Board

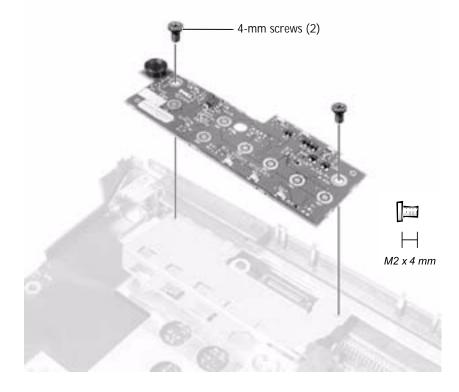

- NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.
- NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.


Removing the LED Board

- 1 Follow the instructions in "Preparing to Work Inside the Computer."
- 2 Remove the hinge cover.
- 3 Remove the two 4-mm screws.
- 4 Lift the LED board out of connector.

Replacing the LED Board

- Align the two screw holes with the two mounting holes on the bottom 1 case assembly, and press the board into its connector.
- 2 Replace the two 4-mm screws.

System Board Assembly

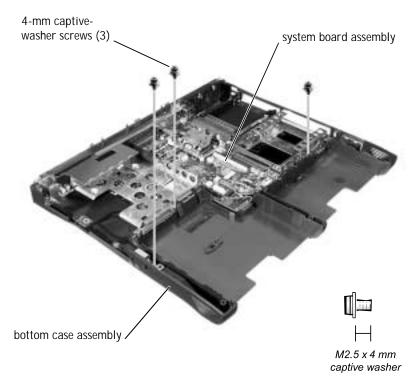



ONOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.

NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.

The system board's BIOS contains the system service tag number, which is also visible on a bar-code label on the bottom of the computer. The replacement kit for the system board assembly includes a floppy disk or CD that provides a utility for transferring the service tag number to the replacement system board assembly.




NOTICE: After replacing the microprocessor module, update the BIOS using a flash BIOS update program floppy disk or CD that came with the replacement microprocessor.

Removing the System Board

- Follow the instructions in "Preparing to Work Inside the Computer." 1
- Remove the hard drive and fixed optical drive. 2
- Remove any installed Mini PCI cards. 3
- If migrating the memory, remove all installed memory modules. 4
- Remove the keyboard assembly. 5
- 6 Remove the hinge cover.
- Remove the display assembly. 7
- Remove the palm rest assembly. 8
- Remove the video memory cache card, if present. 9
- 10 Remove the microprocessor thermal cooling assembly.
- If migrating the microprocessor, remove the microprocessor module. 11
- Remove the three 4-mm captive-washer screws from the system board. 12
- Remove the 20-mm screw from the center of the LED board. 13
- If migrating the LED board, remove it. 14
- 15 Lift the front of the system board and work it out of the back panel.



Battery and Media Bay Latch Assemblies

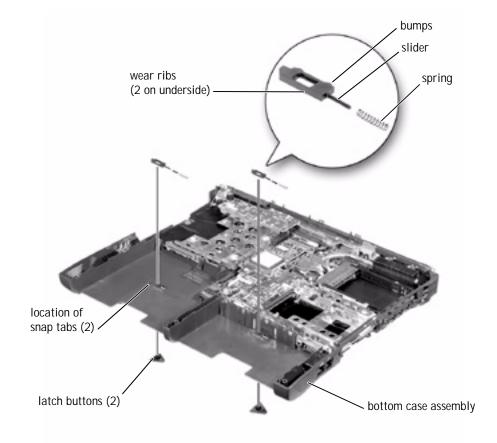

NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.

NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.


Removing and Replacing the Battery and Media Bay Latch Assemblies

- 1 Follow the instructions in "Preparing to Work Inside the Computer."
- 2 Remove the keyboard assembly.
- 3 Remove the hinge cover.
- 4 Remove the display assembly.
- 5 Remove the palm rest assembly.
- 6 Remove a latch button from the bottom case assembly by squeezing the snap tabs in the center of the latch.

Apply downward pressure to the tabs while squeezing them together (tweezers work well) to eject the latch button from the bottom of the case without loosening the upper latch assembly (spring and slider). If the upper latch assembly does come loose:

- a Reinsert the spring onto the slider, and reinstall both pieces in the latch housing on the inside of the case.
- b Ensure that the slider is inserted so that the side with the two bumps is facing the back of the case, and the surface with the wear ribs is facing the bottom of the case.
- 7 Hold the upper latch assembly in place while you snap the new latch button in from underneath the base, making certain the snap tabs are fully engaged in the slider.
- 8 Ensure that the newly installed latch assembly moves smoothly and freely when pushed and released.

Fan Assembly

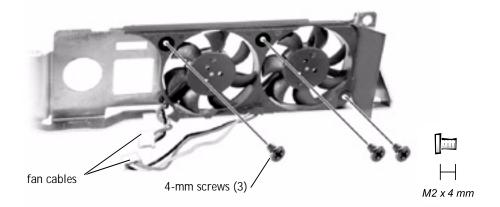

NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.

NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.

Removing the Fan Assembly

- 1 Follow the instructions in "Preparing to Work Inside the Computer."
- 2 Remove the system board.
- 3 Remove the three 4-mm screws from the fan assembly.
- 4 Disconnect the two fan cables from the system board.
- 5 Pull the fan assembly away from the back-panel bracket.
- NOTICE: When reconnecting the fan cables, connect the shorter cable to the connector closest to the fan assembly. Route both cables so that they will not be pinched by the thermal cooling assembly.


RJ-11/RJ-45 Board

NOTICE: Disconnect the computer and attached devices from electrical outlets and remove any installed battery.



O NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface on the computer.


Removing the Protective Covers From the RJ-11 and RJ-45 Connectors

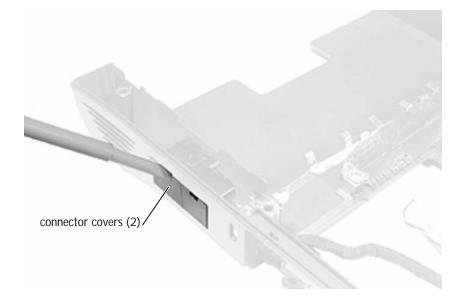

- Follow the instructions in "Preparing to Work Inside the Computer." 1
- 2 Remove one or both of the plastic connector covers (one or both of the covers may be installed) by slipping a nonmarring tool into the cutout at the top and pivoting the tool up to disengage the inner securing tab.

To replace a connector cover, orient the cover notch-side-up and snap it into the connector cutout.

Removing the RJ-11/RJ-45 Board

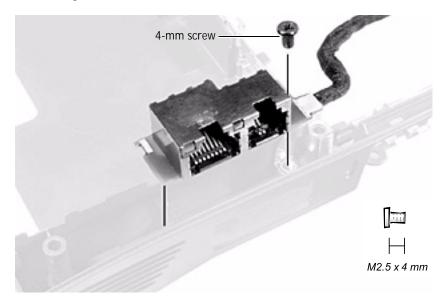

- 1 Follow the instructions in "Preparing to Work Inside the Computer."
- 2 Remove the system board.
- 3 Remove the 4-mm screw from the RJ-11/RJ-45 board.
- NOTICE: The plastic tab is fragile; pull it back only far enough to remove the board assembly.
 - 4 Reach into the enclosure and, while pulling the tall plastic tab away from the board assembly to release it, lift out the assembly.

When replacing the RJ-11/RJ-45 board assembly, protect the wiring harness by routing it between the plastic posts as shown in the following figure.

