

TOTAL MEMORY	BANK 0 (30-PIN)	BANK 1 (72-PIN)	BANK 2 (72-PIN)
21MB	256K x 4	4M x 1	16M x 1
	256K x 4	16M x 1	4M x 1
	1M x 4	1M x 1	16M x 1
	1M x 4	16M x 1	1M x 1
24MB	4M x 4	1M x 1	4M x 1
	4M x 4	4M x 1	16M x 1
	1M x 4	16M x 1	4M x 1
	1M x 4	16M x 1	4M x 1
32MB	4M x 4	16M x 1	16M x 1
	4M x 4	16M x 1	16M x 1
	256K x 4	1M x 1	16M x 1
	4M x 4	1M x 1	16M x 1
36MB	1M x 4	16M x 1	16M x 1
	4M x 4	4M x 1	16M x 1
	4M x 4	16M x 1	4M x 1
	4M x 4	16M x 1	16M x 1
48MB	4M x 4	16M x 1	16M x 1
	4M x 4	16M x 1	16M x 1
	16M x 4	1M x 1	1M x 1
	16M x 4	1M x 1	1M x 1
64MB	16M x 4	4M x 1	4M x 1
	16M x 4	4M x 1	4M x 1
	16M x 4	1M x 1	1M x 1
	16M x 4	1M x 1	1M x 1
68MB	16M x 4	1M x 1	4M x 1
	16M x 4	1M x 1	4M x 1
	16M x 4	4M x 1	1M x 1
	16M x 4	4M x 1	1M x 1
72MB	16M x 4	4M x 1	4M x 1
	16M x 4	4M x 1	4M x 1
	16M x 4	16M x 1	16M x 1
	16M x 4	16M x 1	16M x 1
80MB	16M x 4	16M x 1	16M x 1
	16M x 4	16M x 1	16M x 1
	16M x 4	16M x 1	16M x 1
	16M x 4	16M x 1	16M x 1

Table 3-1: DRAM Configurations (Continued)

TOTAL MEMORY	BANK 0 (30-PIN)	BANK 1 (72-PIN)	BANK 2 (72-PIN)
81MB	16M x 4	1M x 1	16M x 1
	16M x 4	16M x 1	1M x 1
	16M x 4	4M x 1	16M x 1
	16M x 4	16M x 1	4M x 1
84MB	16M x 4	16M x 1	4M x 1
	16M x 4	16M x 1	4M x 1
	16M x 4	16M x 1	16M x 1
	16M x 4	16M x 1	16M x 1
99MB	16M x 4	16M x 1	16M x 1
	16M x 4	16M x 1	16M x 1
	16M x 4	16M x 1	16M x 1
	16M x 4	16M x 1	16M x 1

Table 3-1: DRAM Configurations

Installation Instructions

→ NOTE : Always observe static electricity precautions. See "Handling Precautions" at the start of this manual.

- Assuming the 486-GVT has been mounted on your computer system unit, follow the instructions below:
1. Locate the SIMM banks on the motherboard. Determine your desired configuration to be installed.
 2. Insert the SIMM edge connector at a 75 degree angle onto the socket.

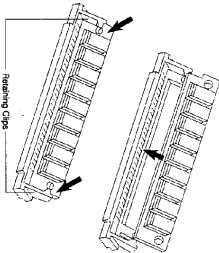


Figure 3-2: Installing SIMMs