

## Chapter 2




### HARDWARE INSTALLATION

#### Central Processing Unit: CPU

The mainboard operates with **Intel® Willamette processor**. The mainboard uses a CPU socket called Socket 423 for easy CPU installation. The CPU should always have a Heat Sink and a cooling fan attached to prevent overheating.

##### • CPU Installation Procedures

1. Pull the lever sideways away from the socket. Then, raise the lever up to a 90-degree angle.
2. Locate Pin 1 in the socket and look for the white dot or cut edge in the CPU. Match Pin 1 with the white dot/cut edge. Then, insert the CPU. It should insert easily.
3. Press the lever down to complete the installation.

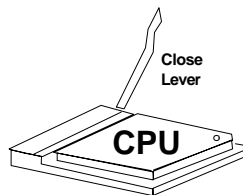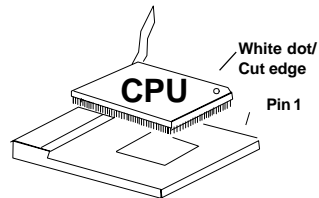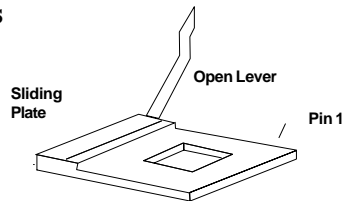


- **CPU Core Speed Derivation Procedure**

The mainboard CPU Bus Frequency can be set through BIOS setup.

<b>If</b>	<u>CPU Clock</u>	= 100MHz
	<u>Core/Bus ratio</u>	= 14
<b>then</b>	<u>CPU core speed</u>	= <u>Host Clock</u> x <u>Core/Bus ratio</u>
		= 1.4GHz

- **Fan Power Connectors: CPUFAN/PSFAN/SYSFAN**

These connectors support system cooling fan with + 12V. It supports three pin head connector. When connecting the wire to the connector, always take note that the red wire is the positive and should be connected to the +12V, the black wire is Ground and should be connected to GND. If your mainboard has System Hardware Monitor chipset on-board, you must use a specially designed fan with speed sensor to take advantage of this function.

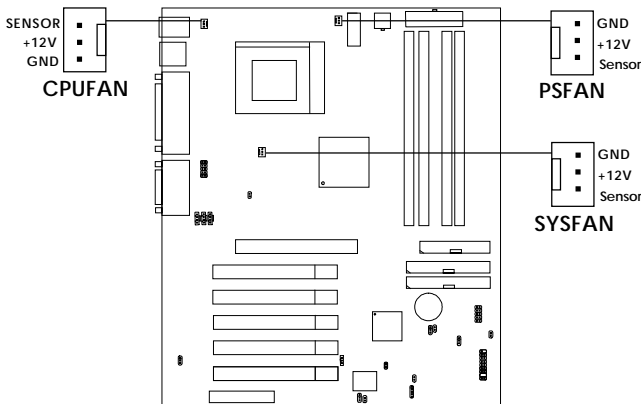



**CPUFAN:** Processor Fan  
**PSFAN:** Power Supply Fan  
**SYSFAN:** System Fan

For fans with fan speed sensor, every rotation of the fan will send out 2 pulses. System Hardware Monitor will count and report the fan rotation speed.


**Note:** Always consult vendor for proper CPU cooling fan.

## Clear CMOS Jumper: JBAT1

A battery must be used to retain the mainboard configuration in CMOS RAM. Short 1-2 pins of JBAT1 to store the CMOS data.

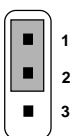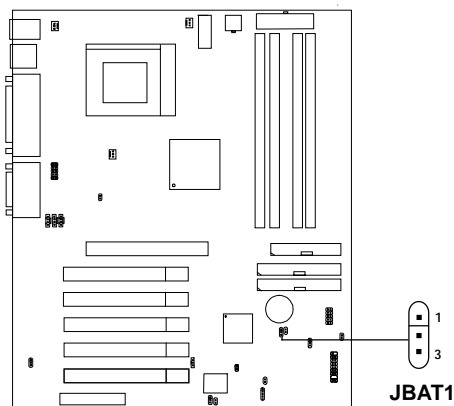

**Keep Data**

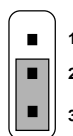


**Clear Data**

**Note:** You can clear CMOS by shorting 2-3 pin, while the system is off. Then, return to 1-2 pin position. Avoid clearing the CMOS while the system is on, it will damage the mainboard. Always unplug the power cord from the wall socket.

# Memory Installation

- **Memory Bank Configuration**

The mainboard supports a maximum memory size of 2G. It provides four 168-pin RIMMs sockets. It supports 64 MB to 512 Mbytes RIMM memory module.

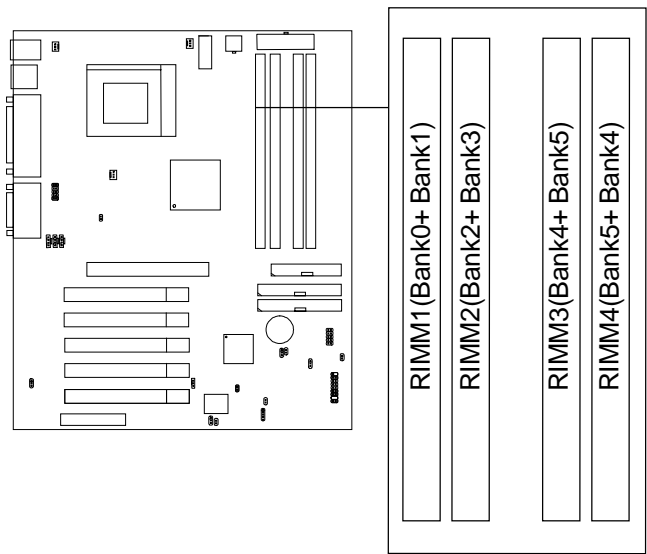


- **Memory Installation Procedures**

- A. How to install a RIMM Module**



1. The RIMM slot has 2 Notch Keys, so the RIMM memory module can only fit in one direction.
2. Insert the RIMM memory module vertically into the RIMM slot. Then push it in.

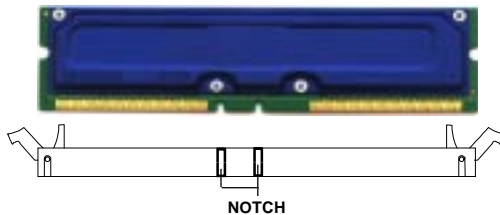

3. The plastic clip at the side of the RIMM slot will automatically close.

- **Memory Population Rules**


1. Support only RIMM.
2. To operate properly, at least two 168-pin RIMM module must be installed.



3. Support FSB 100MHz; 400MHz RIMM
4. Support up to 32 Direct Rambus Device.
5. Support ECC Single bit Correction and Multiple bit error detection  
(Setting in BIOS)

**Case Connector: JFP1**

The Power Switch, Reset Switch, Power LED, Speaker, HDD LED and Keylock (reserved) are all connected to the JFP1 connector block.

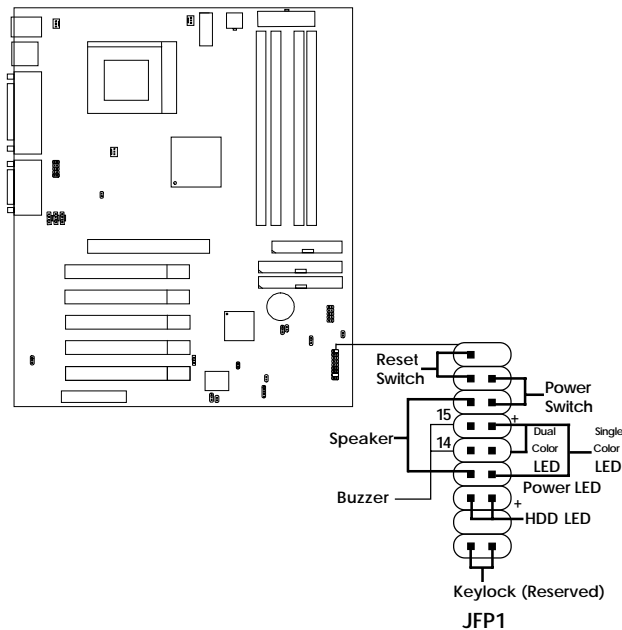



### **Power Switch**

Connect to a 2-pin push button switch. This switch has the same feature with JRMS1.

### **Reset Switch**

Reset switch is used to reboot the system rather than turning the power ON/OFF. Avoid rebooting while the HDD LED is lit. You can connect the Reset switch from the system case to this pin.

### **Power LED**

The Power LED is lit while the system power is on. Connect the Power LED from the system case to this pin. There are two types of LED that you can use: 3-pin single color LED or 2-pin dual color LED (ACPI request).

- a. 3 pin single color LED connect to pin 4, 5, & 6. This LED will lit when the system is on.
- b. 2 pin dual color LED connect to pin 5 & 6.

**GREEN** Color:            Indicate the system is in full on mode.

**ORANGE** Color:        Indicate the system is in suspend mode.

### **Speaker**

Speaker from the system case is connected to this pin.

If on-board Buzzer is available:

Short pin 14-15:    On-board Buzzer Enabled.

Open pin 14-15:    On-board Buzzer Disabled.

### **HDD LED**

HDD LED shows the activity of a hard disk drive. Avoid turning the power off while the HDD led is lit. You can connect the HDD LED from the system case to this pin.

### **Keylock (reserved)**

Keylock allows you to disable the keyboard for security purposes. You can connect the keylock to this pin.


## Floppy Disk Connector: FDD

The mainboard also provides a standard floppy disk connector FDD that supports 360K, 720K, 1.2M, 1.44M and 2.88M floppy disk types. This connector supports the provided floppy drive ribbon cables.



## Hard Disk Connectors: IDE1 & IDE2

The mainboard has a 32-bit Enhanced PCI IDE and Ultra DMA/66 Controller that provides PIO mode 0~4, Bus Master, and Ultra DMA/33/66 function. It has two HDD connectors IDE1 (primary) and IDE2 (secondary). You can connect up to four hard disk drives, CD-ROM, 120MB Floppy (reserved for future BIOS) and other devices to IDE1 and IDE2. These connectors support the provided IDE hard disk cable.

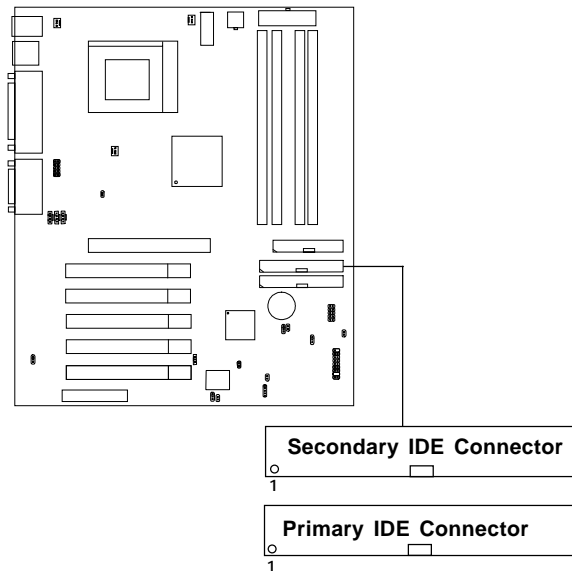

### **IDE1**(Primary IDE Connector)

The first hard drive should always be connected to IDE1. IDE1 can connect a Master and a Slave drive. You must configure second hard drive to Slave mode by setting the jumper accordingly.

### **IDE2** (Secondary IDE Connector)


IDE2 can also connect a Master and a Slave drive.

---

## Power Supply


- **ATX 20-pin Power Connector: JWR2**  
**ATX 12V Power Connector: JWR1**

These connectors support the power button on-board. Using the ATX power supply, functions such as Modem Ring Wake-Up and Soft Power Off are supported by this mainboard. These power connectors support instant power on function which means that system will boot up instantly when the power connector is inserted on the board. Refer to chapter 2-14 for pin definition.

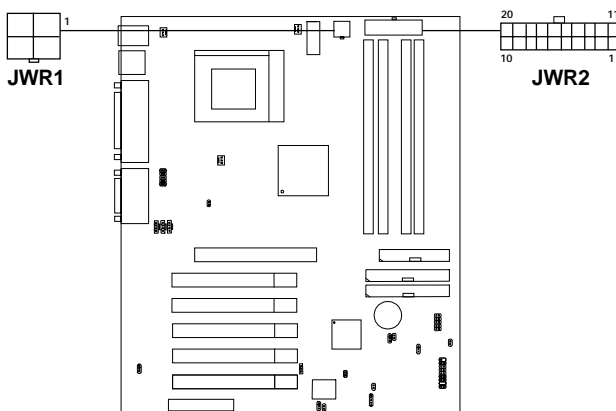


- **ATX 5V/3V Power Connector: JWR3 (optional)**

This mainboard supports an optional 5V/3V power supply connector. Refer to chapter 2-14 for pin definition.

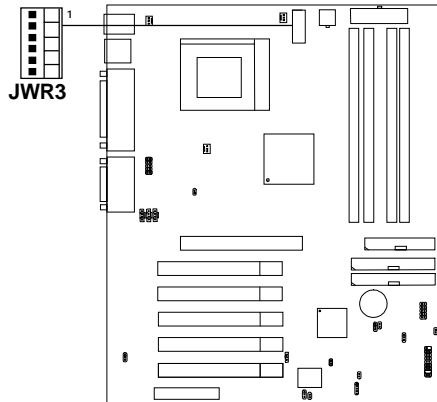

PIN DEFINITION TABLE

Pin definition for JWR2

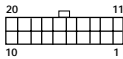

PIN	SIGNAL	PIN	SIGNAL
1	3.3V	11	3.3V
2	3.3V	12	-12V
3	GND	13	GND
4	5V	14	PS_ON
5	GND	15	GND
6	5V	16	GND
7	GND	17	GND
8	PW_OK	18	-5V
9	5V_SB	19	+5V
10	12V	20	+5V

Pin definition for JWR1



PIN	SIGNAL
1	GND
2	GND
3	12V
4	12V

Pin definition for JWR3




PIN	SIGNAL	PIN	SIGNAL
1	GND	4	3.3V
2	GND	5	3.3V
3	GND	6	5V

**Warning:** Since the mainboard has the instant power on function, make sure that all components are installed properly before inserting the power connector to ensure that no damage will be done.


- **Remote Power On/Off Switch: JRMS1**

Connect to a 2-pin push button switch. During OFF state, press once and the system turns on. **During ON stage, push once and the system goes to sleep mode: pushing it more than 4 seconds will change its status from ON to OFF.** If you want to change the setup, you could go to the BIOS Power Management Setup. This is only used for ATX type power supply.

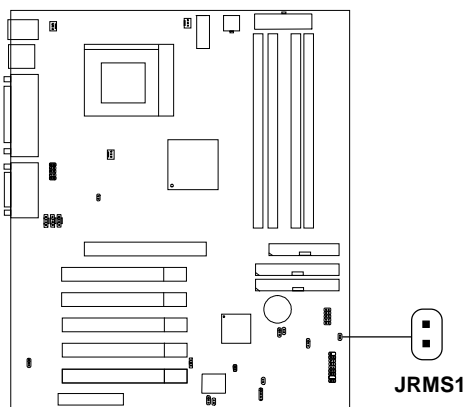

**IrDA Infrared Module Connector: J5**

The mainboard provides one infrared (IR) connector for IR modules. This connector is for optional wireless transmitting and receiving infrared module. You must configure the setting through the BIOS setup to use the IR function.

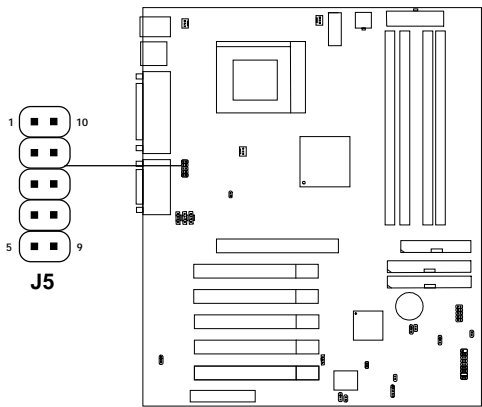


Pin	Signal	Pin	Signal
1	VCC	6	NC
2	NC	7	NC
3	IRRX	8	5VSB
4	GND	9	CIRRX
5	IRTX	10	NC



**Serial Port Connectors: COM A and COM B**

The mainboard provides two 9-pin male DIN connectors for serial port COM A & COM B. These port are 16550A high speed communication port that send/receive 16 bytes FIFOs. You can attach a mouse or a modem cable directly into this connector.

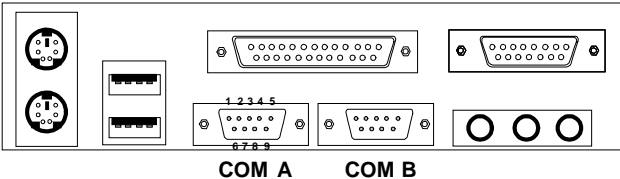

**Serial Port (9-pin Male)**

**PIN DEFINITION**


PIN	SIGNAL
1	<b>DCD</b> (Data Carry Detect)
2	<b>SIN</b> (Serial In or Receive Data)
3	<b>SOUT</b> (Serial Out or Transmit Data)
4	<b>DTR</b> (Data Terminal Ready)
5	<b>GND</b>
6	<b>DSR</b> (Data Set Ready)
7	<b>RTS</b> (Request To Send)
8	<b>CTS</b> (Clear To Send)
9	<b>RI</b> (Ring Indicate)

**Parallel Port Connector: LPT1**

The mainboard provides a 25 pin female centronic connector for LPT. A parallel port is a standard printer port that also supports Enhanced Parallel Port (EPP) and Extended capabilities Parallel Port (ECP). See connector and pin definition below:

**Parallel Port (25-pin Female)**

**LPT 1**

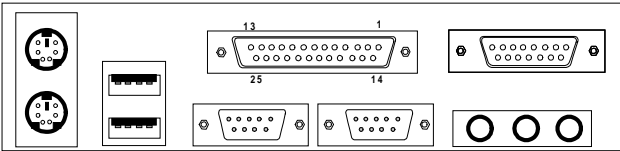


**PIN DEFINITION**

PIN	SIGNAL	PIN	SIGNAL
1	STROBE	14	AUTO FEED#
2	DATA0	15	ERR#
3	DATA1	16	INIT#
4	DATA2	17	SLIN#
5	DATA3	18	GND
6	DATA4	19	GND
7	DATA5	20	GND
8	DATA6	21	GND
9	DATA7	22	GND
10	ACK#	23	GND
11	BUSY	24	GND
12	PE	25	GND
13	SELECT		

Mouse Connector: JKBMS1


The mainboard provides a standard PS/2® mouse mini DIN connector for attaching a PS/2® mouse. You can plug a PS/2® mouse directly into this connector. The connector location and pin definition are shown below:

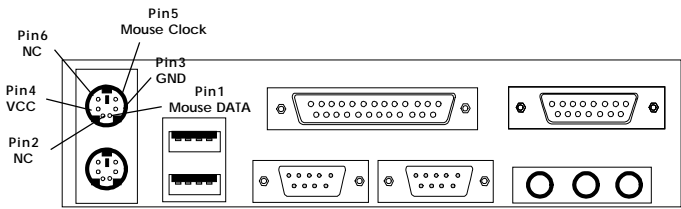

PS/2 Mouse (6-pin Female)

Keyboard Connector: JKBMS1


The mainboard provides a standard PS/2® keyboard mini DIN connector for attaching a keyboard. You can plug a keyboard cable directly to this connector.

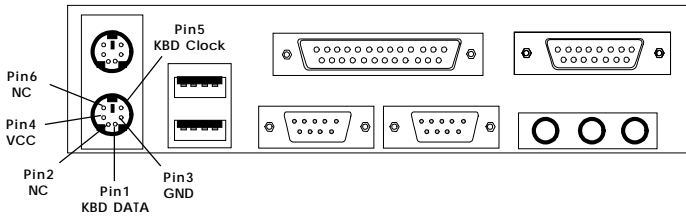

PS/2 Keyboard (6-pin Female)


Joystick/Midi Connectors

You can connect a joystick or game pad to this connector.

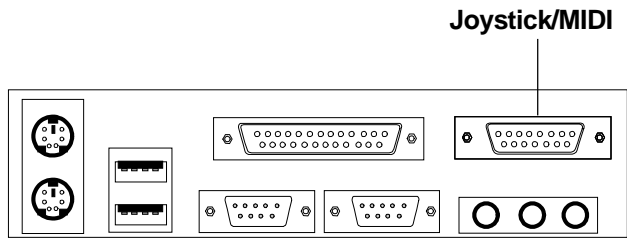

Audio Port Connectors


**Line Out** is a connector for Speakers or Headphones. **Line In** is used for external CD player, Tape player, or other audio devices. **Mic** is a connector for the microphones.

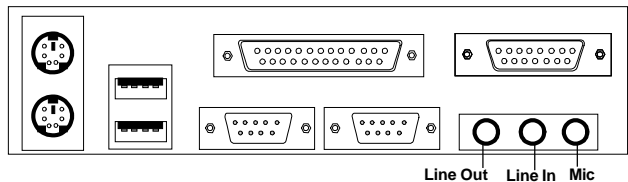

1/8" Stereo Audio Connectors

USB Connectors


The mainboard provides a **UHCI (Universal Host Controller Interface) Universal Serial Bus root** for attaching USB devices like: keyboard, mouse and other USB devices. You can plug the USB device directly to this connector.

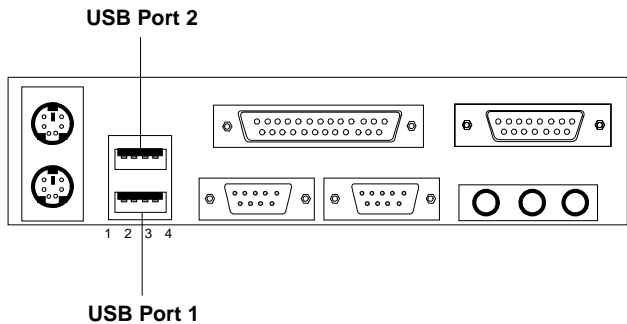

PIN	SIGNAL
1	VCC
2	-Data
3	+Data
4	GND

Wake-Up on LAN Connector: JWOL1

The JWOL1 connector is for used with LAN add-on cards that supports Wake Up on LAN function. To use this function, set the “Wake-Up on LAN” to enable at the BIOS Power Management Setup.

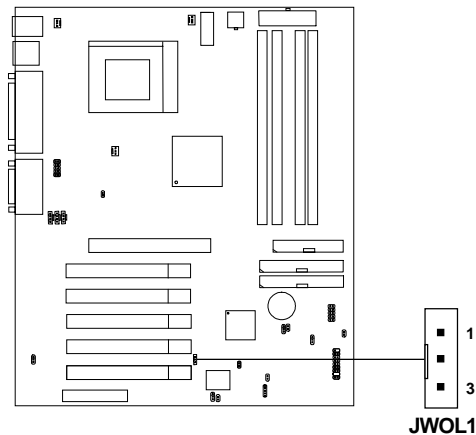


PIN	SIGNAL
1	5VSB
2	GND
3	MP_WAKEUP

**Note:** LAN wake-up signal is active “high”.

**Note:** To be able to use this function, you need a power supply that provide enough power for this feature. (Power supply with 750mA 5V Stand-by)

Modem Wake Up Connector: JMDM1

The JMDM1 connector is for used with Modem add-on card that supports the Modem Wake Up function.

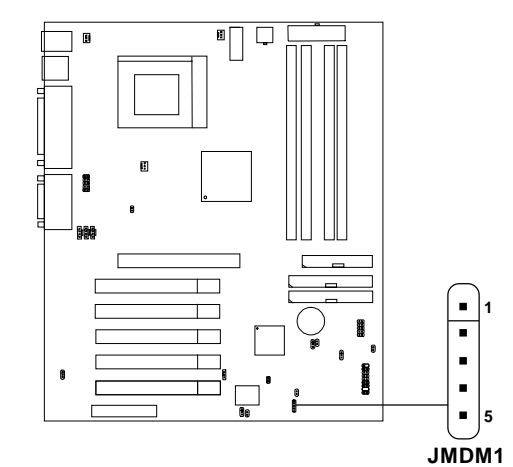


PIN	SIGNAL
1	NC
2	GND
3	MDM_WAKEUP
4	NC
5	5VSB

**Note:** Modem wake-up signal is active “low”.

**Note:** To be able to use this function, you need a power supply that provide enough power for this feature. (Power supply with 750mA 5V Stand-by)

Power Saving LED Connector: JGL1

JGL1 can be connected with two-color LED. There are two types of LED that you can use: 3-pin LED or 2-pin LED (ACPI request). When the 2-pin LED is connected to JGL1, the light will turn green, when system is On. During sleep mode, the 2-pin LED will change color from Green to Orange. For 3-pin LED, when LED is connected to JGL1, this will light when the system is On and blinks when it is in suspend/sleep mode.

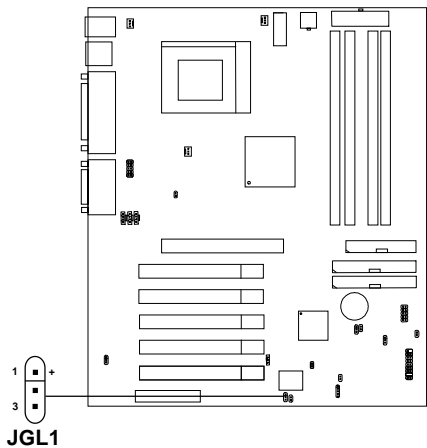


3-pin LED	2-pin LED
1-2 Single Color 1-3 Blink	1-2 Dual Color




## Power Saving Switch Connector: JGS1

Attach a power saving switch to **JGS1**. When the switch is pressed, the system immediately goes into suspend mode. Press any key and the system wakes up.

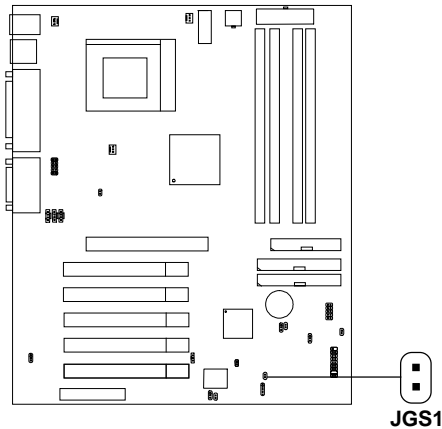


**CD-In Connector: J8**

This connector is for CD-ROM audio connector.

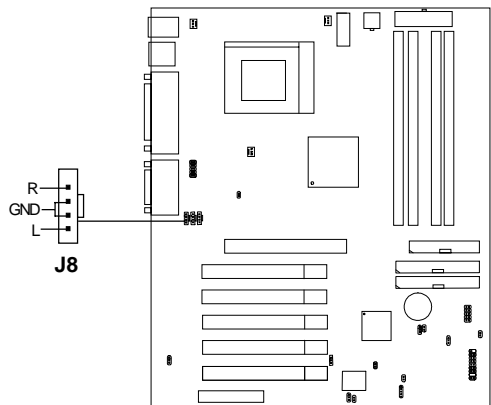


**AUX Line In Connector: J9**

This connector is used for DVD Add on Card with Line In connector.

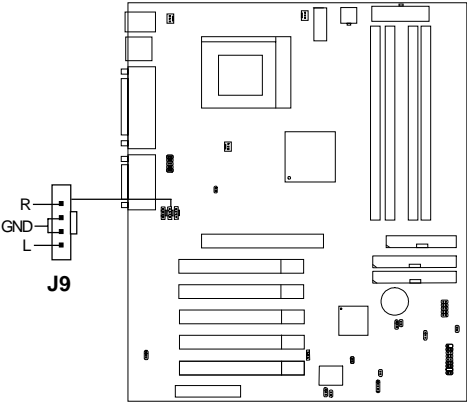

## Modem-In: J10

The connector is for Modem with internal voice connector.


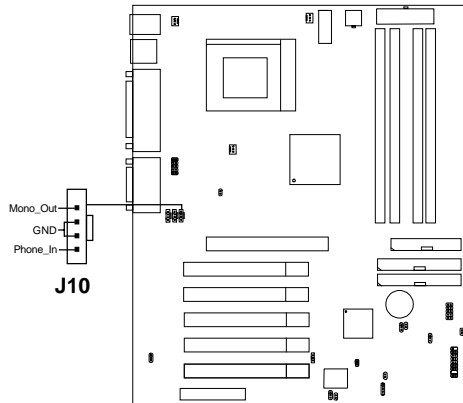


Mono\_Out is connected to the Modem Speaker Out connector.


Phone\_In is connected to the Modem Microphone In connector.

**Onboard Audio Codec: JP1**

This jumper is used to Enabled/Disabled the onboard Soft audio codec.

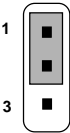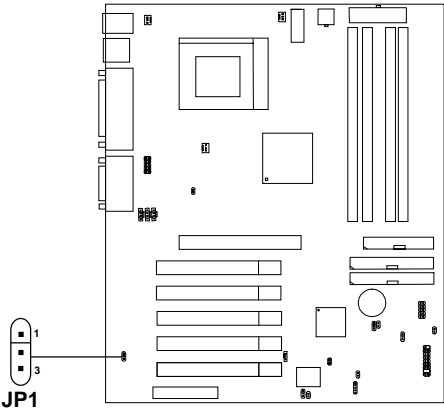


Enable Onboard  
Audio Codec

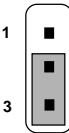

Disable Onboard  
Audio Codec


## Chassis Intrusion Switch Case: J7 & J15

These connectors are connected to 2-pin connector chassis switch. If the Chassis is open, the switch will be short. The system will record this status. To clear the warning, you must enter the BIOS setting and clear the status.

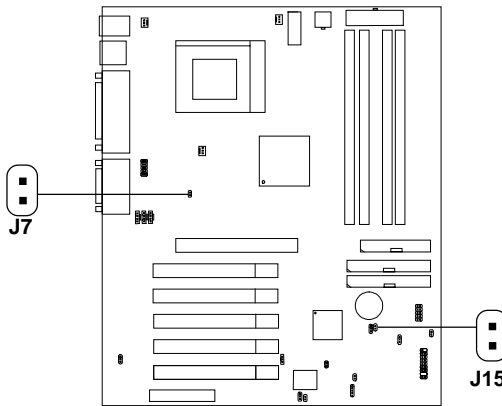

**Clear BIOS Password: J18**

This is used to clear the BIOS password. To clear the password, open pin and restart your computer.

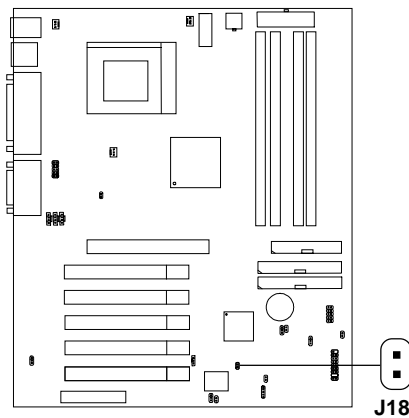


**Normal**



**Clear**

**BIOS Flash Jumper: J17**

This jumper is used to lock/unlock BIOS Flash. This jumper should be unlock when flashing/programming the BIOS.

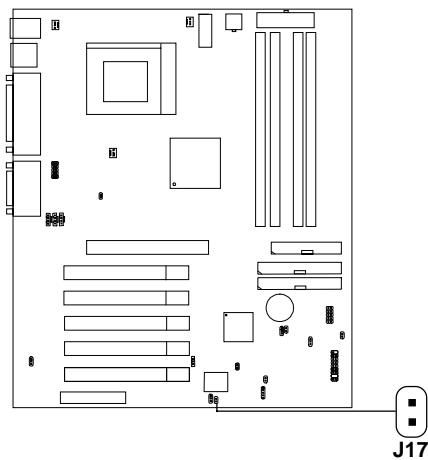

**BIOS Flash  
Locked**






**BIOS Flash  
Unlocked**




## Case Speaker to Audio Speaker Jumper: J16

This jumper will enable the case speaker/buzzer to be transferred to the Audio speaker.

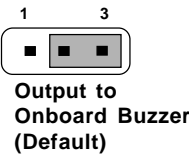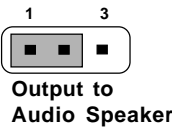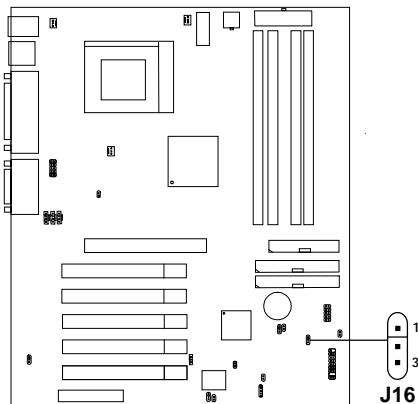

USB Front Connector: JUSB1

The mainboard provides a **front Universal Serial Bus connector**. This is an optional USB connector for Front Panel.

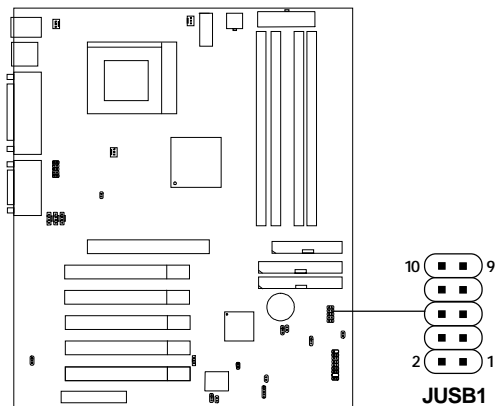

Pin	Description	Pin	Description
1	VCC	6	USBD2+
2	GND	7	GND
3	USBD3-	8	USBD2-
4	GND	9	GND
5	USBD3+	10	VCC

## CNR (Communication Network Riser)

The Communication Network Riser specification is an open industry-standard specification that defines a hardware scalable Original Equipment Manufacturer (OEM) mainboard riser board and interface, which supports modem, audio and LAN.

