

PENTIUM



P5I430HX-T2

Frontier



User Manual

PC Main Board

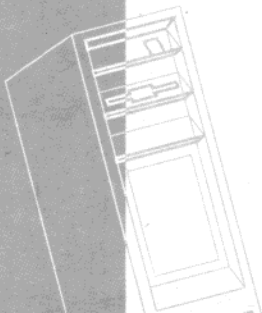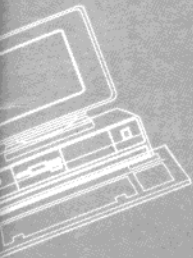

Power Connector

Keyboard Connector

PS2 Mouse


USB1 Connector

USB2 Connector

COM1/COM2/
COM3/COM4

COM2/COM3/
COM4/COM1

System Clock Selection
JP10,JP11

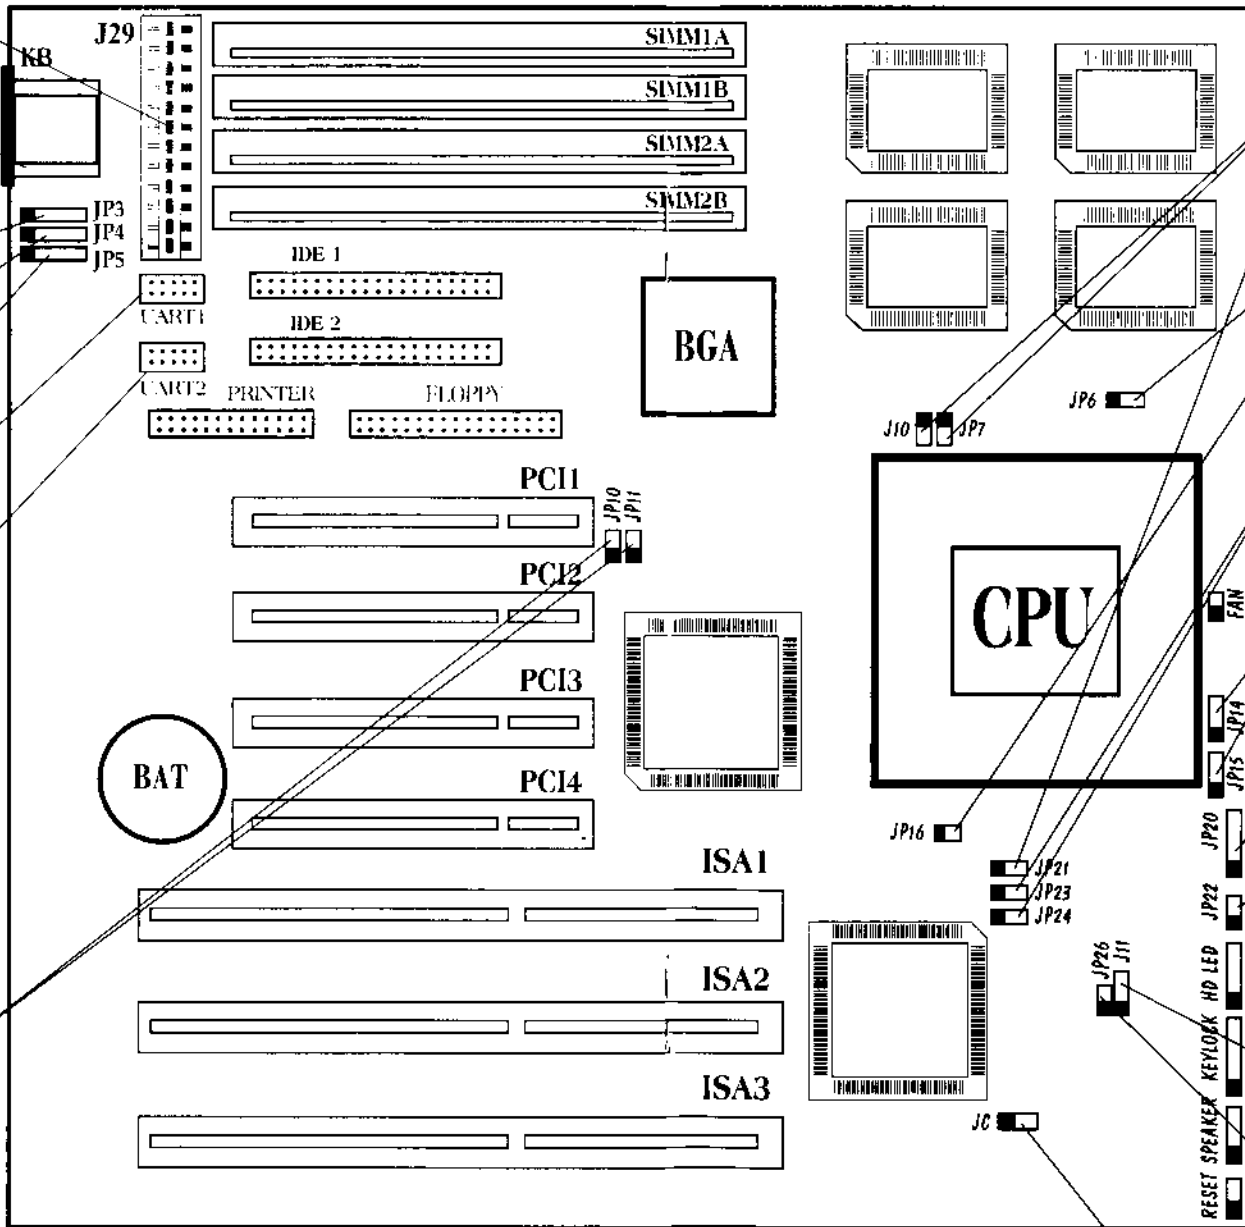

CPU Type Voltage
J10(Close), JP7(Close)
(For P54C or compatible CPU)

System Clock Selection
JP6, JP16

Reserved Jumpers
JP23 (Close 1-2),
JP24 (Close 2-3)

Clock Multiplier
Selection

IrDA Header

Headware Green

CPU Type Voltage
J11(Close 2-3)
(for P54C or compatible CPU)

CPU Voltage Jumper
JP26 (Close)
(for 3.5V CPU)

Clear CMOS
JC (Open) for normal

CONTENTS

1. Introduction	1-1
<i>Overview</i>	1-1
<i>Key Features</i>	1-1
<i>Hardware Settings</i>	1-3
2. Jumper Configuration	2-1
<i>System Clock Selection</i>	2-1
<i>Clock Multiplier Selection</i>	2-2
<i>CPU Frequency Selection</i>	2-2
<i>CPU Type & Voltage Selection</i>	2-6
<i>Clear CMOS</i>	2-6
<i>Memory Configuration</i>	2-7
3. Connector Configuration	3-1
<i>Power Connector</i>	3-1
<i>Keyboard Connector</i>	3-1
<i>Hard Disk LED</i>	3-1
<i>Keylock Connector</i>	3-2
<i>Speaker Connector</i>	3-2
<i>CPU Cooling Fan Connector</i>	3-2
<i>IrDA Header</i>	3-2
<i>PS2 Mouse</i>	3-3
<i>USB1/USB2 Connector</i>	3-3
<i>Reset Switch</i>	3-3
<i>Hardware Green</i>	3-3
<i>IO Port Description</i>	3-4

CONTENTS

4. BIOS Configuration	4-1
<i>Entering Setup</i>	4-1
<i>Standard CMOS Setup</i>	4-2
<i>BIOS Features Setup</i>	4-4
<i>Chipset Features Setup</i>	4-7
<i>Power Management Setup</i>	4-9
<i>PNP/PCI Configuration</i>	4-12
<i>Load BIOS Defaults</i>	4-13
<i>Load Setup Defaults</i>	4-13
<i>Integrated Peripherals</i>	4-14
<i>Supervisor/User Password</i>	4-16
<i>IDE HDD Auto Detection</i>	4-17
<i>Hard Disk Low Level Format Utility</i>	4-19
<i>Power-On Boot</i>	4-20
5. BIOS Upgrade Diskette	5-1

Chapter 1

Introduction

Overview

P5I430HX-T2 Frontier green main board provides a highly integrated solution for fully compatible, high performance PC/AT platforms, and supports Intel Pentium, Cyrix 6x86 and AMD K5 microprocessors. It features Write-Back Secondary Cache memory for 256KB/512KB size. Flexible main memory size can be installed from 8MB up to 128MB DRAMs, so as to give full play to the advantages of the Pentium, Cyrix 6x86 and AMD K5 CPUs. The main board offers a wide range of interface to support integrated on-board IDE and on-board I/O function.

The current Green function is divided into three phases : Doze, Standby and Suspend.

Key Features

- CPU*
 - Supports Intel Pentium 75, 90, 100, 120, 133, 150, 166, 180, 200 MHz CPUs
 - Supports P55C (MMX) and P54CTB in specification
 - Supports Cyrix 6x86 100, 110, 120, 133MHz CPUs
 - Supports AMD K5 CPUs
 - 2.5V circuit on board, ready for future P55C (MMX) support
- Chipset*
 - Intel's 82430 HX chipset
- Main memory*
 - Supports 4x72pin SIMM modules
 - 64-bit data path for flexible memory size expanded from 8MB up to 128M DRAMs on board
 - Supports Fast Page mode DRAM (High speed) and EDO DRAM
 - Optional Parity or ECC (Error Checking and Correction) function

Introduction

- | | |
|-----------------------|---|
| <i>Cache memory</i> | - Supports Write-Back Cache policy for 256KB/512KB L2 Pipelined Burst Cache |
| <i>On-board IDE</i> | - Supports PIO and Bus Master IDE
- Supports up to Mode 4 Timing
- Supports transfer rate up to 22 MByte/s
- Supports 2 Fast IDE interfaces for up to 4 IDE devices including IDE hard disks and CD ROMs |
| <i>Green function</i> | - Supports 3 Green modes: Doze, Standby and Suspend |
| <i>On-board I/O</i> | - 3 x ISA Slots and 4 x PCI Slots
- Use NS Plug & Play I/O chip PC87306
- Supports up to two 3.5" or 5.25" floppy drives 360K/720K/1.2M/1.44M/2.88M format
- All I/O ports can be enabled or disabled
- Two high speed 16550 compatible UARTs (COM1/COM2/COM3/COM4 selectable) with 16-byte send/receive FIFOs and support MIDI mode
- One parallel port at I/O address 378H/278H/3BCH with additional bi-direction I/O capability and multi-mode selection (SPP/EPP/ECP) (IEEE1284 compliant)
- Provides protection circuit to prevent damage to the parallel port when a connected printer is powered up or operated at a higher voltage
- Real-time clock and keyboard controller built-in I/O chip
- Supports PS/2 mouse (Optional)
- Supports IrDA Header
- Supports USB (Universal Serial Bus) in specification |
| <i>BIOS</i> | - Licensed advanced Award BIOS. Supports Flash ROM BIOS, Plug and Play ready. Built-in NCR810 and Adaptec 7850 SCSI drivers |
| <i>Board size</i> | - 220mm x 250mm |

Hardware Settings


There are some hardware settings on the board. They specify configuration options for various features. The settings are made using something called a 'jumper'. Jumpers on the system board provide information to your operation about installed options and system settings. A jumper is a set of two or more metal pins in a plastic base attached to the mainboard. A plastic jumper 'cap' with a metal plate inside fits over two pins to create an electrical contact between them. The contact establishes a hardware settings such as installing the CPU, selecting cache size.

Note: When you open a jumper, leave the plastic jumper cap attached to one of the pins so you don't lose it.


Jumpers and Caps



Jumper cap

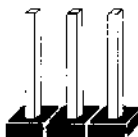

3-pin jumper



2-pin jumper

Graphic symbol

To rapidly give user a effective and direct way to set jumpers for your system, there are some diagrams used in the following chapters. All kind of jumper setting modes are simplified as the following relevant graphic symbols:



Open all pins of a jumper symbolizes as:



1



closed pin-1 and pin-2 of a jumper symbolizes as:




1


Introduction



closed pin-2 and pin-3 of a jumper
symbolizes as:



Jumper closed symbolizes as:



Jumper opened symbolizes as:




Chapter 2

Jumper Configuration

The main board offers a set of jumper settings to facilitate clock frequency adjustment. The illustration are shown below to list selected frequency.

System Clock Selection


In this P5I430HX-T2 Frontier main board, there are four selections of SC (System Clock). User have to set a group of jumpers as the following illustration to determine which SC is used.

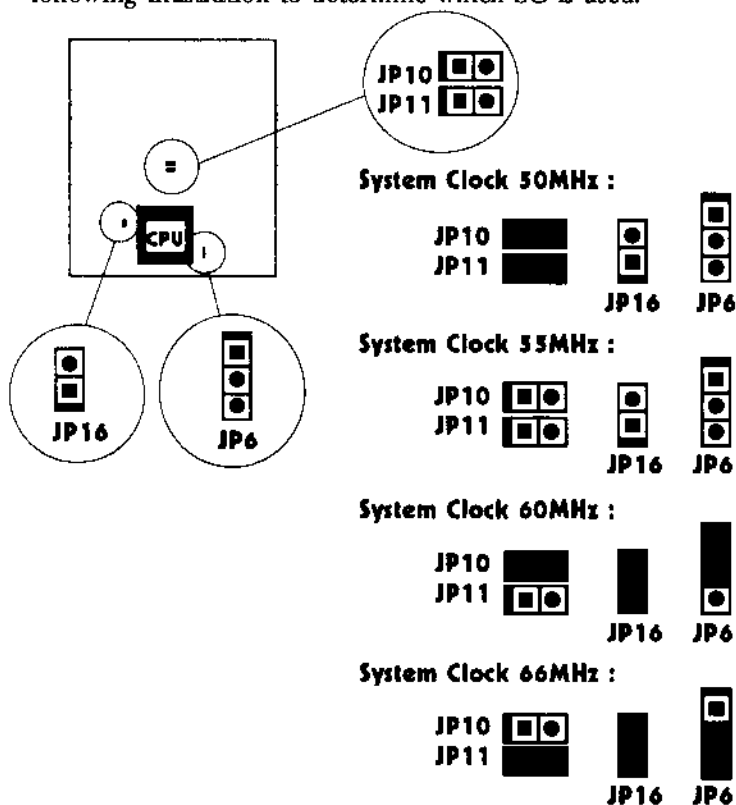

Jumper Configuration

Clock Multiplier Selection

For the Intel Pentium CPU multiple clock, settings are shown as below:

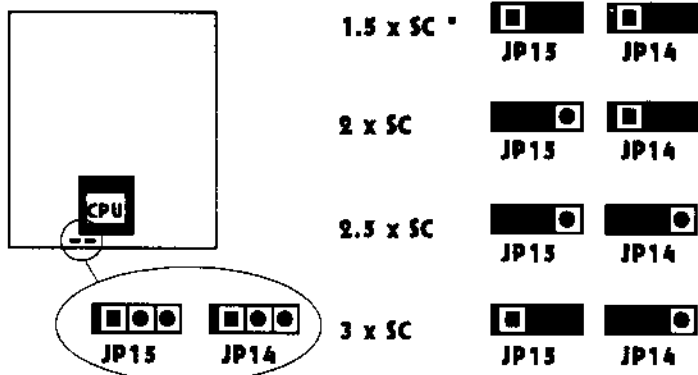

Note: SC -- System Clock.

CPU Frequency Selection

According to CPU's specification, set system clock and clock multiplier carefully. The following illustrations list almost all set of jumper settings for the major type CPUs.

For Intel Pentium 75~200MHz CPU

75 = 1.5 x 50MHz :




90 = 1.5 x 60MHz :



Note: 1. JP16 for AT bus clock: open for PCICLK/3, close for PCICLK/4.

2. "*" represent for the default jumper settings.


100=1.5 x 66MHz :

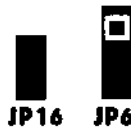

120=2 x 60MHz :



133=2 x 66MHz :

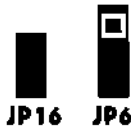

150=2.5 x 60MHz :



166=2.5 x 66MHz :



180=3 x 60MHz :




200=3 x 66MHz :




Jumper Configuration

For Cyrix 6x86 CPU :

P120+(100MHz)=2 x 50MHz :

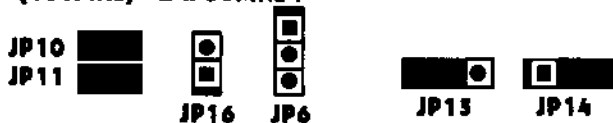

P133+(110MHz)=2 x 55MHz :

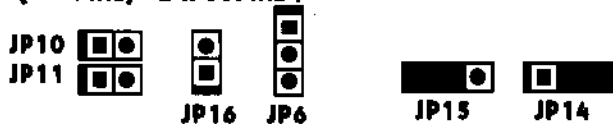

P150+(120MHz)=2 x 60MHz :




P166+(133MHz)=2 x 66MHz :




For AMD K5 CPU :

P75 (SSA/5-75)=1.5 x 50MHz :

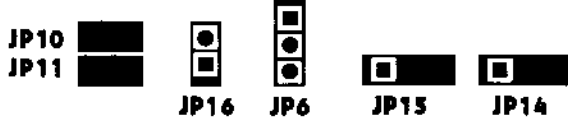


P90 (SSA/5-83)=1.5 x 55MHz :

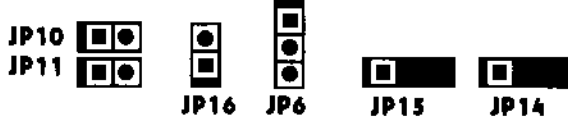

P90 (SSA/5-90)=1.5 x 60MHz :




P100 (SSA/5-100)=1.5 x 66MHz :

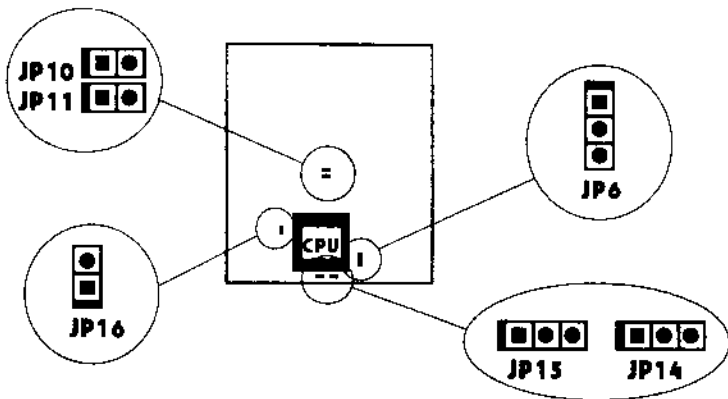

Jumper Configuration

CPU Type & Voltage Selection

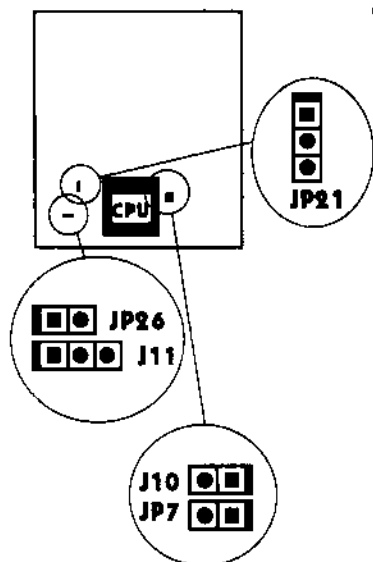

* For single voltage CPU
(P54C or compatible CPU):

* 3.5V voltage:



3.3V voltage:



For dual voltage CPU
(P55C or compatible CPU):


* 3.5 I/O voltage:



3.3 I/O voltage:




JP21 for core voltage selection:

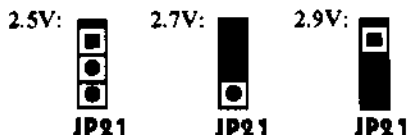

Note: For more information about CPU, please contact with your CPU vendors.

Clear CMOS

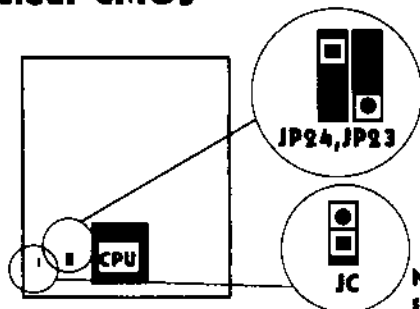

Clear CMOS :
(just close once)



* Normal :



Note: JP23 and JP24 are reserved Jumper settings shown as the left illustration.

Memory Configuration

The P51430HX-T2 Frontier main board supports single-bank 72Pin SIMMs or double-bank 72Pin SIMMs providing a flexible size from 8MB up to 128MB main memory. The DRAM SIMMs can be installed into either/both SIMM1A & 1B or/and SIMM2A & 2B. Please do not plug in two different brands of SIMMs on a bank simultaneously.

RAM SIZE	SIMM 1A	SIMM 1B	SIMM 2A	SIMM 2B
8 MB	4 MB x 1	4 MB x 1	—	—
16 MB	4 MB x 1	4 MB x 1	4 MB x 1	4 MB x 1
16 MB	8 MB x 1	8 MB x 1	—	—
24 MB	8 MB x 1	8 MB x 1	4 MB x 1	4 MB x 1
32 MB	8 MB x 1	8 MB x 1	8 MB x 1	8 MB x 1
32 MB	16 MB x 1	16 MB x 1	—	—
40 MB	16 MB x 1	16 MB x 1	4 MB x 1	4 MB x 1
48 MB	16 MB x 1	16 MB x 1	8 MB x 1	8 MB x 1
64 MB	16 MB x 1	16 MB x 1	16 MB x 1	16MB x 1
64 MB	32 MB x 1	32 MB x 1	—	—
72 MB	32 MB x 1	32 MB x 1	4 MB x 1	4 MB x 1
80 MB	32 MB x 1	32 MB x 1	8 MB x 1	8 MB x 1
96 MB	32 MB x 1	32 MB x 1	16 MB x 1	16 MB x 1
128 MB	32 MB x 1	32 MB x 1	32 MB x 1	32 MB x 1
128 MB	64 MB x 1	64 MB x 1	—	—

Note: Bank 0: SIMM 1A, SIMM 1B

Bank 1: SIMM 2A, SIMM 2B


Chapter 3

Connector Configuration

This section lists all connector pin assignments and port descriptions on the main board. The situations of the connectors and ports are illustrated in the following figures. Before inserting these connectors, please pay attention to their directions.

Power Connector (J29)

PIN NUMBER	FUNCTION
1	POWER GOOD
2	+5V
3	+12V
4	-12V
5	GND
6	GND
7	GND
8	GND
9	-5V
10	+5V
11	+5V
12	+5V

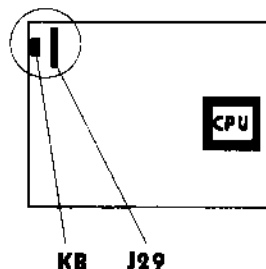

Keyboard Connector (KB)

PIN NUMBER	FUNCTION
1	CLOCK
2	DATA
3	NC
4	GND
5	+5V


Connector Configuration

Hard Disk LED (JP25)

PIN NUMBER	FUNCTION
1	VCC
2	IDEACT
3	IDEACT
4	VCC

Keylock Connector (JP27)

PIN NUMBER	FUNCTION
1	+5V
2	NC
3	GND
4	KEYLOCK
5	GND

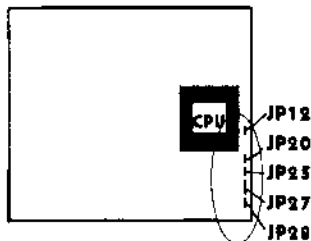

Speaker Connector (JP28)

PIN NUMBER	FUNCTION
1	SPKDATA
2	NC
3	GND
4	VCC

CPU Cooling Fan Connector (JP12)

PIN NUMBER	FUNCTION
1	GND
2	+12V

IrDA Header (JP20)

PIN NUMBER	FUNCTION
1	IRRX
2	GND
3	IRTX
4	VCC

PS2 Mouse (JP3)

PIN NUMBER	FUNCTION
1	DATA
2	CLOCK
3	GND
4	NC
5	+5V

USB1/USB2 Connector (JP4/JP5)


PIN NUMBER	FUNCTION
1	VCC
2	NC
3	DATA -
4	DATA +
5	GND

Reset Switch (JP29)

SETTING	FUNCTION
CLOSE ONCE	RESET THE SYSTEM
OPEN	NORMAL

Hardware Green (JP22)


SETTING	FUNCTION
CLOSE	HARDWARE GREEN (STOP CLOCK)
OPEN	NORMAL

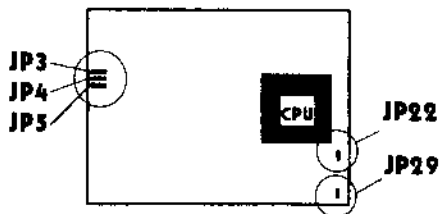

Connector Configuration

IO Port Description

CONNECTOR	FUNCTION
IDE 1	Primary IDE Port
IDE 2	Secondary IDE Port
FLOPPY	Floppy Drive Port
PRINTER	Parallel Port
UART 1	COM1/COM2/COM3/COM4
UART 2	COM2/COM3/COM4/COM1

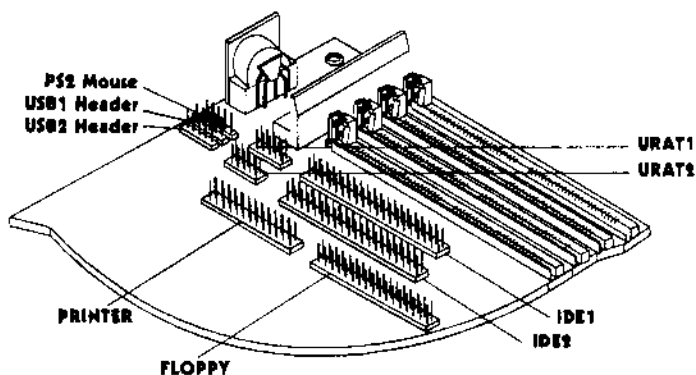

A Part of P51430HX-T2 Frontier Main Board

Chapter 4

AWARD BIOS Description

Entering Setup

Power on the computer and press immediately will allow you to enter Setup. The other way to enter Setup is to power on the computer, when the below message appears briefly at the bottom of the screen during the POST (Power On Self Test), press key or simultaneously press <Ctrl> + <Alt> + <Esc> keys.

Press to enter SETUP

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (Figure 1) will be appeared on the screen. The Main Menu allows you to select from several setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

ROM PCI/ISA BIOS (2A59FQ1C)	
CMOS SETUP UTILITY	
AWARD SOFTWARE, INC.	
STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT SETUP	IDE HDD AUTO DETECTION
PNP/PCI CONFIGURATION	HDD LOW LEVEL FORMAT
LOAD BIOS DEFAULTS	SAVE & EXIT SETUP
LOAD SETUP DEFAULTS	EXIT WITHOUT SAVING
Esc : Quit	↑↓→← : Select Item
F10 : Save & Exit Setup	(Shift) F2 : Change Color
Time, Date, Hard Disk Type...	

Figure 1 Main Menu

AWARD BIOS Description

Standard CMOS Setup

Use the arrow keys to highlight the item, then use the <PgUp> or <PgDn> keys to select the value you want in each item.

Date (mm:dd:yy) : Thu, May 14 1996							
Time (hh:mm:ss) : 00:00:00							
HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTORMODE
Primary Master	: Auto	0	0	0	0	0	AUTO
Primary Slave	: Auto	0	0	0	0	0	AUTO
Secondary Master	: Auto	0	0	0	0	0	AUTO
Secondary Slave	: Auto	0	0	0	0	0	AUTO
Drive A	: 1.44M, 3.5 in.	Base Memory : 640K					
Drive B	: None	Extended Memory : 7168K					
Video	: EGA/VGA	Other Memory : 384K					
Halt On	: All Errors	Total Memory : 8192K					
ESC: Quit		↑↓→←	: Select Item	PU / PD / + / -	: Modify		
F1 : Help		(Shift) F2	: Change Color				

Figure 2 Standard CMOS Setup Menu

Hard Disk

Primary Master/Primary Slave/Secondary Master/Secondary Slave

The categories identify the types of 2 channels that have been installed in the computer. There are 45 predefined types and 4 user definable types are used for Enhanced IDE BIOS. Type 1 to Type 45 are predefined. Type "User" is user-definable. If your hard disk drive type is not matched with drive table or listed in it, you can use Type "User" to define your own drive type manually.

If you select Type "Auto", BIOS will Auto-Detect the HDD & CD-ROM drive at the POST stage and showing the IDE for HDD & CD-ROM drive. If you select Type "User", related information is asked to be entered to the following items. Enter the information directly from the keyboard and press <Enter>:

If the controller of HDD interface is ESDI, the type shall be set to "1".
If the controller of HDD interface is SCSI, the type shall be set to "None".

CYLS	number of cylinders	HEAD	number of heads
PRECOMP	write precom	LANDZ	landing zone
SECTOR	number of sectors	MODE	HDD access mode

Video

The category selects the type of video adapter used for the primary system monitor. Although secondary monitors are supported, you do not have to select the type in Setup.

EGA/VGA	Enhanced Graphics Adapter/Video Graphic Array. For EGA, VGA, SEGA, or PGA monitor adapters.
CGA 40	Color Graphic Adapter, power up in 40 column mode.
CGA 80	Color Graphic Adapter, power up in 80 column mode.
MONO	Monochrome adapter, includes high resolution monochrome adapters.

Error Halt

The category determines whether the computer will stop if an error is detected during power up.

No errors	The system boot will not be stopped for any error that may be detected.
All errors	Whenever the BIOS detects a non-fatal error, the system will be stopped and you will be prompted.
All, But Keyboard	The system boot will not stop for a keyboard error, but it will stop for all other errors.
All, But Diskette	The system boot will not stop for a disk error; but it will stop for all other errors.
All, But Disk/Key	The system boot will not stop for a keyboard or disk error; but it will stop for all other errors.

AWARD BIOS Description

Memory

The category is display-only which is determined by POST (Power On Self Test) of the BIOS.

Base Memory	The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system.
Extended Memory	The BIOS determines how much extended memory is presented during the POST.
Other Memory	This is memory that can be used for different applications. Most use for this area is Shadow RAM.
Total Memory	The system total memory is the sum of above memory.

BIOS Features Setup

ROM PCI/ISA BIOS (2A59FQ1C) BIOS FEATURES SETUP AWARD SOFTWARE, INC.			
Virus Warning	: Disabled	Video BIOS Shadow	: Enabled
CPU Internal Cache	: Enabled	C8000~CBFFF Shadow	: Disabled
External Cache	: Enabled	CC000~CFFFF Shadow	: Disabled
Quick Power On Self Test	: Disabled	D0000~D3FFF Shadow	: Disabled
Boot Sequence	: C,A	D4000~D7FFF Shadow	: Disabled
Swap Floppy Drive	: Disabled	D8000~DBFFF Shadow	: Disabled
Boot Up Floppy Seek	: Enabled	DC000~DFFFF Shadow	: Disabled
Boot Up Numlock Status	: On	Delay For HDD (Secs)	: 0
Gate A20 Option	: Fast		
Typematic Rate Setting	: Disabled		
Typematic Rate (Chars/Sec)	: 6		
Typematic Delay (Msec)	: 250		
Security Option	: Setup		
PCI/VGA Palette Snoop	: Disabled	ESC: Quit	↑↓←→: Select Item
OS Select For DRAM>64MB	: Non-OS2	F1 : Help	PU/PD/+/- : Modify
		F5 : Old Values (Shift) F2	: Color
		F6 : Load BIOS Default	
		F7 : Load Setup Default	

Figure 3 BIOS Features Setup

This section allows you to configure your system for basic operation. You have the opportunity to select the system's default speed, boot-up sequence, keyboard operation, shadowing and security.

Item	Option	Description
<i>Virus Warning</i>	Enabled	Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector or hard disk partition table.
	Disabled	No warning message to appear when anything attempts to access the boot sector or hard disk partition table. Note: This function is available only for DOS and other OSes that do not trap INT13.
<i>CPU Internal Cache</i>	Enabled	This item speeds up memory access. However, it depends on CPU/chipset design. The default value is enabled.
	Disabled	
<i>External Cache</i>	Enabled	Enable external cache.
	Disabled	Disable external cache.
<i>Quick Power On Self Test</i>	Enabled	Enable quick POST. BIOS will shorten or skip some check items during POST to speed up POST after you power on the computer.
	Disabled	Normal POST.
<i>Boot Sequence</i>	C,A	The system will firstly search for hard disk drive then floppy disk drive.
	A,C	The system will firstly search for floppy disk drive then hard disk drive.
<i>Swap Floppy Drive</i>	Enabled	It will exchange the assignment of A&B floppy drives.
	Disabled	The assignment of A & B floppy drives are normal.
<i>Boot Up Floppy Seek</i>	Enabled	BIOS searches for floppy disk drive to determine if drive is ready for diskette read/write during booting.
	Disabled	Skip drive seeking to speed up system booting.
<i>Boot Up Numlock Status</i>	On	Keypad is used as number keys.
	Off	Keypad is used as arrow keys.
<i>Gate A20 Option</i>	Normal	The A20 signal is controlled by keyboard controller or chipset hardware.

AWARD BIOS Description

	Fast	It is default. The A20 signal is controlled by Port 92 or chipset specific method.
<i>Typematic Rate Setting</i>	Enabled	Enable typematic rate and typematic delay programming.
	Disabled	Disable typematic rate and typematic delay programming. The system BIOS will use default value of these two items.
<i>Typematic Rate (Chars/Sec)</i>	6 ~ 30	Set the speed of the typematic rate (characters per second).
<i>Typematic Delay (Msec)</i>	250~1000	Set the time of the typematic delay
<i>Security Option</i>	System	The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.
	Setup	The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt. Note: To disable security, select PASSWORD SETTING at Main Menu and then you will be asked to enter password. Do not type anything and just press <Enter>, it will disable security. Once the security is disabled, the system will boot and you can enter Setup freely.
<i>PCI/VGA Palette Snoop</i>	Enabled	Enable PCI/VGA palette snoop.
	Disabled	Disable PCI/VGA palette snoop.
<i>OS Select For DRAM>64MB</i>	Non-OS/2	If your operating system is not OS/2, please select this item.
	OS/2	If system DRAM is more than 64MB and operating system is OS/2, please select this item.
<i>Video BIOS Shadow</i>	Enabled	Video BIOS will be copied to RAM. Video Shadow will increase the video speed.
	Disabled	Video shadow is disabled.
<i>CB000~CBFFF Shadow /</i>	Enabled	Option shadow is enabled. Optional ROM will be copied to RAM by 16K byte per unit.
<i>DC000~DFFFF Shadow</i>	Disabled	The shadow function is disabled.
<i>Delay For HDD(Sees)</i>	0~15	This item allows you to set HDD detected delay time within 15 Seconds.

Chipset Features Setup

ROM PCI/ISA BIOS (2A59FQIC)		
CHIPSET FEATURES SETUP		
AWARD SOFTWARE, INC.		
Auto Configuration	: Enabled	Memory Parity/ECC Check : Auto
DRAM Timing	: 70ns	Single Bit Error Report : Enabled
DRAM RAS# Precharge Time	: 4	Chipset NA# Asserted : Enabled
DRAM R/W Leadoff Timing	: 7/6	Pipeline Cache Timing : Faster
Fast RAS# To CAS# Delay	: 3	
DRAM Read Burst (EDO/FP)	: x333/x444	
DRAM Write Burst Timing	: x333	
ISA Bus Clock	: PCICLK/4	
System BIOS Cacheable	: Enabled	
Video BIOS Cacheable	: Disabled	
8 Bit I/O Recovery Time	: 1	
16 Bit I/O Recovery Time	: 1	ESC: Quit ↑↓←→ : Select Item
Memory Hole At 15M-16M	: Disabled	F1 : Help PU/PD/+/- : Modify
Peer Concurrency	: Enabled	F5 : Old Values (Shift)F2 : Color
		F6 : Load BIOS Default
DRAM ECC/PARITY Select	: Parity	F7 : Load Setup Default

Figure 4 Chipset Features Setup

This section allows you to configure the system based on the specific features of the installed chipset. The default settings have been chosen because they provide the best operating conditions for your system. The only time you might consider making any changes would be if you discovered that data was being lost while using your system.

Item	Option	Description
<i>Auto Configuration</i>	Enabled	Enable auto configuration of DRAM timing
<i>DRAM Timing</i>	60ns 70ns	This item is of selected DRAM read/write timing. If select the smaller value, the system performance is higher than other selections, but the system stability will be come down.

AWARD BIOS Description

DRAM RAS# Precharge Time ~ ISA Bus Clock :

All these items are about DRAM Timing and show-only for user reference.

<i>System BIOS Cacheable</i>	Enabled	Besides conventional memory, the system BIOS area is also cacheable.
	Disabled	The system BIOS area is not cacheable.
<i>Video BIOS Cacheable</i>	Enabled	Besides conventional memory, video BIOS area is also cacheable.
	Disabled	Video BIOS area is not cacheable.
<i>8 Bit I/O Recovery Time</i>	1~4	It is the ISA Bus 8 bit I/O operating recovery time.
	NA	8 bit I/O recovery time is not exist.
<i>16 Bit I/O Recovery Time</i>	1~8	It is the ISA Bus 16 bit I/O operating recovery time.
	NA	16 bit I/O recovery time is not exist.
<i>Memory Hole at 15M~16M</i>	Enabled	Memory Hole at 15~16M is reserved for expanded PCI card.
	Disabled	Do not set this memory hole.
<i>Peer Concurrency</i>	Enabled, Disabled	These items enabled will accelerate operation speed of PCI bus, thus benefit to the system performance. But perhaps don't support some expanded cards.
<i>DRAM ECC/PARITY Select</i>	Parity, ECC	This item allows you to select between two methods of DRAM error checking, ECC and Parity.
<i>Memory Parity/ECC Check</i>	Auto, Disabled, Enabled	This item allows you to select between three methods of memory error checking, Auto, Enabled and Disabled.
<i>Single Bit Error Report</i>	Enabled, Disabled	When a single bit error is detected, the offending DRAM row ID is latched. The latched value is held until software explicitly clears the error status flag. You can select Enabled and Disabled.
<i>Chipset NA# Asserted</i>	Enabled, Disabled	This item allows you to select between two method of chipset NA# asserted during CPU with cycles/CPU line fills, Enabled and Disabled.
<i>Pipeline Cache Timing</i>	Faster, Fastest	This item allows you to select two timing of pipeline cache, Faster and Fastest.

Power Management Setup

ROM PCI ISA BIOS 2A59EQ1C POWER MANAGEMENT SETUP AWARD SOFTWARE, INC.		
Power Management	: Disable	** Wake up Events In Suspend **
PM Control by APM	: Yes	IRQ3 (COM2) : ON
Video Off Method	: V/H SYNC-> Blank	IRQ4 (COM1) : ON
Video Off Option	: Susp, Stby->Off	IRQ5 (LPT 2) : ON
Doze Mode	: Disabled	IRQ6 (Floppy Disk) : ON
Standby Mode	: Disabled	IRQ7 (LPT1) : ON
Suspend Mode	: Disabled	IRQ8 (RTC Alarm) : OFF
HDD Power Down	: Disabled	IRQ9 (IRQ2 Redir) : OFF
		IRQ10 (Reserved) : OFF
		IRQ11 (Reserved) : OFF
** Wake up Events In Doze & Standby **		IRQ12 (PS/2 Mouse) : ON
IRQ3 (Wake-Up Event)	: ON	IRQ13 (Coprocessor) : OFF
IRQ4 (Wake-Up Event)	: ON	IRQ14 (Hard Disk) : ON
IRQ8 (Wake-Up Event)	: ON	IRQ15 (Reserved) : ON
IRQ12 (Wake-Up Event)	: ON	ESC: Quit ↑↓→← : Select Item
		F1 : Help PU/PD/+/- : Modify
		F5 : Old Values (Shift)F2 : Color
		F6 : Load BIOS Default
		F7 : Load Setup Default

Figure 5 Power Management Setup

The Power Management Setup allows you to configure your system to most effectively save energy while operating in a manner consistent with your own style of computer use.

Item	Option	Description
<i>Power Management</i>	Disabled	Global Power Management will be disabled.
	User Define	Users can configure their own Power Management Timer.
	Min Saving	Pre-defined timer values are used such that all timers are in their MAX value.

AWARD BIOS Description

	Max Saving	Pre-defined timer values are used such that all timers are in their MIN value.
<i>PM Control by APM</i>	No	System BIOS will ignore APM when power managing the system.
	Yes	System BIOS will wait for APM's prompt before it enter any PM mode e.g. Standby or Suspend. Note: If APM is installed, and if there is a task running, even the timer is time out, the APM will not prompt the BIOS to put the system into any power saving mode. But if APM is not installed, this option has no effect.
<i>Video Off Method</i>	Blank Screen	The system BIOS will only blank off the screen when disabling video.
	V/HSYNC+Blank	In addition to Blank Screen, BIOS will also turn off the V-SYNC & H-SYNC signals from VGA cards to monitor.
	DPMS	This function is enabled for only the VGA card supporting DPM. Note: Green monitors detect the V/H-SYNC signals to turn off its electron gun.
<i>Video Off Option</i>	Always On	System BIOS will never turn off the screen.
	Suspend->Off	Screen off when system is in Suspend mode.
	Susp, Sthy->Off	Screen off when system is in Standby or Suspend mode.
	All Modes->Off	Screen off when system in Standby or Suspend mode.
<i>Doze Mode</i>	Disabled	The system will never enter Doze mode.
	1 Min ~ 1 Hr	Defines the continuous idle time before the system entering Doze mode. If any item defined in "Wake Up Events In Doze & Suspend" is On and activated, the system will be waken up.
<i>Standby Mode</i>	Disabled	The system will never enter Standby mode.

	1 Min ~ 1 Hr	Defines the continuous idle time before the system entering Standby mode. If any item defined in " <i>Wake Up Events In Doze & Standby</i> " is On and activated, the system will be waken up.
<i>Suspend Mode</i>	Disabled	The system will never enter Suspend mode.
	1 Min ~1 Hr	Defines the continuous idle time before the system entering Suspend mode. If any item defined in " <i>Wake Up Events In Suspend</i> " is On and activated, the system will be waken up.
<i>HDD Power Down</i>	Disabled	HDD's motor will not be off.
	1Min~15Min	Defines the continuous HDD idle time before the HDD entering power saving mode (motor off).
<i>IRQ3~12 (Doze & Standby)</i>	OFF	The specified event's activity will not make the system wake up from Doze & Standby mode.
	ON	The specified event's activity will make the system wake up from Doze & Standby mode.
<i>IRQ3 ~ IRQ15 (Suspend)</i>	OFF	The specified event's activity will not make the system wake up from Suspend mode.
	ON	The specified event's activity will make the system wake up from Suspend mode.

AWARD BIOS Description

PNP/PCI Configuration

ROM PCI/ISA BIOS (2A59FQ1C)			
PNP/PCI CONFIGURATION			
AWARD SOFTWARE, INC.			
Resources Controlled By	: Manual	PCI IRQ Active By	: Level
Force Update ESCD	: Disabled	PCI IDE IRQ Map To	: PCI-AUTO
		Primary IDE INT#	: A
		Secondary IDE INT#	: B
IRQ-3 assigned to	: Legacy ISA		
IRQ-4 assigned to	: Legacy ISA		
IRQ-5 assigned to	: PCI/ISA PnP		
IRQ-7 assigned to	: Legacy ISA		
IRQ-9 assigned to	: PCI/ISA PnP		
IRQ-10 assigned to	: PCI/ISA PnP		
IRQ-11 assigned to	: PCI/ISA PnP		
IRQ-12 assigned to	: PCI/ISA PnP		
IRQ-14 assigned to	: PCI/ISA PnP		
IRQ-15 assigned to	: PCI/ISA PnP		
DMA-0 assigned to	: PCI/ISA PnP		
DMA-1 assigned to	: PCI/ISA PnP		
DMA-3 assigned to	: PCI/ISA PnP	ESC: Quit	↑↓→← : Select Item
DMA-5 assigned to	: PCI/ISA PnP	F1 : Help	PU/PD/+/- : Modify
DMA-6 assigned to	: PCI/ISA PnP	F5 : Old Values (Shift)F2	: Color
DMA-7 assigned to	: PCI/ISA PnP	F6 : Load BIOS Default	
		F7 : Load Setup Default	

Figure 6 PNP/PCI Configuration Setup

This section describes the configuring of PCI bus system and covers some very technical items, so it is strongly recommended that only experienced users should make any changes to the defaults settings.

Item	Option	Description
<i>Resources Controlled By</i>	Manual	Assign system resources (IRQ and DMA) manually by user.
	Auto	Assign system resources (IRQ and DMA) automatically by BIOS.
<i>Force Updating ESCD</i>	Enabled	The system BIOS will force updating ESCD once, then set this item Disable automatically.

	Disabled	Disable force update ESCD function.
<i>IRQ-3 ~ IRQ-15 assigned to</i>	Legacy ISA	The specified IRQ-x will be assigned to ISA only.
	PCI/ISA PnP	The specified IRQ-x will be assigned to ISA or PCL.
<i>DMA-0 ~ DMA-7 assigned to</i>	Legacy ISA	The specified DMA-x will be assigned to ISA only.
	PCI/ISA PnP	The specified DMA-x will be assigned to ISA or PCL.
<i>PCI IRQ Active By</i>	Level, Edge	To tell the chipset that the IRQ signals input is level or edge trigger.
<i>PCI IDE IRQ Map To</i>	PCI-AUTO	The BIOS will scan for PCI IDE devices and determine the location of the PCI IDE device.
	PCI-SLOT 1-4	The BIOS will assign IRQ 14 for primary IDE INT# and IRQ15 for secondary IDE INT# for the specified slot.
	ISA	The BIOS will not assign any IRQs even if PCI IDE card is found. Because some IDE cards connect the IRQ 14 & 15 directly from ISA slot through a card.
<i>Primary IDE INT#</i>	A-D	To tell which INT# the PCI IDE card is used for its interrupt of 1st IDE channel.
<i>Secondary IDE INT#</i>	A-D	To tell which INT# the PCI IDE card is used for its interrupt of 2nd IDE channel.

Load BIOS Defaults

The BIOS Defaults is conventional and safe setting.

Load Setup Defaults

The Setup Defaults is common and efficient setting.

AWARD BIOS Description

Integrated Peripherals

ROM PCI/ISA BIOS (2A59EQ1C) INTEGRATED PERIPHERALS AWARD SOFTWARE, INC.		
IDE HDD Block Mode	: Enabled	
PCI Slot IDE 2nd Channel	: Disabled	
On-Chip Primary PCI IDE	: Enabled	
On-Chip Secondary PCI IDE	: Enabled	
IDE Primary Master PIO	: Auto	
IDE Primary Slave PIO	: Auto	
IDE Secondary Master PIO	: Auto	
IDE Secondary Slave PIO	: Auto	
USB Controller	: Enabled	
Onboard FDC Controller	: Enabled	
Onboard Serial Port 1	: COM1/3F8	
Onboard Serial Port 2	: COM2/2F8	
Onboard Parallel Port	: 378H/IRQ7	
Parallel Port Mode	: Compatible	
ECP Mode Use DMA	: 1	ESC: Quit ↑↓→← : Select Item
EPP Verston	: 1.7	F1 : Help PU/PD/+/- : Modify
Infrared Duplex Type	: Disabled	F5 : Old Values (Shift)F2 : Color
		F6 : Load BIOS Default
		F7 : Load Setup Default

Figure 7 Integrated Peripherals

The following pages tell you the options of each item and describe the meaning of each option.

Item	Option	Description
<i>IDE HDD Block Mode</i>	Enabled	Allow IDE HDD read/write several sectors one time.
	Disabled	IDE HDD only reads/writes a sector one time.
<i>IDE Primary/Secondary Master/Slave PIO</i>	Mode 0~4	Define the IDE primary/secondary master /slave PIO mode.

	Auto	The IDE PIO mode is defined according to auto-detect.
<i>On-chip Primary/ Secondary PCI IDE</i>	Enabled	On-chip primary/secondary PCI IDE port is enabled.
	Disabled	On-chip primary/secondary PCI IDE port is disabled.
<i>PCI Slot IDE 2nd Channel</i>	Enabled	The second IDE channel on PCI slot is enabled.
	Disabled	The second IDE channel on PCI slot is disabled.
<i>USB Controller</i>	Enabled, Disabled	This item allows you to select the USB function Enabled or Disabled.
<i>Onboard FDC Controller</i>	Enabled	Onboard floppy disk is enabled.
	Disabled	Onboard floppy disk is disabled.
<i>Onboard Serial Port 1/2</i>	COM1/3F8,	Define onboard serial port address.
	COM2/2F8, COM3/3E8, COM4/2E8	
<i>Onboard Parallel Port</i>	Disabled	Onboard serial port is disabled.
	378/IRQ5,	Define onboard parallel port address and IRQ channel.
	278/IRQ5, 3BC/IRQ7, 378/IRQ7	
<i>Parallel Port Mode</i>	Disabled	Onboard parallel port is disabled.
	Compatible, Extended, EPP, ECP	Define the parallel port mode is Standard. Parallel Port (SPP), Enhanced Parallel Port (EPP), or Extended Capabilities Port (ECP). Both Compatible mode and Extended mode are SPP mode, except that the later has a latchable buffer between I/O data pins and CPU.
<i>Infrared Duplex</i>	Disabled, Half,	Define Infrared communication mode: disabled, half-duplex, or full-duplex.
	Full	

AWARD BIOS Description

Supervisor/User Password

When you select *Supervisor/User Password* function, the following message will appear at the center of the screen to assist you in creating a password.

ENTER PASSWORD

Type the password, up to eight characters, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. The following message will confirm the password being disabled. If both Supervisor and User Password are disabled, the system will boot and you can enter CMOS Setup freely.

PASSWORD DISABLED

If you select "System" at "Security Option" of "BIOS Features Setup" Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter "CMOS Setup".

If you select "Setup" at "Security Option" of "BIOS Features Setup" Menu, you will be prompted only when you try to enter "CMOS Setup".

Supervisor Password has higher priority than *User Password*. You can use *Supervisor Password* when booting system or entering "CMOS Setup" to modify all settings. Also you can use *User Password* when booting system or entering "CMOS Setup" but can not modify any setting if *Supervisor Password* is enabled.

IDE HDD Auto Detection

The Enhance IDE features was included in all Award BIOS. Below is a brief description of this features.

```

ROM PCI ISA BIOS 2A59EQIC
CMOS SETUP UTILITY
AWARD SOFTWARE, INC.
  
```

HARD DISKS TYPE SIZE CYLS HEAD PRECOMP LANDZ SECTOR MODE

Primary Master:

Select Primary Master Option (N = Skip) : N

OPTIONS	SIZE	CYLS	HEADS	PRECOMP	LANDZONE	SECTORS	MODE
1(Y)	516	1120	16	65535	1119	59	NORMAL
2	516	524	32	0	1119	63	LBA
3	516	560	32	65536	1119	59	LARGE

Note: Some OSeS (like SCO-UNIX) must use "NORMAL" for Installation

Figure 8 IDE HDD Auto Detection

1. Setup Changes

With auto-detection

- BIOS setup will display all possible modes that is supported by the HDD including NORMAL, LBA & LARGE.
- If HDD does not support LBA modes, no "LBA" option will be shown.
- If number of cylinders is less than or equal to 1024, no "LARGE" option will be shown.
- Users can select a mode which is appropriate for them.

With Standard CMOS Setup

	CYLS	HEADS	PRECOMP	LAND ZONE	SECTOR	MODE
Drive C : User(516MB)	1120	16	65535	1119	59	NORMAL
Drive D : None(203MB)	684	16	65535	685	38	-----

When HDD type is in "user" type, the "MODE" option will be opened for user to select their own HDD mode.

AWARD BIOS Description

2. HDD Modes

The Award BIOS supports 3 HDD modes NORMAL, LBA & LARGE and Auto detect.

NORMAL

Generic access mode in which neither the BIOS nor the IDE controller will make any transformation during accessing. The maximum number of cylinder, head and sectors for NORMAL mode are 1024, 16 and 63.

If user set his HDD to NORMAL mode, the maximum accessible HDD size will be 528 Megabytes even though its physical size may be greater than that.

LBA (Logical Block Addressing) mode

A new HDD accessing method to overcome the 528 Megabyte bottleneck. The number of cylinders, head and sectors shown in setup may not be the number physically contained in the HDD.

During HDD accessing, the IDE controller will transform the logical address described by sector, head and cylinder number into its own physical address inside the HDD. The maximum HDD size supported by LBA mode is 8.4 Gigabytes.

LARGE mode

Some IDE HDDs contain more than 1024 cylinder without LBA support (in some cases, user do not wait LBA). The Award BIOS provides another alternative to support these kinds of HDD.

BIOS tricks DOS (or other OS) that the number of cylinders is less than 1024 by dividing it by 2. At the same time, the number of heads is multiplied by 2. A reverse transformation process will be made inside INT13h in order to access the right HDD address.

Auto detect

If using Auto detect, the BIOS will auto detect IDE hard disk mode and set it to one kind of HDD modes.

3. Remark

To support LBA or LARGE mode of HDDs, there must be some software involved. All these software are located in the Award HDD Service Routine (INT 13h). It may be failed to access a HDD with LBA (LARGE) mode selected if you are running under a Operating System which replaces the whole INT 13h.

Hard Disk Low Level Format Utility

This Award Low-Level-Format Utility is designed as a tool to save your time formatting your disk. The Utility automatically looks for the necessary information of the drive you selected. Utility also searches for bad tracks and list them for your reference.

Shown below is the Main Menu after you enter into the Award Low-Level-Format Utility.

Hard Disk Low-Level-Format Utility	NO. CYLS HEAD																																								
SELECT DRIVE BAD TRACK LIST PREFORMAT																																									
Current select drive is : C																																									
DRIVE : C CYLINDER : 0 HEAD : 0																																									
<table border="1"> <thead> <tr> <th></th> <th>SIZE</th> <th>CYL</th> <th>HEAD</th> <th>PRECOMP</th> <th>LANDZ</th> <th>SECTORS</th> <th>MODE</th> </tr> </thead> <tbody> <tr> <td>Primary Master</td> <td>: 40MB</td> <td>977</td> <td>5</td> <td>300</td> <td>977</td> <td>17</td> <td>NORMAL</td> </tr> <tr> <td>Primary Slave</td> <td>: None</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>AUTO</td> </tr> <tr> <td>Secondary Master</td> <td>: None</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>AUTO</td> </tr> <tr> <td>Secondary Slave</td> <td>: None</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>AUTO</td> </tr> </tbody> </table>		SIZE	CYL	HEAD	PRECOMP	LANDZ	SECTORS	MODE	Primary Master	: 40MB	977	5	300	977	17	NORMAL	Primary Slave	: None	0	0	0	0	0	AUTO	Secondary Master	: None	0	0	0	0	0	AUTO	Secondary Slave	: None	0	0	0	0	0	AUTO	
	SIZE	CYL	HEAD	PRECOMP	LANDZ	SECTORS	MODE																																		
Primary Master	: 40MB	977	5	300	977	17	NORMAL																																		
Primary Slave	: None	0	0	0	0	0	AUTO																																		
Secondary Master	: None	0	0	0	0	0	AUTO																																		
Secondary Slave	: None	0	0	0	0	0	AUTO																																		
Up/Down - Select item	Enter - Accept ESC - Exit/Abort																																								
Copyright (c) Award Software, Inc. 1992-1994 All Rights Reserved																																									

Figure 9 Hard Disk Low Level Format Utility

SELECT DRIVE

Select from installed hard disk drive C or D. List at the bottom of the screen is the drive automatically detected by the utility.

AWARD BIOS Description

BAD TRACK LIST

Auto scan bad track

The utility will automatically scan bad tracks and list the bad tracks in the window at the right side of the screen.

Add bad track

Directly type in the information of the known bad tracks in the window at the right side of the screen.

Modify bad track

Modify the information of the added bad tracks in the window at the right side of the screen.

Delete bad track

Delete the added bad tracks in the window at the right side of the screen.

Clear bad track table

Clear the whole bad track list in the window at the right side of the screen.

PREFORMAT

Interleave

Select the interleave number of the hard disk drive you wish to perform low level format. You must select from 1 to 8. Check the documentation that came with the drive for the correct interleave number, or select 0 for utility automatic detection.

Auto scan bad track

This allows the utility to scan bad track or not.

Start

Press <Y> to start low level format.

Power-On Boot

After you have made all the changes to CMOS values and the system cannot boot with the CMOS values selected in Setup, restart the system by turning it OFF then ON or pressing the "RESET" button on the system case.

You may also restart by simultaneously press <Ctrl>, <Alt>, and <Delete> keys.



P/N: 430-01008-711
Manual P51430HX-T2 Frontier Ver 1.1